


DML-1200

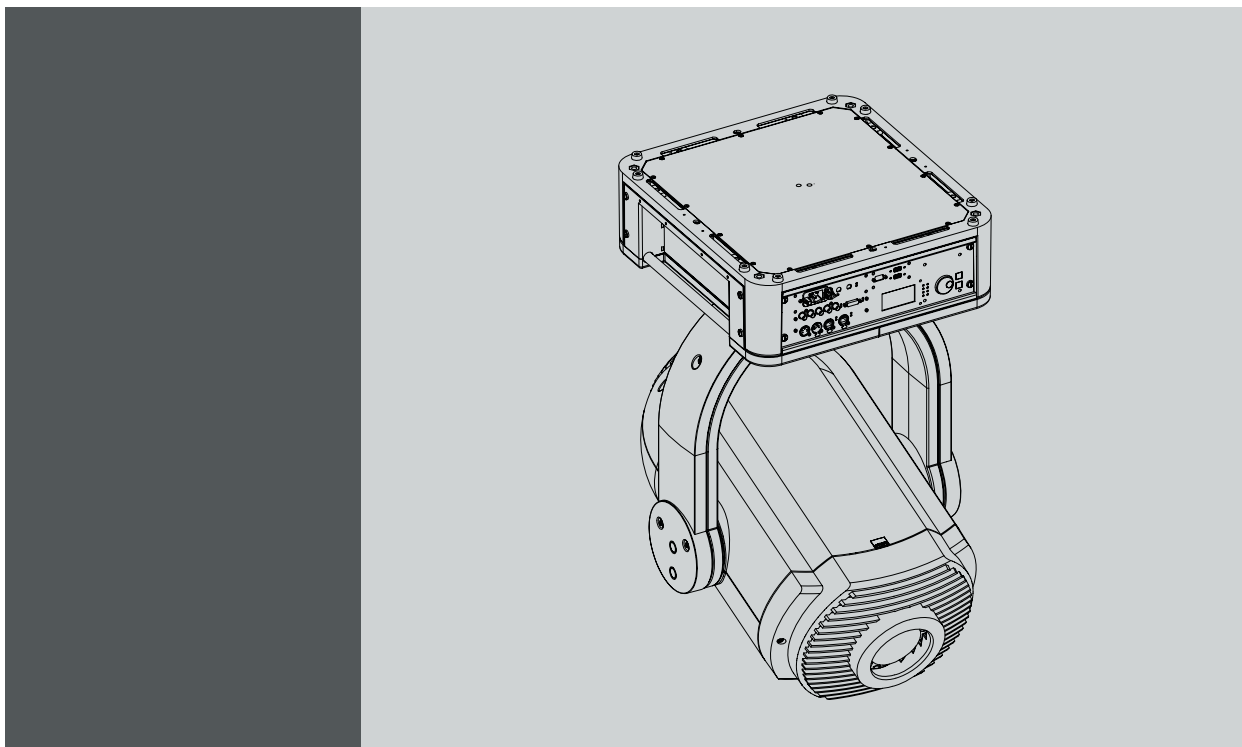

User guide

R9050120

Barco nv Media & Entertainment Division

Noordlaan 5, B-8520 Kuurne

Phone: +32 56.36.89.70

Fax: +32 56.36.883.86

E-mail: sales.events@barco.com

Visit us at the web: www.barco.com

Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

Federal Communications Commission (FCC Statement)

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference at his own expense

EN55022/CISPR22 Class A ITE (Information Technology Equipment)

Class A ITE is a category of all other ITE which satisfies the class A ITE limits but not the class B ITE limits. Such equipment should not be restricted in its sale but the following warning shall be included in the instructions for use:

Warning : This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Disposal Information

This equipment has required the extraction and use of natural resources for its production. It may contain hazardous substances for health and environment. In order to avoid the dissemination of those substances in the environment and to diminish the pressure on natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end of life equipment in a sound way.



The crossed-out wheeled bin symbol invites you to use those systems. If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administrator. You can also contact us for more information on the environmental performances of our products.

Software License Agreement

You should carefully read the following terms and conditions before using this software. Your use of this software indicates your acceptance of this license agreement and warranty.

Terms and Conditions:

1. No redistribution of the software is allowed.
2. Reverse-Engineering. You may not reverse engineer, decompile, disassemble or alter anyhow this software product.

Disclaimer of Warranty:

This software and the accompanying files are sold "as is" and without warranties as to performance or merchantability or any other warranties whether expressed or implied. In no event shall Barco be liable for damage of any kind, loss of data, loss of profits, business interruption or other pecuniary loss arising directly or indirectly. Any liability of the seller will be exclusively limited to replacement of the product or refund of purchase price.

GNU-GPL code

If you would like a copy of the GPL source code contained in this product shipped to you on CD, please contact Barco. The cost of preparing and mailing a CD will be charged.

TABLE OF CONTENTS

1. Safety	3
1.1 General	3
1.2 Important safety instructions	3
1.3 Important warnings concerning DML flight cases	6
1.4 Recycling guidelines	6
2. General	9
2.1 Installation requirements	9
2.2 Unpacking the device	9
2.3 Projector air inlets and outlets	12
3. Physical installation	13
3.1 Pan and tilt locking	13
3.2 Mounting the DML-1200 upright	15
3.3 Truss mounting of the DML-1200	15
4. Connections	19
4.1 Power connection	19
4.2 Input connections	20
4.3 Communication connections	21
4.4 Linking DML-1200's	24
5. Start up of the Adjustment mode	27
5.1 About the adjustment mode	27
5.2 Start up of the adjustment mode	27
5.3 Navigation and adjustments	27
6. Input menu	29
6.1 Input selection	29
6.2 Auto Image Alignment	29
6.3 Reset to factory presets	30
6.4 Image load mode	30
6.5 Aspect ratio	31
6.6 No input signal	32
6.7 No source selected	32
7. Lamp menu	35
7.1 Overview flow	35
7.2 Identification	35
7.3 Status and run time overview lamps	36
7.4 High altitude mode	36
7.5 Lamp mode	37
7.6 Lamp power	38
8. Control menu	39
8.1 Overview flow	39
8.2 Startup	40
8.3 Standby	40
8.4 Demo mode	41
8.5 DMX data	42
8.6 DMX address	42
8.7 DMX universe	43
8.8 Media player on - off	43
8.9 LCD contrast	44
8.10 Pan and Tilt encoder	44
8.11 Network	45
8.12 Auto shutdown	45
8.13 Status LEDs	46
8.14 DMX priority	47
9. Service menu	49
9.1 Overview flow	49
9.2 Identification	49
9.3 Diagnosis	50
9.3.1 Version table	50
9.3.2 Voltages	51
9.3.3 Temperatures	51
9.3.4 Fan speeds	52
9.3.5 Device status	53
9.3.6 Error logging	53
9.4 Service patterns	54
9.5 Calibration	55
9.5.1 Index delay	55

9.5.2	Aperture calibration	56
9.5.3	Device calibration	57
10.	Moving light control via DMX	59
10.1	Pan - Tilt	59
10.2	Intensity	59
10.3	Optical zoom - focus	59
10.4	Shutter - Strobe	59
10.5	Cyan - Magenta - Yellow	60
10.6	CTO (Color temperature origin)	60
10.7	Mode selection	60
10.8	Iris	61
10.9	Control channel	61
11.	Image control via DMX	63
11.1	Introduction	63
11.2	Source selection	63
11.3	Brightness - Contrast - Saturation	63
11.4	Orientation	63
11.5	Blanking	64
11.6	Soft edge	65
11.7	Warping	65
12.	Maintenance	67
12.1	Cleaning the lens	67
12.2	Cleaning the exterior of the DML-1200	67
12.3	Level check of cooling liquid	67
12.4	Safety cable check	69
13.	Servicing	73
13.1	Removal of the front cover	73
13.2	Opening the top cover on the lamp units side	74
13.3	Opening the top cover on the LPS box side	76
13.4	Remove the yoke covers and shields	77
13.5	Remove top cover of base unit	79
13.6	Replacement of the dust filters on the front side	80
13.7	Replacement of the dust filter at the inside of the head	81
13.8	Replacement of the dust filter in the base	82
13.9	Removal of a lamp unit	83
13.10	Mounting a new lamp unit	85
13.11	Top-up the reservoir with cooling liquid	86
A.	DMX chart	91
A.1	DMX chart, Digital moving luminiere	91
A.2	DMX chart, Image	92
B.	Dimensions	95
B.1	Dimensions of the DML-1200	95
B.2	Dimensions flight case	96
C.	Troubleshooting	97
C.1	Error list	97
D.	Specifications	101
D.1	Specifications of the DML-1200	101
E.	Order info	103
E.1	Spare part order info	103
	Glossary	105
	Index	107

1. SAFETY

1.1 General

Personal protection

Take care of the following warnings and cautions:



WARNING: Ensure you understand and follow all the safety guidelines, safety instructions, warnings and cautions mentioned in this manual.



WARNING: Be aware of suspended loads.



WARNING: Wear a hard hat to reduce the risk of personal injury.



WARNING: Be careful while working with heavy loads.



WARNING: Mind your fingers while working with heavy loads.



CAUTION: High pressure lamp may explode if improperly handled.

1.2 Important safety instructions

To prevent the risk of electrical shock

- This product should be operated from a mono phase AC power source. Power input voltage range must be between 200-240 V, 10A 50-60Hz
- **Warning:** This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable. Mount a plug to the delivered power cord but take care of the local regulations about power cords and power plugs. Do not defeat the purpose of the grounding-type plug.
- Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- Use only the power cord supplied with your device. While appearing to be similar, other power cords have not been safety tested at the factory and may not be used to power the device. For a replacement power cord, contact your dealer.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
- Never spill liquid of any kind on the product. Should any liquid or solid object fall into the cabinet, unplug the set and have it checked by qualified service personnel before resuming operations.
- Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the device due to lightning and AC power-line surges.
- Do not guide the power cord over the base unit of the device. Ensure that the power cord cannot make contact with moving head.

To prevent personal injury

- When power is supplied to the device, the device starts a homing procedure which includes a movement of the head.
- When opening one of the shell covers of the projector head while power is supplied to the device, the movement of the head (pan and tilt) is blocked by the software.
- To reduce the lamp heat of the projector head, switch the device first to standby and let the projector lamp cool down for at least 5 minutes. Then the device may be disconnected from the power outlet.
- Isolated electrically before re-lamping. Caution : hot lamps.
- The customer should never attempt to disassemble the lamp casing. See "Recycling guidelines", page 6 for more information about handling a used lamp.
- To prevent injury and physical damage, always read this manual and all labels on the system before inserting the lamp casing, connecting to the wall outlet or adjusting the projector.
- To prevent injury, take note of the weight of the projector. Minimum 2 persons are needed to lift up the device. No twist is allowed. When lifting out of the flight case, a 3rd person has to push away the flight case while the first 2 are lifting up the device.
- To prevent injury, ensure that the lens and all cover plates are correctly installed. See installation procedures.
- Warning: high intensity light beam. NEVER look into the lens ! High luminance could result in injury to the eye.
- Before attempting to remove any of the device's covers, you must disconnect from the wall outlet.
- When performing setup work to a ceiling mounted device, to prevent injury caused by falling objects or the system, set out a keep out area.
- Consult a professional structural engineer prior to suspending the device from a structure not intended for that use. Always ensure that the working load limit of the structure can handle the load of the device.
- The power input at the base of the device is considered as the disconnect device. When required to switch off the device, to access parts inside, always disconnect the power cord at the base of the device. In case the power input at the base of the device is not accessible (e.g. ceiling mount), the socket outlet supplying the device shall be installed nearby the device and be easily accessible, or a readily accessible general disconnect device shall be incorporated in the fixed wiring.
- Do not place this equipment on an unstable cart, stand, or table. The product may fall, causing serious damage to it and possible injury to the user.
- When mounting the device to the ceiling or to a rigging system, always mount the delivered security cables and connectors. Before mounting the security cable, inspect the cable and connector. Do not use when visible damage is detected. Stretch the security cable completely. If necessary, turn the security cable a few times around the truss before closing the connection so that the cable is stretched as much as possible. Connector may not be mounted under bending stress.
- It is hazardous to operate without lens or shield. Shields, lenses or ultra-violet screens shall be changed if they have become visible damaged to such an extent that their effectiveness is impaired. For example by cracks or deep scratches.
- **Mercury Vapor Warnings:** Keep the following warnings in mind when using the projector. The lamp used in the projector contains mercury. In case of a lamp rupture, explosion there will be a mercury vapor emission. In order to minimize the potential risk of inhaling mercury vapors:
 - Ensure the projector is installed only in ventilated rooms.
 - Replace the lamp module before the end of its operational life.
 - Promptly ventilate the room after a lamp rupture, explosion has occurred, evacuate the room (particularly in case of a pregnant woman).
 - Seek medical attention if unusual health conditions occur after a lamp rupture, explosion, such as headache, fatigue, shortness of breath, chest-tightening coughing or nausea.
- **Cooling liquid circuit.** The device head contains a cooling circuit filled with Blue antifreeze diluted 1,2 ethanediol (1/3 ethanediol – 2/3 Demi water).
When the cooling circuit leaks, switch off the device and contact a service technician.
The liquid is not for household use. Keep out of reach of children. Harmful by oral intake. Avoid exposure to pregnant women. Avoid contact with eyes, skin and clothing. Avoid inhale of the noxious fumes.
- **Restricted Access Location** The DML must be installed in a Restricted Access Location, where access can only be gained by persons who have been instructed about the reasons for the restriction applied to the location and about the precautions that shall be taken.
Reasons for the applied restrictions: moving head in all directions, air outlet can reach high temperatures and light output may cause eye injury when looking directly into the lens.



- Maximum temperature of enclosure : 90°C (194 °F)


 
To prevent device damage

- The DML has been designed for use with a specific lamp type. See installation instructions for its correct lamp type.
- If the air filters are not regularly replaced, the air flow inside the device (projector head and base) could be disrupted, causing overheating. Overheating may lead to the device shutting down during operation.
- In order to ensure that correct airflow is maintained, and that the device complies with electromagnetic compatibility (EMC) requirements, and for safety requirements, it should always be operated with all of its covers in place.
- Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. The device should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- The device must always be mounted in a manner which ensures free flow of air into its air inlets and unimpeded evacuation of the hot air exhausted from its cooling system. Heat sensitive materials should not be placed in the path of the exhausted air. Leave at least a free safety area of 2 meter (80") around the projector head.
- Ensure that nothing can be spilled on, or dropped inside the device. If this does happen, switch off and unplug the mains supply immediately. Do not operate the device again until it has been checked by qualified service technicians.
- Consult a professional structural engineer when you have the intention to use this device as ceiling mounted device. Always ensure the working load limit of the structure supporting the device.
- Do not mount the DML on a wall. Use it always in a ceiling mount or floor mount installation. When mounting on a chariot with wheels, always use wheels with brakes.
- Moving head. Make sure the head cannot touch any other materials.
- Do not use this equipment near water.
- **Special Care for Laser Beams:** Special care should be used when DLP projectors are used in the same room as high power laser equipment. Direct or indirect hitting of a laser beam on to the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Never place a DML in direct sun light. Sun light on the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Save the original packing material; they will come in handy if you ever have to ship your equipment. For maximum protection, repack your set as it was originally packed at the factory.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Never use strong solvents, such as thinner or benzene, or abrasive cleaners, since these will damage the cabinet. Stubborn stains may be removed with a cloth lightly dampened with mild detergent solution.
- To ensure the highest optical performance and resolution, the projection lenses are specially treated with an anti-reflective coating, therefore, avoid touching the lens. To remove dust on the lens, use a soft dry cloth. Do not use a damp cloth, detergent solution, or thinner.
- Never use the device when not all four lamps are installed.
- Rated maximum ambient temperature, $t_a = 40\text{ }^{\circ}\text{C}$ (104°F)..
- The lamps shall be replaced if they have become damaged or thermally deformed.

To prevent battery explosion

- Danger of explosion if battery is incorrectly installed.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instruction.

To prevent fire hazard

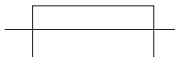-  Internal fuses provided. Contact a service technician to replace. Only replace with the same type and value.
- Warning "Risk of fire". Do not place flammable or combustible materials near the device !
This device radiates heat on its external surfaces and from ventilation ducts during normal operation, which is both normal and safe. Exposing flammable or combustible materials into close proximity of this projector could result in the spontaneous ignition of that material, resulting in a fire. For this reason, it is absolutely necessary to leave an "exclusion zone" around all external surfaces of the projector whereby no flammable or combustible materials are present.
-  (Only in light mode) Do not illuminate objects within 2 meter (6.6 feet). Objects within this range can scorch, melt or ignite from the heat projected by the light beam. Leave at least a free safety area of 2 meter (80") to all combustible parts
- Do not cover the device or the lens with any material while the device is in operation.
- Mount the device in a well ventilated area away from sources of ignition and out of direct sun light.
- Never expose the device to rain or moisture.
- In the event of fire, use sand, CO₂, or dry powder fire extinguishers; never use water on an electrical fire.
- This product should never be placed near or over a radiator or heat register.
- This device should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- The operation room must be well ventilated or cooled in order to avoid build up of heat.

On servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials and risk of electric shock.
- Refer all servicing to qualified service personnel.
- Fence off a restricted area of at least 3 meters around the projector using an eye-catching fence and "KEEP OUT" signs. This to prevent unauthorized persons coming near the projector during servicing.
- Unplug this product from the wall outlet and refer servicing to qualified service technicians under the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has been spilled into the equipment.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- Replacement parts: When replacement parts are required, be sure the service technician has used original Barco replacement parts. Unauthorized substitutions may result in degraded performance and reliability, fire, electric shock or other hazards. Unauthorized substitutions may void warranty.
- Safety check: Upon completion of any service or repairs to this device, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Lamp replacement: high pressure lamp may explode if improperly handled.

1.3 Important warnings concerning DML flight cases

Important warnings concerning stacking/transporting DML rental flight cases

- Stack maximum two (2) DML rental flight cases high. Never higher.
- The surface on which a flight case is standing must be level to ensure that the total load is evenly spread out among the four wheels. The surface must also be able to support the load safely.
- Before stacking or transporting flight cases, check the wheels and their fixation screws for wear or defects.
- Before stacking or transporting flight cases, check that the six lock handles on each flight case are in good working order and locked securely.
- When stacked, make sure the wheels of the upper flight case are precisely positioned in the stacking dishes of the flight case below.
- Stacked flight cases may not be moved. Before stacking, the lower flight case must already be in its final resting position before placing the second upon it.
- Never stack loaded flight cases in a truck or other transport medium, unless each flight case is rigidly strapped tight.
- In the event of a wheel breaking, flight cases must be rigidly strapped tight to prevent a stack collapsing.
- Use an appropriate forklift to raise flight cases and take the necessary precautions to avoid personnel injury.

1.4 Recycling guidelines



WARNING: Do not break or crush lamps because this may pose health and environmental risks when mercury vapors are released.



CAUTION: To avoid breaking the lamps, repack carefully when storing and transporting them.



CAUTION: Lamps may not be disposed as normal household trash.

Contact your local waste disposal facility for information on the recycling program for HID (High Intensity Discharge) lamps in your area.

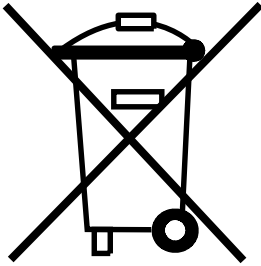


Image 1-1

Disposal options for mercury-containing lamps

- Recycle through a municipal or solid waste district household hazardous waste collection program in accordance with local regulations.
- Direct shipment to lamp recycler
- Shipment through a hazardous waste transporter

2. GENERAL

Overview

- Installation requirements
- Unpacking the device
- Projector air inlets and outlets

2.1 Installation requirements

Ambient temperature conditions

The maximum allowed ambient temperature for an operating DML-1200 may not exceed +40 °C (+104 °F).

The minimum allowed ambient temperature for an operating DML-1200 may not drop below +10 °C (+50 °F).

The projector will not operate if the ambient air temperature falls outside this range (+10 °C → +40 °C or +50 °F → +104 °F). Be aware that room heat rises to the ceiling. Check if the temperature near the installation site is not excessive.

The minimum storage temperature is -35 °C (-31 °F) and the maximum storage temperature is +65 °C (+149 °F).

Humidity conditions

Storage: 0 to 98% relative humidity, non-condensing.

Operation: 0 to 95% relative humidity, non-condensing.

High Altitude

For an optimal performance of the DML-1200 at high altitude, make sure that sufficient air flow is available (maximum ambient temperature 30°C).

Device weight

Do not underestimate the weight of one DML-1200, which is about ±75 kg (±166 lb.). Be sure that the table or truss installation on which the device(s) has to be installed is capable of handling five (5) times the complete load of the complete system.

Power requirements

One DML-1200 requires 200-240 V, 10A 50-60Hz

Clean air environment

A device must always be mounted in a manner which ensures the free flow of clean air into the projectors ventilation inlets. For installations in environments where the projector is subject to airborne contaminants such as that produced by smoke machines or similar (these deposit a thin layer of greasy residue upon the projectors internal optics and imaging electronic surfaces, degrading performance), then it is highly advisable and desirable to have this contamination removed prior to it reaching the projectors clean air supply. Devices or structures to extract or shield contaminated air well away from the projector are a prerequisite, if this is not a feasible solution then measures to relocate the projector to a clean air environment should be considered.

Only ever use the manufacturer's recommended cleaning kit which has been specifically designed for cleaning optical parts, never use industrial strength cleaners on the projector's optics as these will degrade optical coatings and damage sensitive optoelectronics components. Failure to take suitable precautions to protect the projector from the effects of persistent and prolonged air contaminants will culminate in extensive and irreversible ingrained optical damage. At this stage cleaning of the internal optical units will be noneffective and impracticable. Damage of this nature is under no circumstances covered under the manufacturer's warranty and may deem the warranty null and void. In such a case the client shall be held solely responsible for all costs incurred during any repair. It is the clients responsibility to ensure at all times that the projector is protected from the harmful effects of hostile airborne particles in the environment of the projector. The manufacturer reserves the right to refuse repair if a projector has been subject to knowingly neglect, abandon or improper use.

2.2 Unpacking the device

About the flight case

The DML-1200 is shipped in a flight case specifically designed to protect the device during transport. Once the device has arrived at the installation site, take it out of the flight case and inspect the outside of the complete device for physical damage to components.

For base stand operation

1. Turn the flight case upside down.

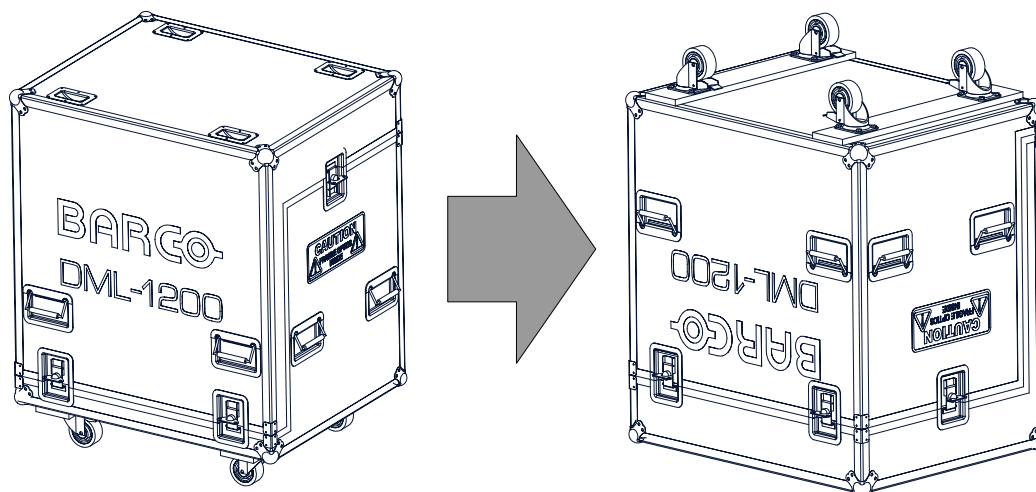


Image 2-1
Turn flight case upside down

2. Open the 6 locks.
3. Take off the cover with the wheels.

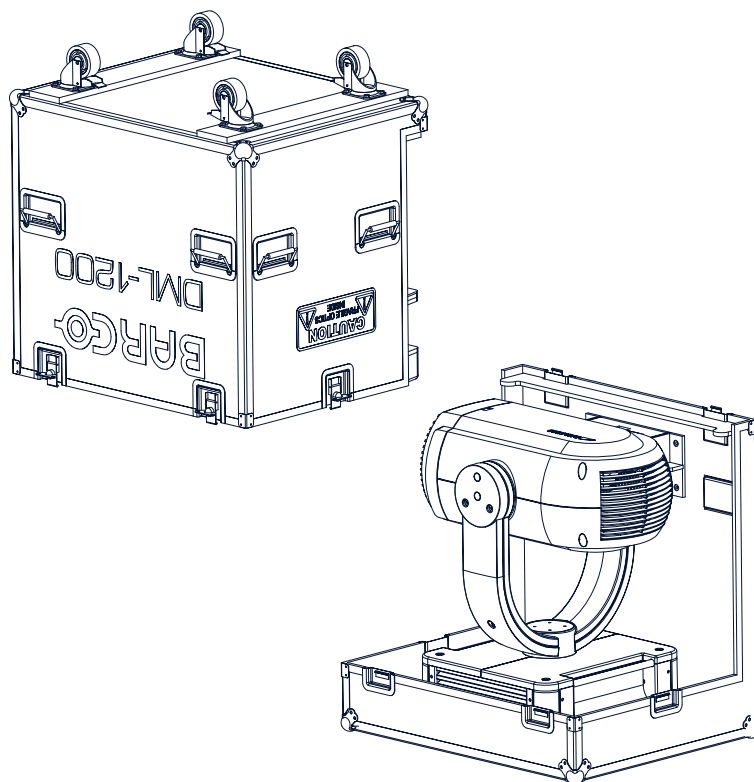


Image 2-2
Open flight case

4. Take out the device by its carrying handles and place it on its foot.
Caution: Lift it up with 2 persons while a 3rd person pushes away the flight case.

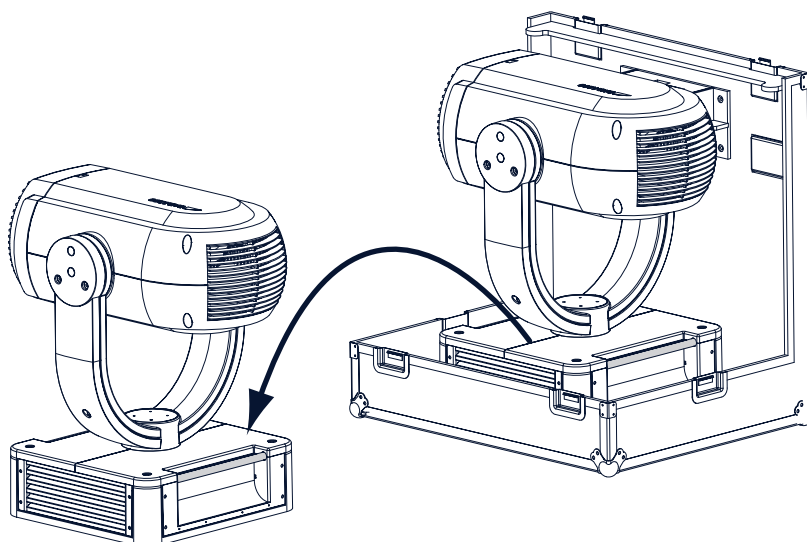


Image 2-3



CAUTION: Never use the head as carrying handle to lift up the DML-1200.

For rigged operation

1. Leave the flight case on its wheels and open the 6 locks.

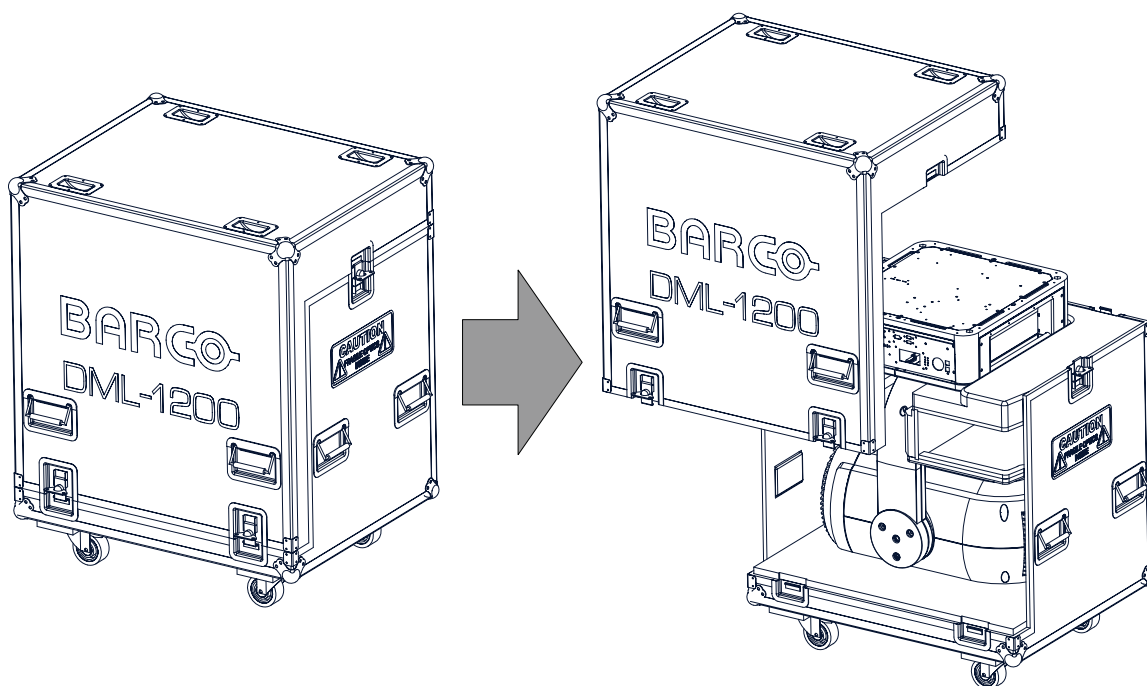


Image 2-4
Open flight case

2. Take off the L-shaped cover.
The DML-1200 hangs in the flight case.
3. Turn in 4 rigging clamps.

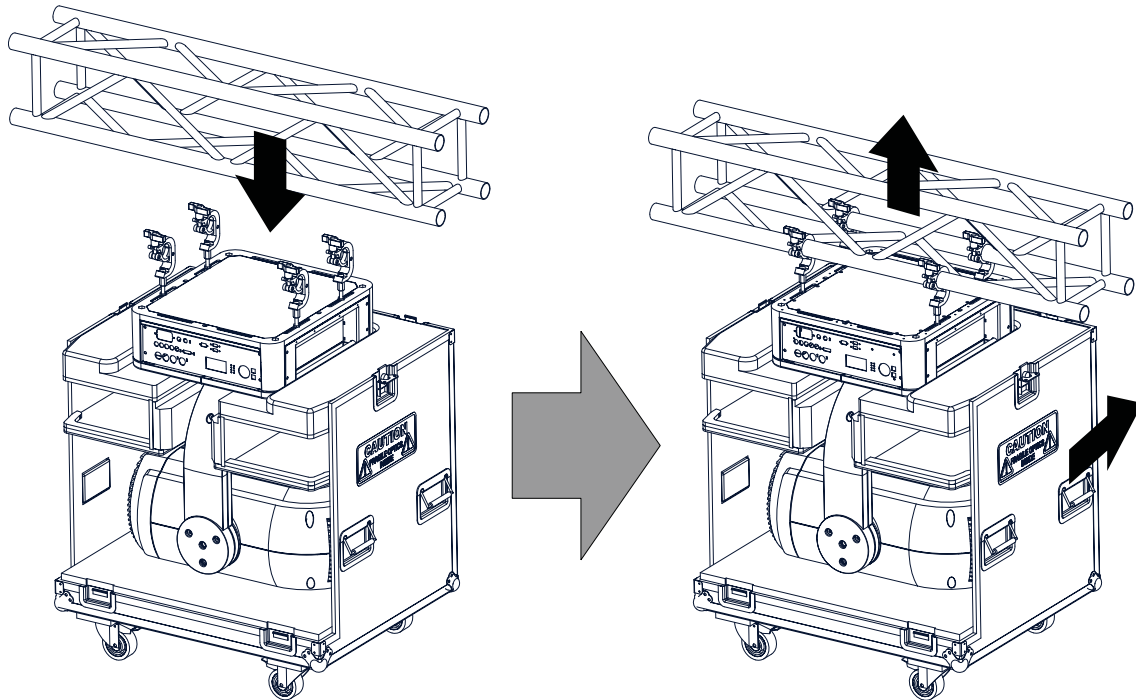


Image 2-5

4. Lower the truss and hook up all rigging clamps.
5. Lift up the device for a few centimeter.
6. Push the flight case away from the device.



For more information about how to mount the clamps, see "Truss mounting of the DML-1200", page 15

2.3 Projector air inlets and outlets

Air inlet and outlet

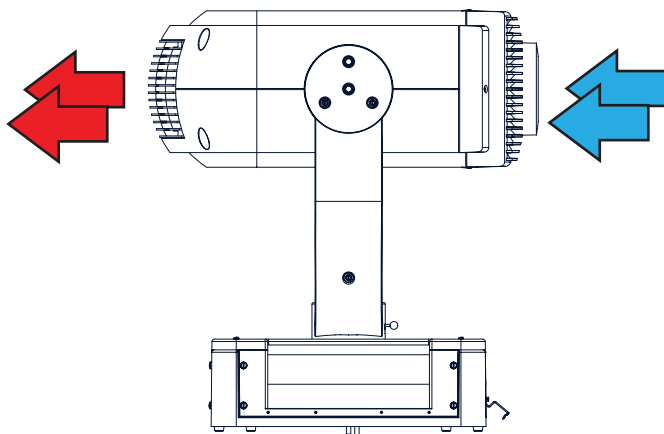


Image 2-6
Air flow

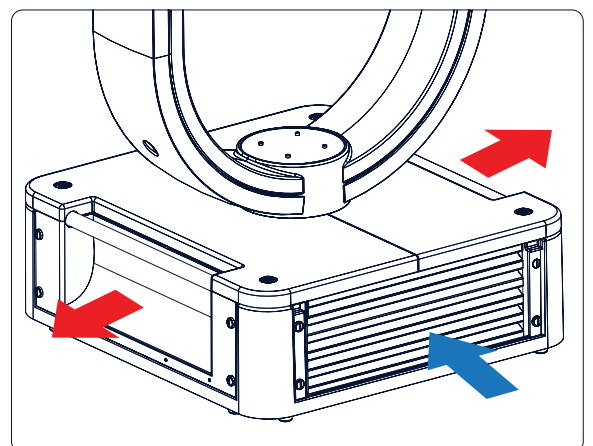


Image 2-7
Air flow base

The DML-1200 has an air inlet at the lens side of the head and an air outlet at the back side of the head. The base has an air inlet at the back side and an air outlet at the right side and left side.

3. PHYSICAL INSTALLATION



CAUTION: Do not mount the DML on a wall ! Only ceiling or floor mounted installation are allowed.

Overview

- Pan and tilt locking
- Mounting the DML-1200 upright
- Truss mounting of the DML-1200

3.1 Pan and tilt locking



CAUTION: Unlock the tilt and pan lock before operating the DML-1200 !

Tilt lock

The projector head can be locked each 45° starting from its packing position (7 lock positions).

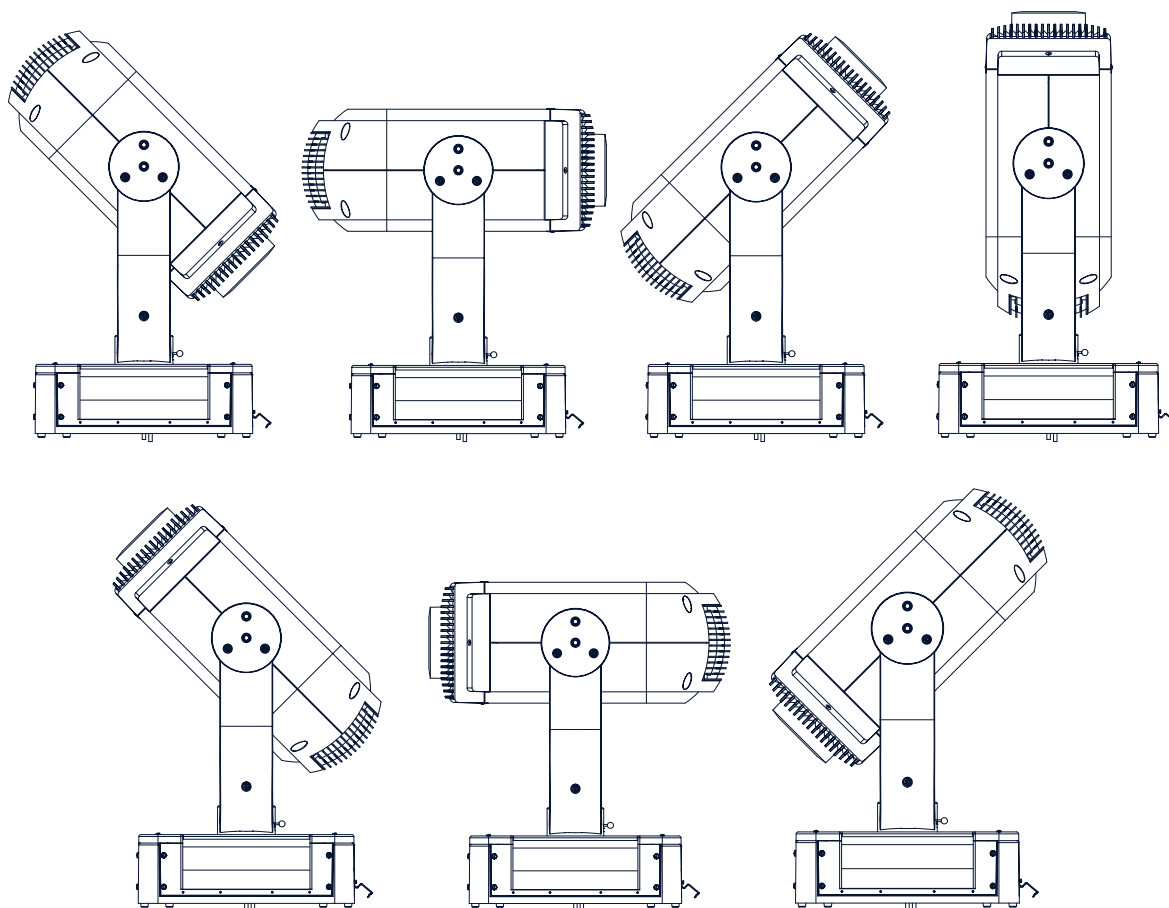


Image 3-1
Different lock positions

To lock the head, turn it in one of the 7 possible lock positions and press the red button on the rotation axis (F).

3. Physical installation

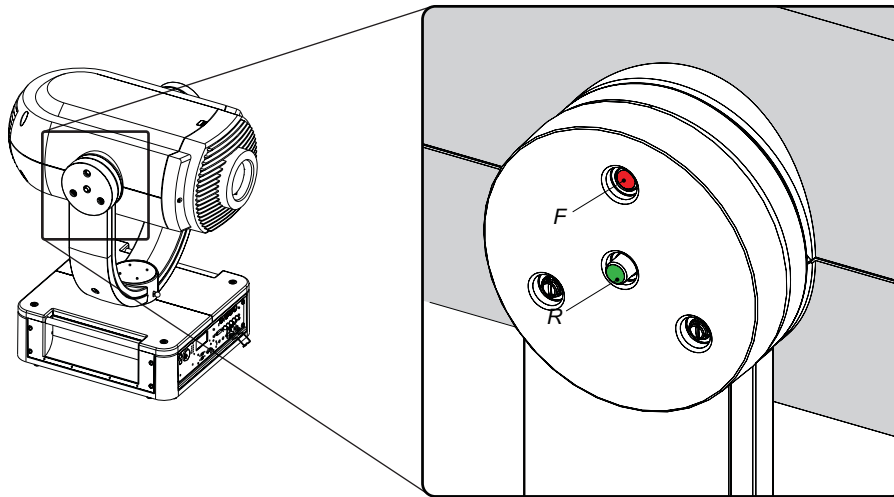


Image 3-2
Tilt lock buttons

To unlock the head, press the green button (R).

Pan lock

The panning of the yoke can be locked each 90°, starting from its packing position (4 positions).

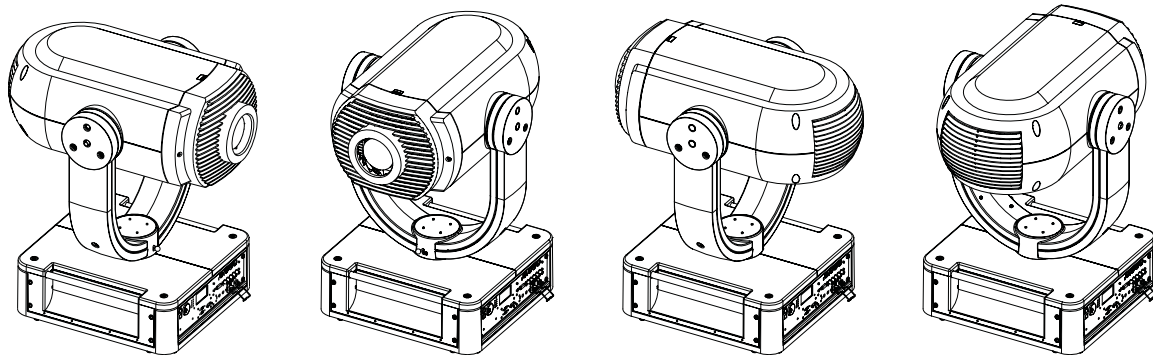


Image 3-3
Pan lock positions

To lock the yoke, rotate it in one of the 4 possible positions and then move the handle from the upper position (U) to the lower positions (L).

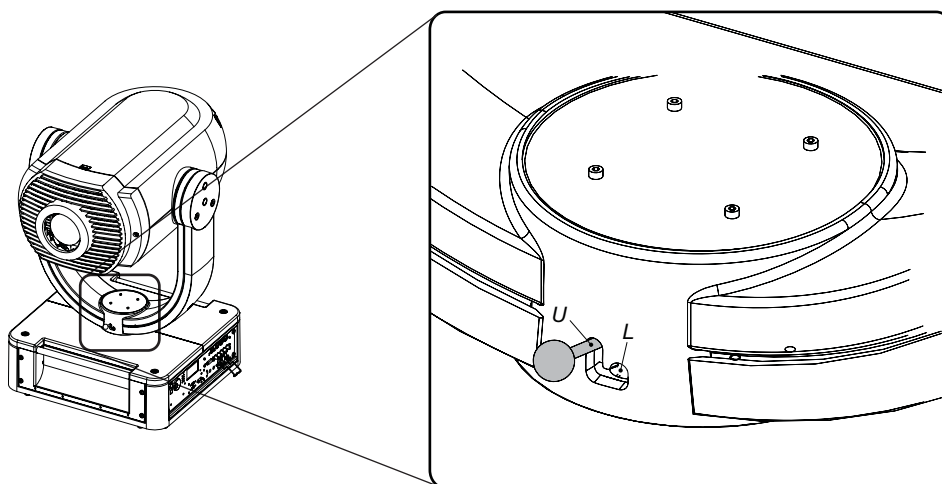


Image 3-4

To unlock the yoke, move the handle from the lower position (L) to the upper position (U).

3.2 Mounting the DML-1200 upright



CAUTION: Always pan and tilt lock the device while handling it.

How to mount

To mount the DML-1200 upright, place the device on a sturdy, stable surface that will support more than 75 kg (165.4 lbs). If the surface is above floor height, use safety cables to secure the device to the surface.



When mounting on a chariot with wheels, always use wheels with brakes.

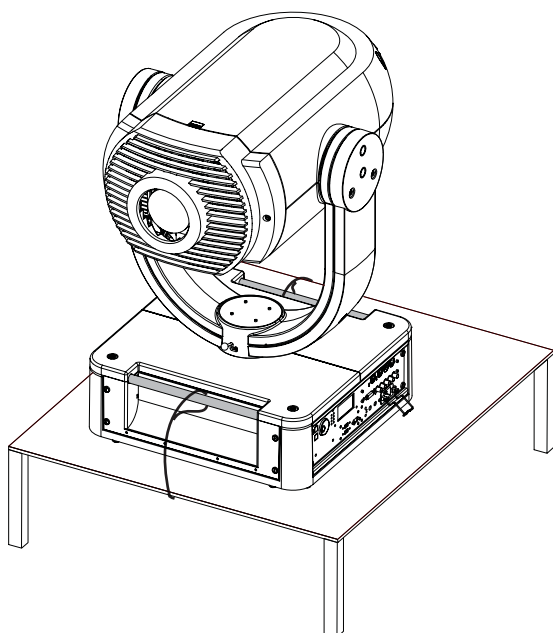


Image 3-5
Mounting upright

Restricted Access Location

The DML-1200 must be installed in a Restricted Access Location, where access can only be gained by persons who have been instructed about the reasons for the restriction applied to the location and about the precautions that shall be taken.

Reasons for the applied restrictions: moving head in all directions, air outlet can reach high temperatures and light output may cause eye injury when looking directly into the lens.

3.3 Truss mounting of the DML-1200



CAUTION: Verify the truss or support if it can handle the combined weight of all the devices on the truss. If necessary, consult a structural engineer.



WARNING: Before mounting, disconnect the power to the DML-1200. If it has been operating, allow to cool for five minutes before handling.

Rigging points and rigging clamps

Four slots are longitudinally (A) oriented and four slots are transversely (B) oriented. Each slot contains a rigging point of which the position in the slot can be adjusted depending on the size of the truss installation. The rigging clamps (C) can be attached to those rigging points, which allows an easy and fast physical setup of the device in a hanging configuration. The 4 corners contains also each a rigging point as well as 2 fixed positions in the middle of two sides.

3. Physical installation

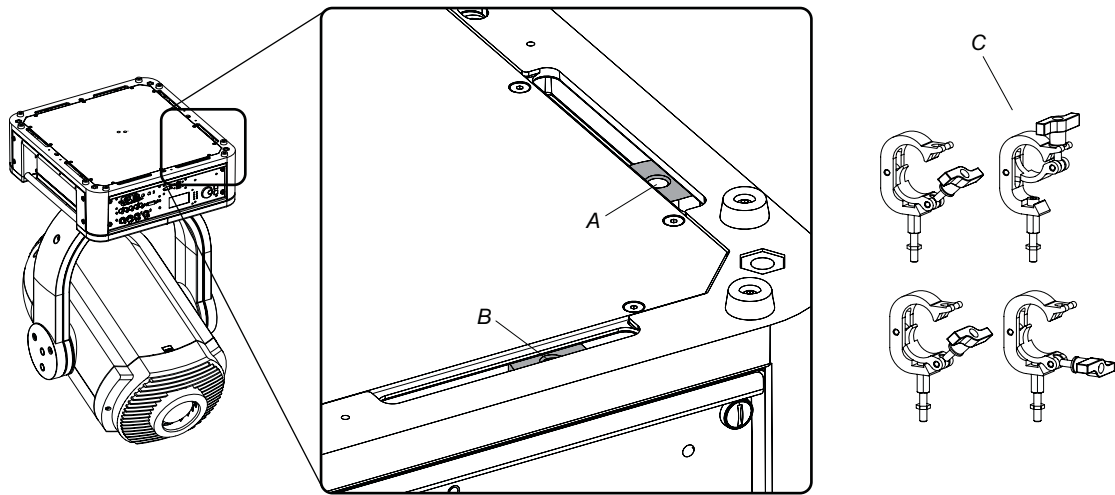


Image 3-6
Rigging points



CAUTION: Always pan and tilt lock the device while handling it.

Necessary tools

4 Rigging clamps

How to mount

1. Measure the distance, center tube as reference, between the two used support bars of the truss.

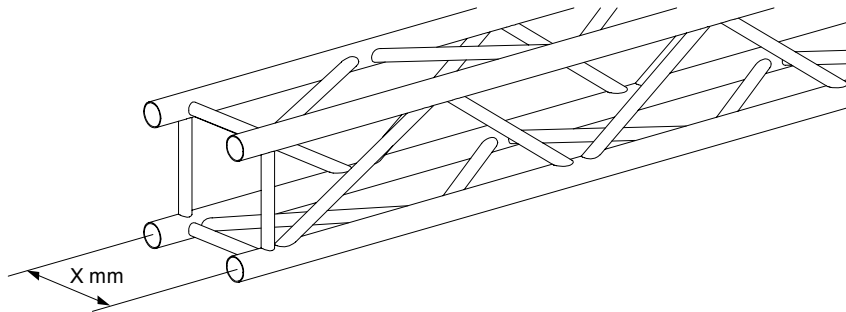


Image 3-7

2. Push the rigging point downwards and slide it at the same time to its place, according the measured distance. Release the rigging point.

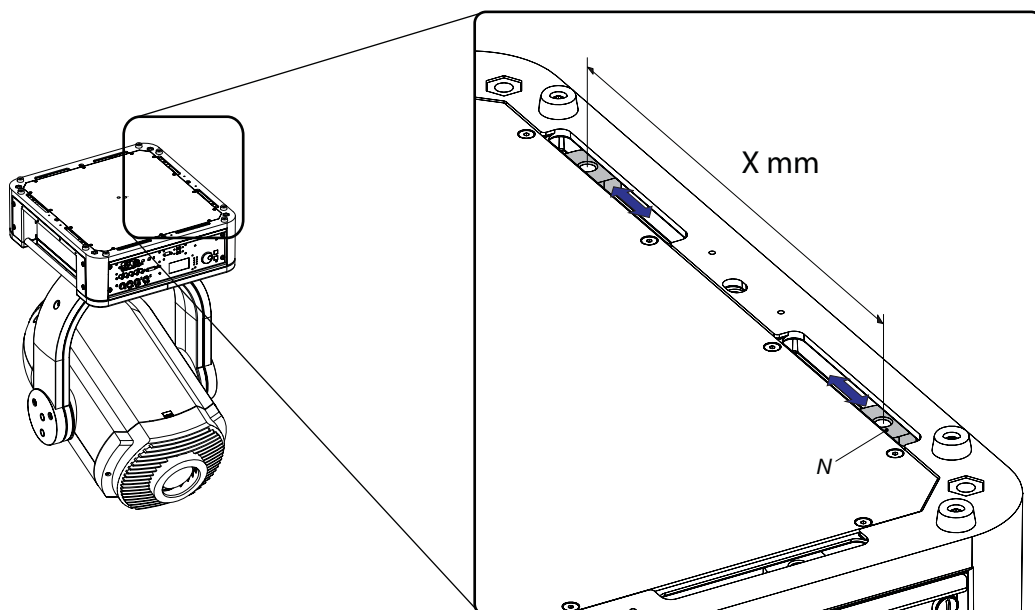


Image 3-8
Distance between rigging points

3. Turn in the rigging clamps (A) into the rigging points (screw thread M10). Secure the rigging clamp by turning the safety nut (B) on the rigging clamp against the rigging point.

Warning: Always use four (4) rigging points, equally spread, to suspend the device.

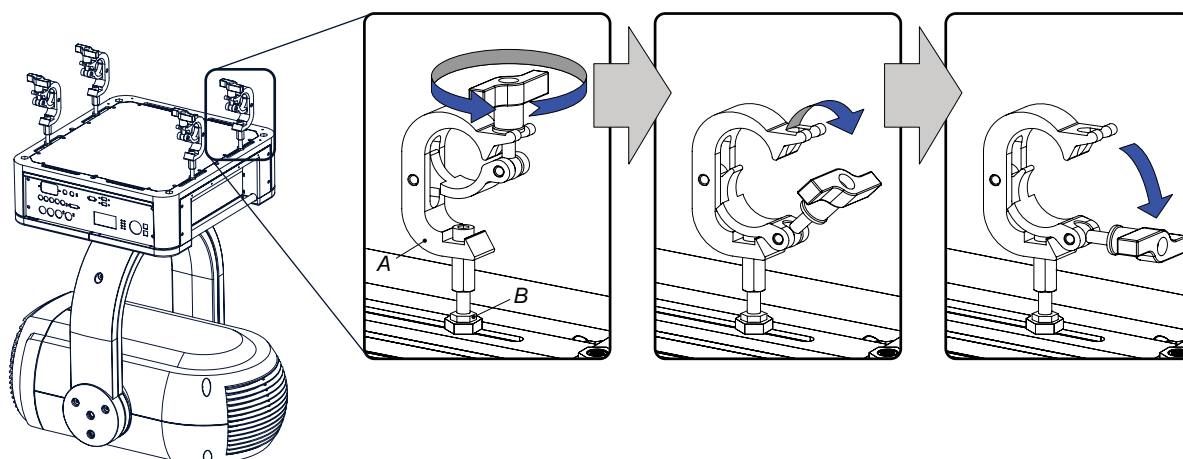


Image 3-9
Open rigging clamps

4. Place all four rigging clamps in open position.
5. Place the device under the truss installation and lower the truss until the support bars of the truss are nearby the rigging clamps mounted on the device.

3. Physical installation

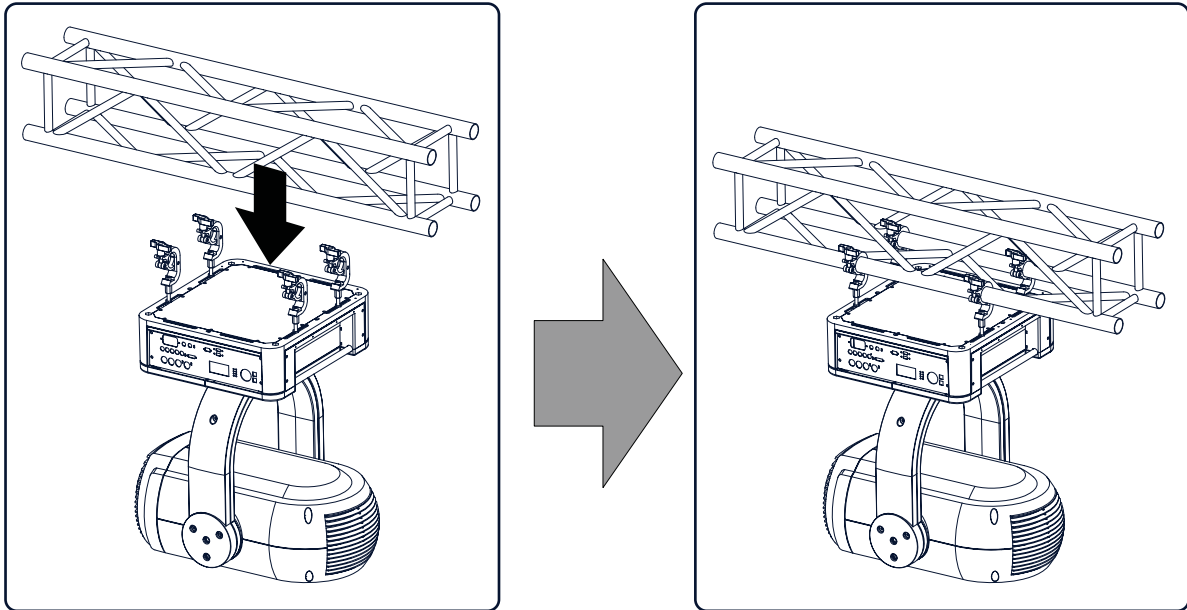


Image 3-10
Mount to truss

6. Hook the 4 rigging clamps over the support bars of the truss and lock all 4 rigging clamps.
7. Install a safety cable (S) around both sides of the carrying handles and around the truss (close to the rigging clamps). Close the cable with the cable clamp..
 - Always use the delivered cable and connector.
 - Before mounting the security cable, inspect the cable and connector. Do not use when visible damage is detected.
 - Stretch the security cable completely. If necessary, turn the security cable a few times around the truss before closing the connection so that the cable is stretched as much as possible.
 - Connector may not be mounted under bending stress.

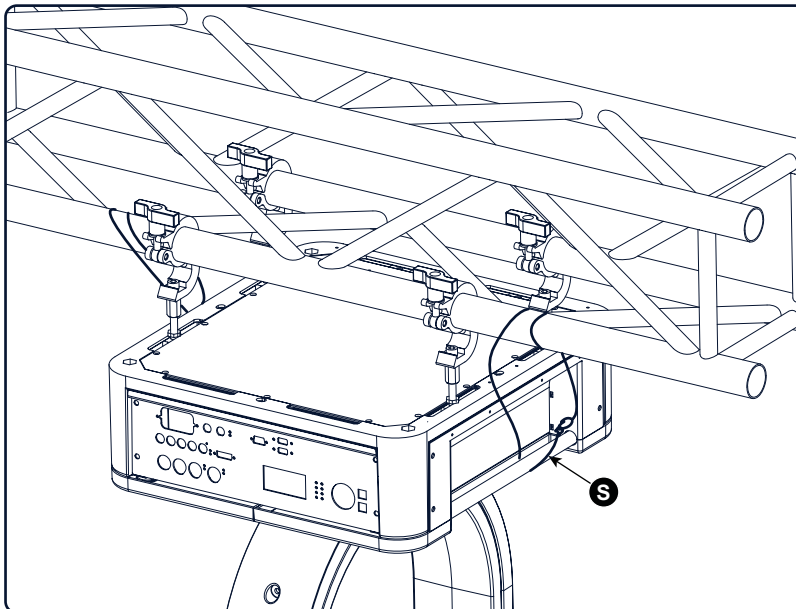


Image 3-11
Mount safety cable

8. Lift up the truss with attached device to the desired height.

4. CONNECTIONS

Overview

- Power connection
- Input connections
- Communication connections
- Linking DML-1200's

4.1 Power connection



CAUTION: Use only the power cord provided with the projector.

How to connect with the local power net

1. Connect the power cord with the power input socket of the projector (P)

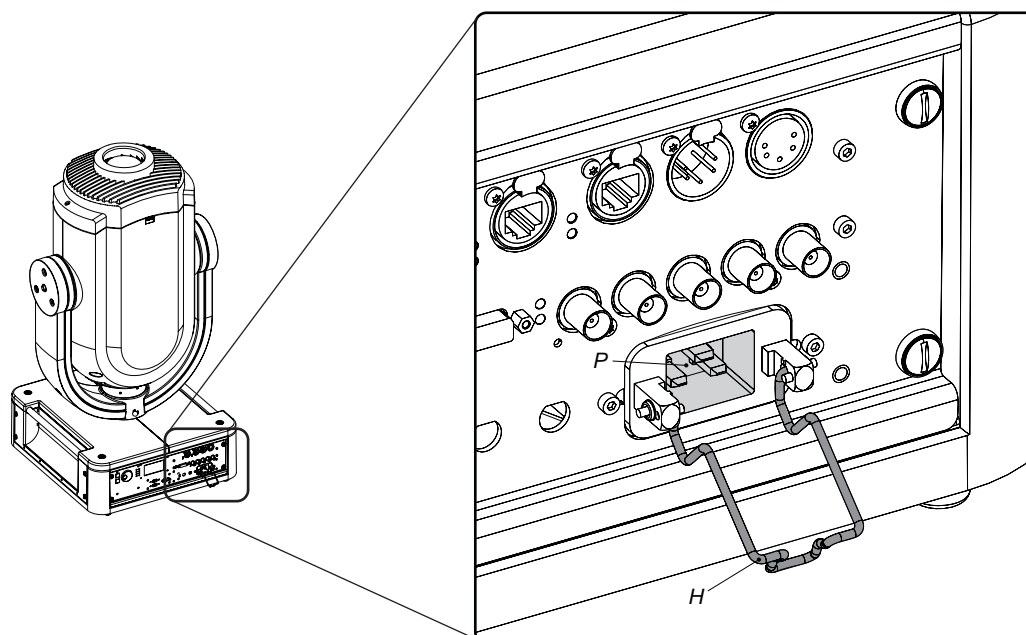


Image 4-1

2. Secure the power plug by locking the plug holder clamp (H).
3. Mount a plug to the delivered power cord but take care of the local regulations about power cords and power plugs. Do not defeat the purpose of the grounding-type plug. Plug this plug into the wall outlet.

Caution: Ensure that the power net meets the power requirements of the device, which are 200-240 V, 10A 50-60Hz

Homing the device

When the DML-1200 is connected to an appropriately-rated power source, it automatically begins a homing procedure to verify that the major functions of the device are oriented properly. This homing procedure includes movements of the projector head and yoke.



Do not block the device during its homing process to avoid a wrong detection of its end loop for tilt and pan.

4.2 Input connections

Overview

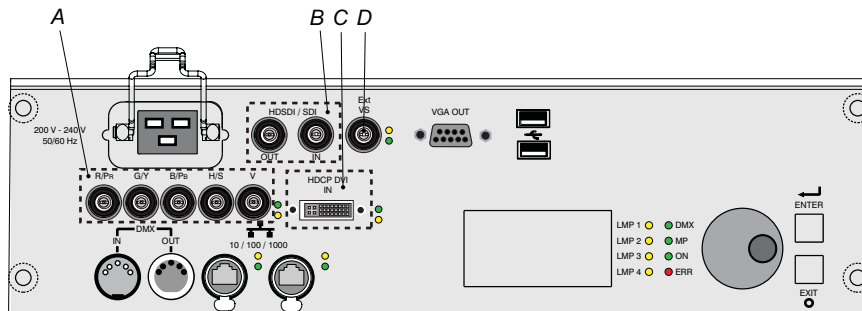


Image 4-2
Input indications (truss view)

- A 5-cable input
- B SDI / HD-SDI input output
- C HDCP DVI input
- D External sync (on with embedded media player)

All inputs have two status LEDs. The green LED lights up if the input is selected as the active input. The yellow LED lights up if the input has detected valid input syncs.

5-cable input, signal connectivity

Input signal	R / P _R	G / Y	B / P _B	H / S	V
RGBHV	R	G	B	H	V
RGBS	R	G	B	S	—
RGsB	R	Gs	B	—	—

sync on green

5-cable input, specifications

- Data and HD sources RGB and YUV [HS/VS, CS or SOG(Y)]:
 - Pixel clock maximum 170 MHz
 - 8 bit/color
- Video sources RGB
 - 525i, 625i, 525p, 625p
 - Macrovision copy protection robust
 - 8 bit/color
- Automatic detection of sync inputs but with manual override:
 - automatic mode : RGB
 - manual modes : RGB HS/VS - CS, RGB SOG
- Sync signals are 75 ohm terminated.
- Signal requirements:
 - RG(s)B
 - R : 0,7Vpp ±3dB 75 Ohm termination.
 - G(s) : 1Vpp ±3dB (0,7Vpp G + 0,3Vpp Sync) 75 Ohm termination.
 - B : 0,7Vpp ±3dB 75 Ohm termination.

SDI / HD-SDI, specifications

- 1 input (BNC), 1 active loop-through output (BNC)
- 10 bit/color
- SDI: 525/625 interlaced.
- Coax (75 Ohm).

- Supported HDSI standards:
 - Progressive:
 - 1280x720/60/1:1/ (SMPTE 296M)
 - 1280x720/59.94/1:1/ (SMPTE 296M)
 - 1920x1080/30/1:1/ (SMPTE 274M)
 - 1920x1080/29.97/1:1/ (SMPTE 274M)
 - 1920x1080/25/1:1/ (SMPTE 274M)
 - 1920x1080/24/1:1/ (SMPTE 274M)
 - 1920x1080/23.98/1:1/ (SMPTE 274M)
 - Interlaced:
 - 1920x1035/60/2:1/ (SMPTE 260M)
 - 1920x1035/59.94/2:1/ (SMPTE 260M)
 - 1920x1080/60/2:1/ (SMPTE 274M)
 - 1920x1080/59.94/2:1/ (SMPTE 274M)
 - 1920x1080/50/2:1/ (SMPTE 274M)
 - 1920/1080/50/2:1 (1250)/ (SMPTE 295M)
 - 1920x1080/24/Segmented/ (SMPTE 274M)
 - 1920x1080//23.98/Segmented/ (SMPTE 274M)

HDCP DVI input, specifications

- DVI type: DVI-I (DVI-Integrated), but the analog signals are not supported. Single-link configuration.
- Supports UXGA Resolution (1600 x 1200) (Pixel Rates up to 165 MHz)
- Digital Visual Interface (DVI) and High-Bandwidth Digital Content Protection (HDCP) Specification Compliant
- Vertical frequencies: 24 - 75 Hz
- Horizontal frequencies: 20 - 90 kHz
- Cable lengths: up to 3 meter at UXGA speed.
- Compliance: DDC2B support according to VESA EDID Version 1.2

External Sync

Only with embedded media player.

External sync signal coming from external source to lock the embedded media player on that source.

4.3 Communication connections

Overview

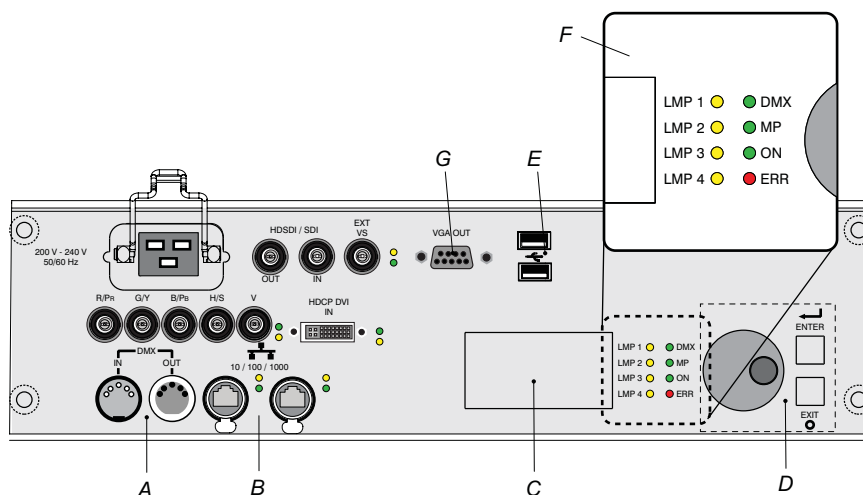


Image 4-3
Communications

- A DMX512 data in, data out
- B Ethernet connection
- C LCD communication display
- D Function buttons and jog dial
- E USB inputs

- F Status LEDs
- G VGA out

DMX interface

The communication interface of the DML-1200 supports DMX. The DML-1200 is DMX512-A protected.

DMX is used as communication bus between different devices in the light technic. Each device has an input and a thru, so that the bus can be daisy chained between the different devices. According to the standard a two pair cable with shield and XLR connector is used. The shield must not be connected to or be in contact with the shell or body of either male/female connector. Use cables which are compliant with the DMX512 standard.

You can use the DMX input port (A) to connect a DMX device or lighting console. This way you can control the DML-1200 from that lighting console. The DMX output port (G) can be connected to the next device in the daisy chain. The DMX output port is a passive loop through and is functional even when the device is not powered.

Pin	Description
1	Shield
2	Data 1–
3	Data 1+
4	NC
5	NC



DMX

DMX-512 Lighting protocol over RS-485 interface. Carries information of 512 channels from a lighting controller to lighting devices. Standardized by USITT.

Ethernet network communication

The DML-1200 can be connected to a LAN (local area network) using one of the Ethernet ports (C) on the communication interface. Once connected to the LAN, users are capable of accessing the device from any location, inside or outside (if allowed) their company network using the DML control software: Projector Toolset. This toolset locates the device on the network in case there is a DHCP server or the user can insert the correct IP-address of the projector to access the projector. Once accessed, it is possible to check and manipulate all the projector settings. Remote diagnostics, control and monitoring of the projector can then become a daily and very simple operation. The network connectivity permits to detect potential errors and consequently improve the time to servicing.

Both Ethernet ports (C) are equipped with a yellow and green LED. The yellow LED lights up in case the port is connected with a 100/1000Mbit network. The green LED blinks in case there is network activity.



The connector used for the Ethernet ports (C) are of rugged Neutrik EtherCon RJ45 type, which is compatible with standard RJ45 cable connector. Straight (most common) as well as cross linked network cables can be used.

10/100 Base-T — RJ45 port		1000 Base-T — RJ45 port
Pin	Description	Description
1	TXD+	TX0+
2	TXD-	TX0-
3	RXD+	RX0+
4	—	TX1+
5	—	TX1-
6	RXD-	RX0-
7	—	Rx1+
8	—	RX1-



It is recommended to use a 1 GigaBit switch to set up the Ethernet connection. Follow also the *Networking tips & tricks*.

Networking tips & tricks

- Use high quality network equipment
- Use CAT 5e or CAT 6 UTP cables
- Unless fitted by a professional network installer, do not use handmade cables. If handmade cables are used, make sure they are made with proper tools and are tested on performance.
- For UTP cabling, limit the length of the cables to 50 meter. If a bigger distance needs to be covered, it's advised to use fiber optics or repeaters (hubs).
- Do not pull the cables with brute force
- Do not run cables along with or close to electric cabling
- Avoid sharp bends in the cabling
- If possible, separate the network with the DMLs from any corporate or public network to avoid performance loss, contamination (virus risk), and security breaches.
- It is advised to put all DMLs on the same network range (both embedded controller and EMP). This makes the network easier to use and understand, and all components will be reachable for the Projector Toolset



For complex and large network setups, we advice to contact a professional network specialist and installer.

USB port

The communication interface is equipped with two USB ports, type "A" connectors (E). These USB ports are use by service technicians to connect a keyboard and mouse to the available media player or another USB device.

VGA out

To connect a monitor to the available media player. This VGA out is used in combination with the USB ports to control the media player for service purposes.

LED indications

The LED indication next to the jog dial have the following function:

Yellow LEDs LMP1, LMP2, LMP3, LMP4 : On when the corresponding lamp is on. Off when the corresponding lamp is off.

Indication	Color	Description
LMP1	Yellow	ON : when lamp 1 is on ON - OFF (blinking): lamp 1 is in after cooling. OFF : when lamp 1 is not ignited.
LMP2	Yellow	ON : when lamp 2 is on ON - OFF (blinking): lamp 2 is in after cooling. OFF : when lamp 2 is not ignited.
LMP3	Yellow	ON : when lamp 3 is on ON - OFF (blinking): lamp 3 is in after cooling. OFF : when lamp 3 is not ignited.
LMP4	Yellow	ON : when lamp 4 is on ON - OFF (blinking): lamp 4 is in after cooling. OFF : when lamp 4 is not ignited.
DMX	Green	ON - OFF (blinking): when the device received DMX data within the last 3 seconds. OFF : no DMX data received.
MP	Green	ON : when the Media Player is on ON - OFF (blinking): when the Media Player software is up and running OFF : when Media Player is off
ON	Green	ON : when the head is on ON - OFF (blinking): when the head is on and ready OFF : head is not ready
ERR	Red	ON : indicates a warning in the head during operation. A warning allows normal operation, but some hardware in the device does not match the required specifications ON - OFF (blinking): indicates a fatal error. Service is required. OFF : no errors detected



LEDs are only active when the LCD panel is activated or when an activation command is sent via Projector Toolset.

4.4 Linking DML-1200's

Standard DMX linking

The number of devices on a link will be determined by the combined number of channels required by all devices. One link (universe) contains 512 channels.

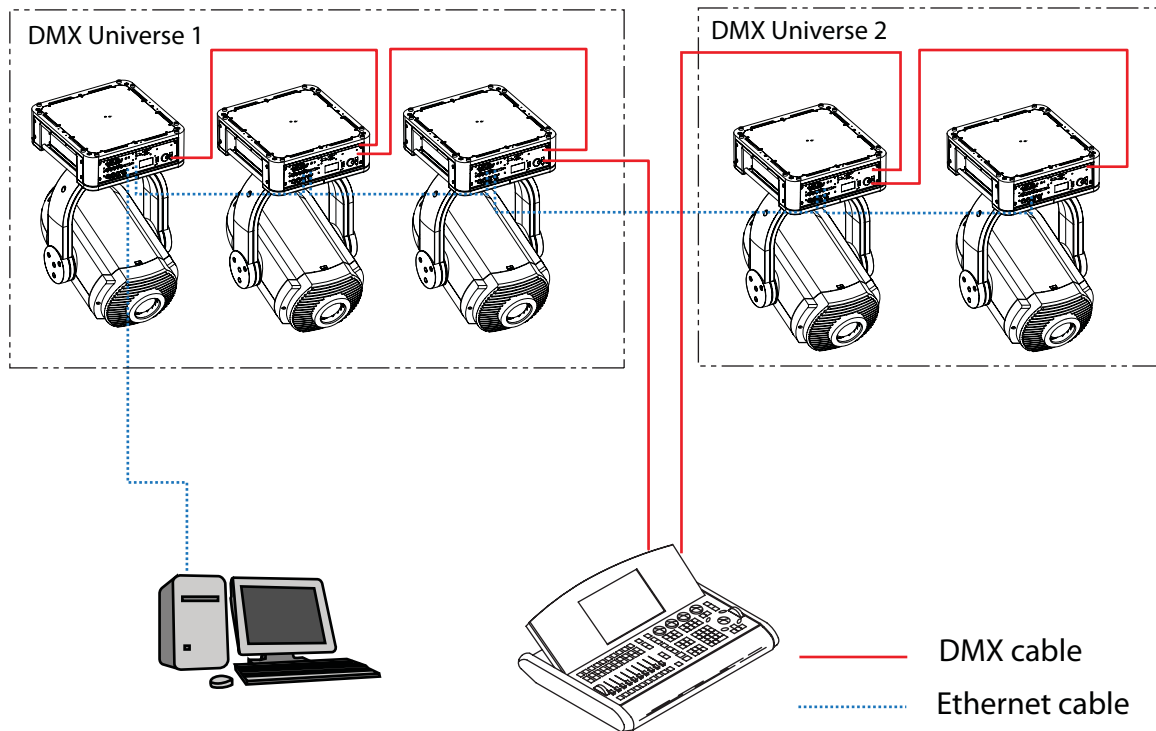


Image 4-4
DMX linking

Therefore, one DMX universe can contain up to 4 DML-1200 devices with a Media Player and up to 10 devices without Media Player.

To control a DML-1200 without Media Player, 51 DMX channel are necessary. When the Media Player is available, 128 channels are required.

How to make a link:

1. Connect the male connector of a DMX Data cable to the DMX Data Out connector of the console.
2. Connect the female connector to the DMX In connector of the first device.
3. Continue linking the remaining devices connecting a cable from the DMX Out connector of each device to the DMX In connector of the next device on the link.
4. Connect a male terminator (120 Ω) to the DMX Out connector of the last device in the link.

DML-1200 devices use an Ethernet network also for controlling. The Ethernet cable can link all devices one after each other, without looking to the DMX universes.

DMX over Ethernet

If you are using a DMX console and other automated lighting products compatible with Art-Net, the Ethernet network can serve as the link for DMX control.

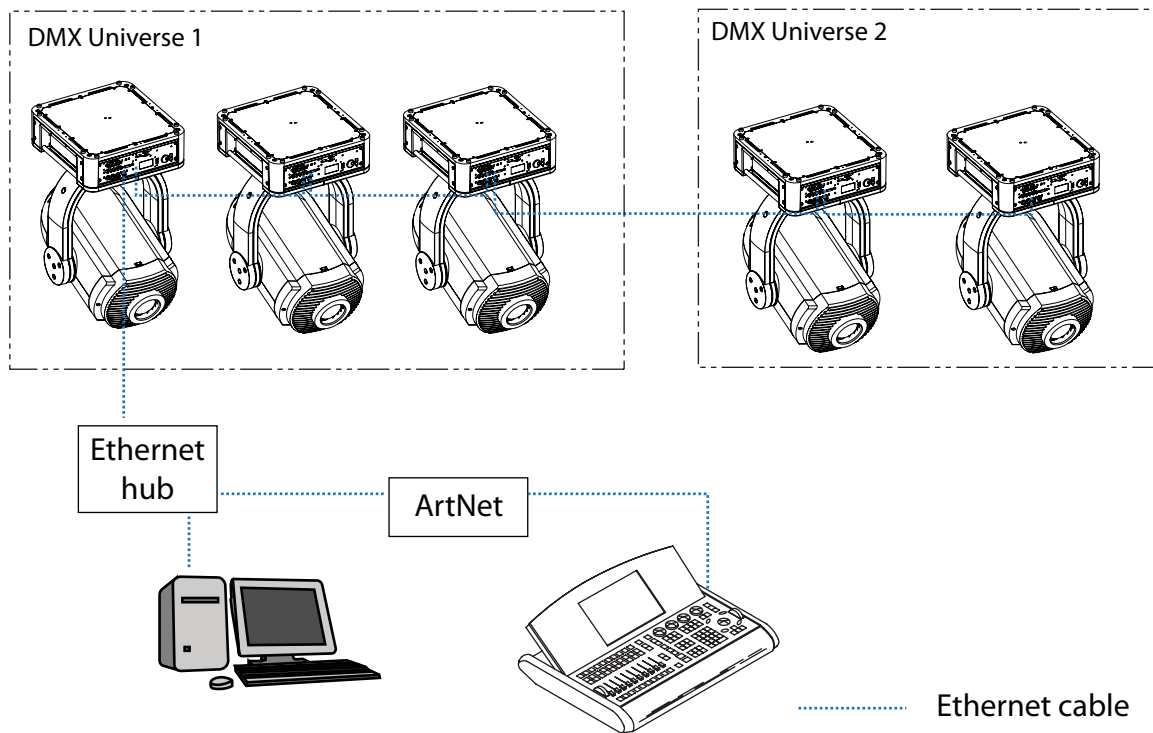


Image 4-5
DMX on Ethernet

Alternative setup:

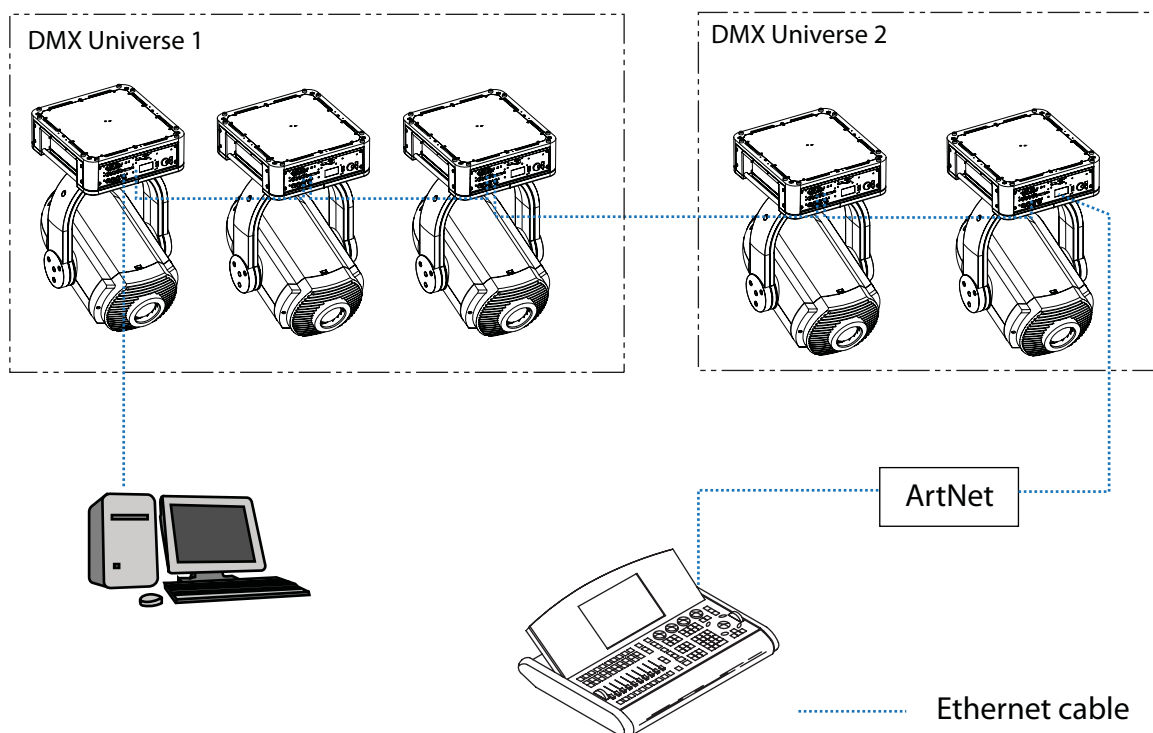


Image 4-6
DMX on Ethernet, alternative setup

5. START UP OF THE ADJUSTMENT MODE

5.1 About the adjustment mode

Overview

As the adjustment mode is the central place to control and align the head, the following functions can be done:

- Input setup: the different inputs can be configured for a specific format or input source.
- Image adjustment: these adjustments are organized per image source and contain the aspect ratio, timings and image settings.
- Lamp: manage the lamp mode, the lamp use, lamp type and history
- Alignment: groups all controls necessary during the setup of the device onto a screen.
- Control: contains the accessibility settings of the device, such as address and communication setup and the DMX controls for the device.
- Service: contains information about how the device is performing. This information will be useful when calling for a service intervention.

Some settings are applied (saved) immediately but other are only saved and applied after switching off the lamps (e.g. video related settings).

5.2 Start up of the adjustment mode

Start up tools

Only the local control panel can be used to start up the Adjustment mode.

How to start up

1. Press the **Enter** button on the local control panel to start up the *Adjustment* mode.



Image 5-1

5.3 Navigation and adjustments

How to navigate in the menu structure

Once in the menu structure, use the jog dial on the local control panel to scroll through the items in the displayed menu. The selected item will get a background color. To activate a selected submenu or function, press **Enter**.

How to make an adjustment

Once a function is selected with the jog dial, press **Enter** to activate this function. The value behind this selection is highlighted. Use the jog dial to change the value to the desired value. Press **Enter** to activate this value. and to return to the function selection. Repeat this action when necessary to change the value again.

About the menus

Both bottom lines on the display are used to indicate the last error or warning which has occurred. The first line of these two indicates the status, warning or error and the second line gives a description of the warning or error. To see an overview of all warnings and errors, see "Error list", page 97.

6. INPUT MENU

Overview

- Input selection
- Auto Image Alignment
- Reset to factory presets
- Image load mode
- Aspect ratio
- No input signal
- No source selected

6.1 Input selection

How to select an input

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Input* and press **Enter**.
The input selection menu opens.
3. Turn the jog dial to select the desired input and press **Enter**.

The corresponding input will be selected.

Possible inputs:

- No source : no source is selected.
- RGBHV
- HDSDI/SDI
- DVI
- Media player : internal built-in media player is selected.

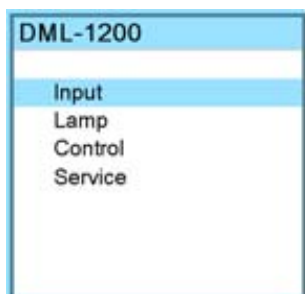


Image 6-1



Image 6-2

6.2 Auto Image Alignment

What can be done ?

An alignment of the preview window is executed for the new source.

How to use

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Input* and press **Enter**.
The input selection menu opens.
3. Turn the jog dial until the second page of the input menu is displayed and turn further to select *Auto image alignment* and press **Enter**.

6. Input menu

An auto alignment of the current source is executed.

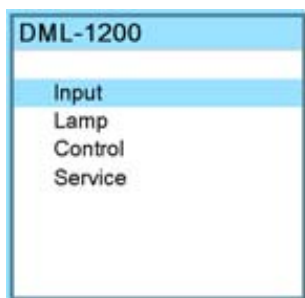


Image 6-3



Image 6-4

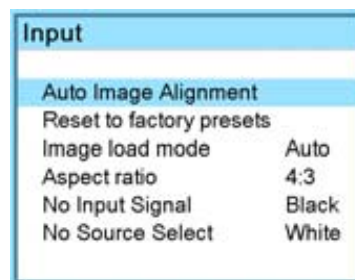


Image 6-5

6.3 Reset to factory presets

What can be done ?

All internally created image files due to switching from source or using the auto image alignment function can be cleared by a reset to factory presets.



Do not use this function during a show as it can delete previous created information necessary for the show. Use this function before the set up of a show.

How to reset

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select **Input** and press **Enter**.
The input selection menu opens.
3. Turn the jog dial until the second page of the input menu is displayed and turn further to select **Reset to factory presets** and press **Enter**.

A reset is executed.

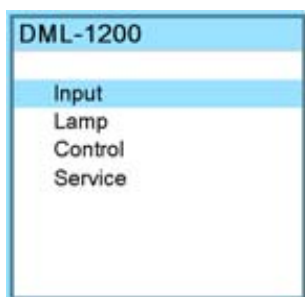


Image 6-6



Image 6-7

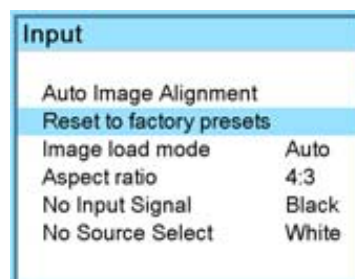


Image 6-8

6.4 Image load mode

What can be done ?

When the image lock mode is set to *Auto*, image files can be created and saved.

When the image lock mode is set to *Locked*, the current image files are immediately saved and locked. No new image files can be created or loaded. Settings can be changed during the show but are not saved. When reconnecting the source, the original settings are restored again.

When the source changes in lock mode, in some cases, the projected image can change, can distort or can fully disappear. Once the original source is restored, the projected image returns with the original settings.

Example : the lock mode is set to *Auto* while setting up the show. Once the setup is finished the lock mode is set to *Locked* so that the show always starts with the original settings.

How to set up

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Input* and press **Enter**.
The input selection menu opens.
3. Turn the jog dial until the second page of the input menu is displayed and turn further to select *Image load mode* and press **Enter**.
The option is selected.
4. Press **ENTER** to toggle between *AUTO* and *LOCKED*.
Auto: Image files can automatically be loaded.
Locked: Current image files are saved and locked.

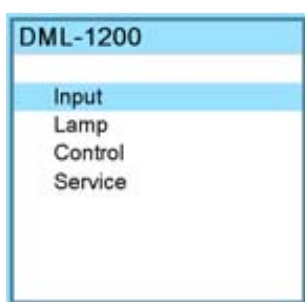


Image 6-9



Image 6-10

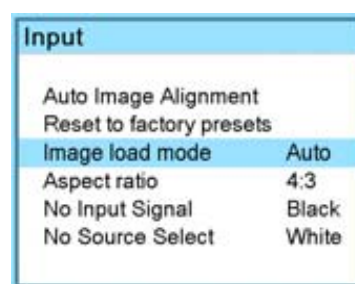


Image 6-11

6.5 Aspect ratio



Not for EMP source.

What can be done ?

The aspect ratio setting forces the device to project an image using a defined aspect ratio.

Aspect ratio	Description
4:3	Standard television format
16:9	Wide screen television format / anamorphic format
5:4	Workstation format

How to select an Aspect ratio

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Input* and press **Enter**.
The input selection menu opens.
3. Turn the jog dial until the second page of the input menu is displayed and turn further to select *Aspects ratio* and press **Enter**.
The option is selected.
4. Press **ENTER** to toggle between 4:3, 16:9 and 5:4 .

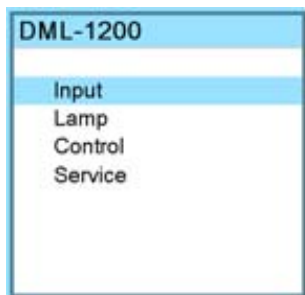


Image 6-12



Image 6-13

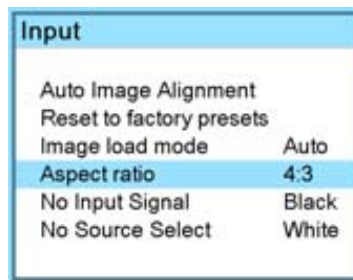


Image 6-14

6.6 No input signal

What can be done ?

When no input signal is available, the output can be set to black or white.

How to toggle

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Input* and press **Enter**.
The input selection menu opens.
3. Turn the jog dial until the second page of the input menu is displayed and turn further to select *No Input Signal* and press **Enter**.
The option is selected.
4. Press **ENTER** to toggle between *Black* or *White*.

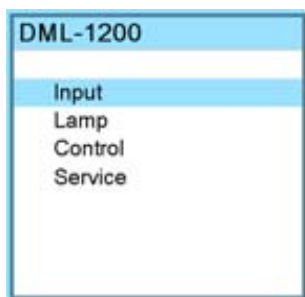


Image 6-15



Image 6-16

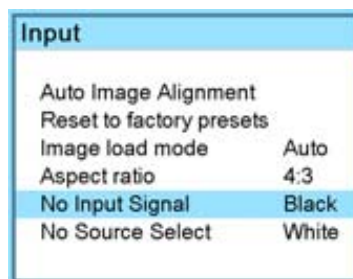


Image 6-17

6.7 No source selected

What can be done ?

When no source is selected, the output can be set to white or black.

How to toggle

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Input* and press **Enter**.
The input selection menu opens.
3. Turn the jog dial until the second page of the input menu is displayed and turn further to select *No Source Select* and press **Enter**.
The option is selected.
4. Press **ENTER** to toggle between *Black* or *White*.

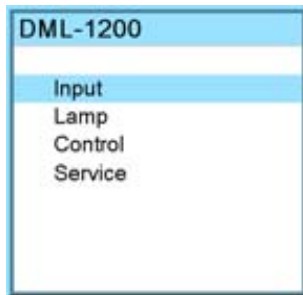


Image 6-18



Image 6-19

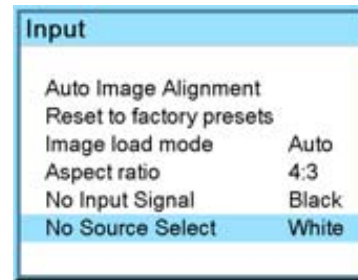


Image 6-20

7. LAMP MENU

Overview

- Overview flow
- Identification
- Status and run time overview lamps
- High altitude mode
- Lamp mode
- Lamp power

7.1 Overview flow

Overview

Level 1	Level 2	Level 3
Lamp		
	Identification	Serial number Article number Run time Remaining run time Number of strikes Version Status
	Overview	
	High altitude	Disabled Enabled
	Lamp mode	2 lamps 4 lamps
	Lamp power	Economic Normal

7.2 Identification

About

The lamp identification menu gives an overview of the most important parameters of the used lamps. It starts with the first lamp. Scrolling to other lamps is possible with the jog dial.

These parameters are:

- Serial number lamp
- Article number of the used lamp
- Run time since first start up of the lamp
- Remaining run time for a safe operation of the lamp
- Number of strikes since the first start up of the lamp
- Status of the lamp



These parameters are useful when calling for a service intervention.

How to display

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Lamp* and press **Enter**.
3. Turn the jog dial to select *Identification*. and press **Enter**.

The identification data of the first lamp is displayed.

Turn the jog dial to display the identification screen of another lamp.

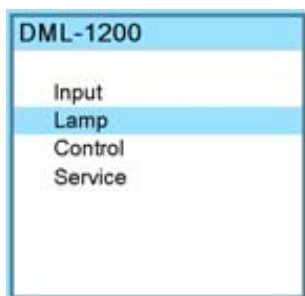


Image 7-1

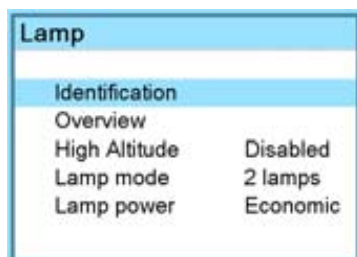


Image 7-2



Image 7-3

7.3 Status and run time overview lamps

Overview

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Lamp* and press **Enter**.
3. Turn the jog dial to select *Overview* and press **Enter**.

The lamp overview menu appears.

The status and the run time for each lamp is indicated.

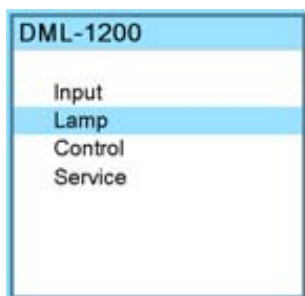


Image 7-4

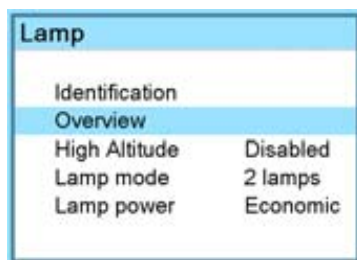


Image 7-5

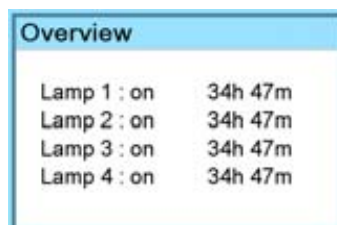


Image 7-6

About run time warnings and errors

When at least one lamp reaches 1500 hours, a warning is displayed on the local LCD to indicate the replacement of this lamp.

When all 4 lamps are running for more than 2000 hours, device will not start up anymore. Replacing all lamps is immediately necessary.

7.4 High altitude mode

What can be done ?

When using the device on a high altitude (less air density) enabling the high altitude mode will run the fans faster so that the cooling is guaranteed. This mode can also be used when increased cooling is required. The speed of the cooling fans will be increased.

Switching to high altitude mode will increase the noise level of the device.

How to toggle

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Lamp* and press **Enter**.
3. Turn the jog dial to select *High altitude* and press **Enter**.

The high altitude setting is selected.

4. Press **ENTER** to toggle between *Enabled* or *Disabled*.

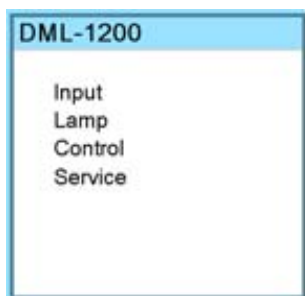


Image 7-7

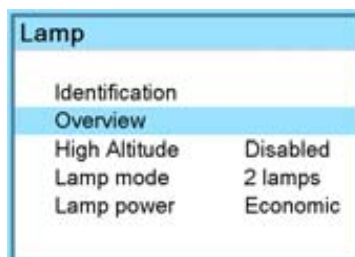


Image 7-8

- | | |
|----------|---|
| Enabled | Device is running with higher settings for the cooling fans. A correct cooling is started even when the air density is less (fans are running faster) |
| Disabled | Device is running with normal settings for the cooling fans. |

7.5 Lamp mode

What can be done ?

The projector head is equipped with 4 identical lamps. Depending on the lamp mode selection, the menu will show 4 lamps or 2 lamps when starting up the device.

In *2 lamps* mode, the projector head will always ignite lamp 1 & 4 or 2 & 3 depending on the run time. I will always use those with the lowest run time.

Switching from 4 lamps to 2 lamps is done immediately.

Switching from 2 lamps to 4 lamps is also done immediately.

But, switching from 4 lamps to 2 lamps and immediately again to 4 lamps is only done after respecting a cool down period of 2 minutes.

Using the projector in 2 lamps mode will reduce the noise level of the projector as the fan speeds are reduced.

How to toggle

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Lamp* and press **Enter**.
3. Turn the jog dial to select *Lamp mode* and press **Enter**.

The Lamp mode setting is selected.

4. Press **ENTER** to toggle between *2 lamps* or *4 lamps*.

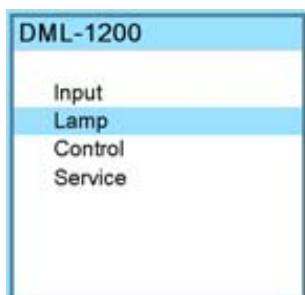


Image 7-9

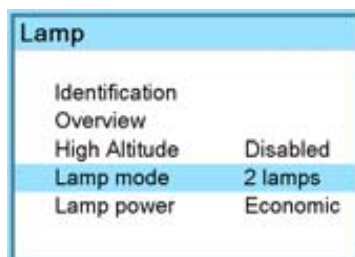


Image 7-10

- | | |
|---------|--|
| 2 lamps | Only 2 lamps will be ignited during start up. That can be the combination of lamp 1 & 4 or lamp 2 & 3. The selection depends on the current run time of the lamps. |
| 4 lamps | All 4 lamps will be ignited during start up. |

7.6 Lamp power

What can be done ?

The lamp power mode can be switched between *Normal* and *Economic*. When playing in economic mode, the life time of the active lamps will increase.

How to toggle

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Lamp* and press **Enter**.
3. Turn the jog dial to select *Lamp power* and press **Enter**.
The Lamp power setting is selected.
4. Press **ENTER** to toggle between *Economic* or *Normal*.

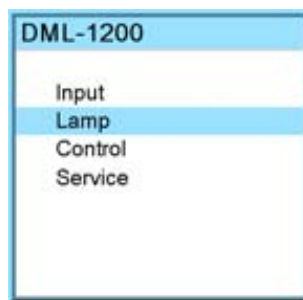


Image 7-11

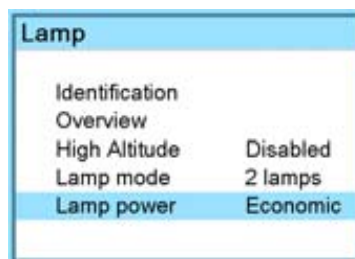


Image 7-12

- | | |
|----------|--|
| Economic | A reduced wattage is fed to the lamps. Reduced light output but a longer life time for the lamps. Lamp power is reduced to 83 %. |
| Normal | Maximum allowed power is fed to the lamps. Maximum light output is reached in this way. |

8. CONTROL MENU

Overview

- Overview flow
- Startup
- Standby
- Demo mode
- DMX data
- DMX address
- DMX universe
- Media player on - off
- LCD contrast
- Pan and Tilt encoder
- Network
- Auto shutdown
- Status LEDs
- DMX priority

8.1 Overview flow

Overview

Level 1	Level 2	Level 3
Start up		
Standby		
Demo mode	Demo mode	ON – OFF
	Demo delay	
	Demo cycles	
DMX Data	DMX channel 1 - 16	
DMX address		
DMX universe		
Media Player	On - Off	
LCD contrast		
Pan encoder		
Tilt encoder		
Network	Select DHCP	
	Select artnet	
	Select preset	
Auto shutdown	Enabled - Disabled	
Status LEDs	Enabled - Disabled	

Level 1

DMX priority

Level 2

Enabled - Disabled

Level 3

As there are too much items for the LCD display, the menu is split up in two pages. When turning the jog dial over the menu items, the next page is displayed automatically when turning further than the last item in the list.

8.2 Startup

What happens

When the device is started up, lamps start up and waits until new commands are sent to the device.

How to start up

1. Press **Enter** to start up the main menu.
 2. Turn the jog dial to select *Control* and press **Enter**.
 3. Turn the jog dial to select *Startup* and press **Enter**.
- The device starts up and moves to the homing position.

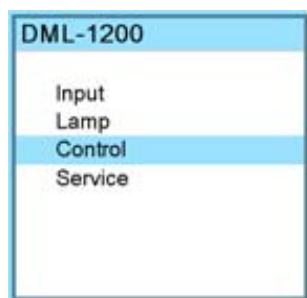


Image 8-1

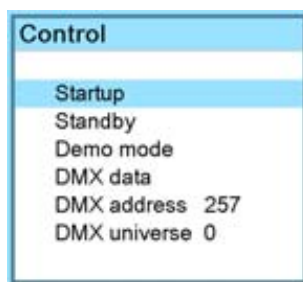


Image 8-2



When DMX data is applied to the device, it starts up but the head remains in its current position.

8.3 Standby

How to switch to standby

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial to select *Standby* and press **Enter**.

The device goes to standby. The fans are still running for a few minutes to cool down the head.

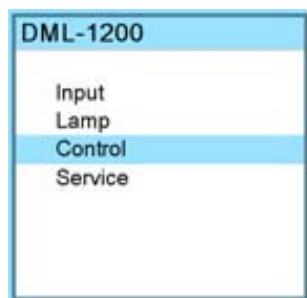


Image 8-3

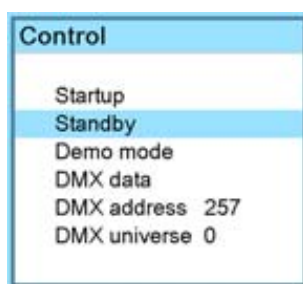


Image 8-4

8.4 Demo mode

What can be done ?

Within the DML-1200 a demo run is programmed. When the demo mode is activated, the demo run starts with an interval of x seconds. The number of times the demo run has been started is indicated in *Demo cycles*.

Practical use of the demo mode : for service purposes to verify the normal operation of the device.



Demo mode can only be started if no DMX data is applied to the device.

How to activate, deactivate the demo

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial to select *Demo mode* and press **Enter**.
The selection jumps to ON or OFF.
4. Turn the jog dial to select *ON* or *OFF* and press **Enter**.

ON Demo mode starts
OFF Demo mode stops

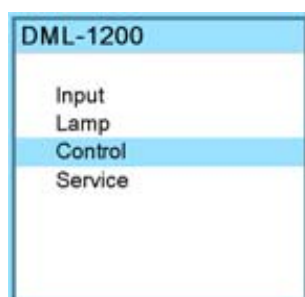


Image 8-5

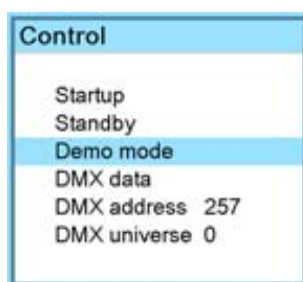


Image 8-6

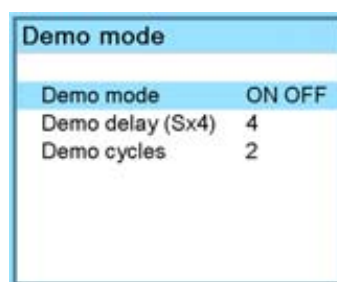


Image 8-7

How to set up the delay

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial to select *Demo delay* and press **Enter**.
The selection jumps to digit indication.
4. Turn the jog dial until the desired delay is obtained.

The delay is expressed in seconds multiplied by 4.

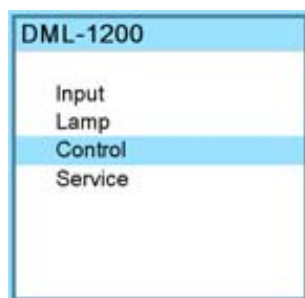


Image 8-8

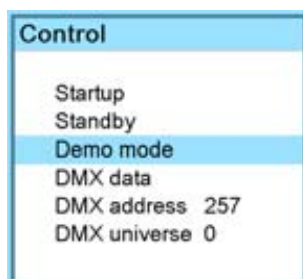


Image 8-9

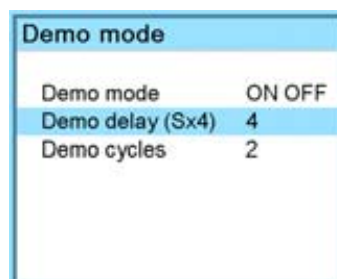


Image 8-10

8.5 DMX data

What can be done ?

The local generated DMX data can be used to control the device or to check if all functions are working properly. While changing a DMX value, the device follows immediately.

The first 16 channels can be controlled via the local generated DMX data. See "DMX chart, Digital moving luminiere", page 91 for more information about these channels.

How to change a DMX value

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial to select *DMX data* and press **Enter**.
4. Turn the jog dial to select a DMX channel and press Enter.

The selection jumps to the DMX value.

5. Turn the jog dial until the desired DMX value is reached.

While changing the value, the selected function is updated immediately.

6. Press **Enter** to return to the channel selection.

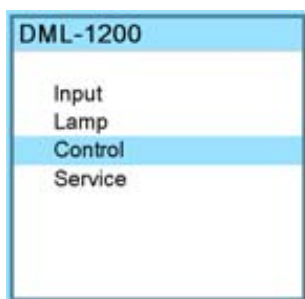


Image 8-11

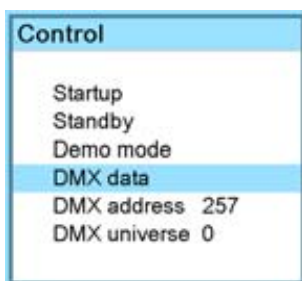


Image 8-12

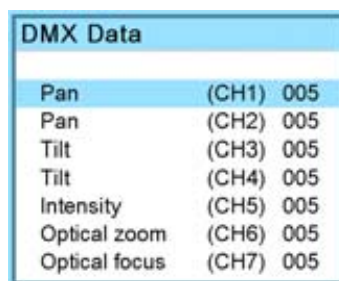


Image 8-13

8.6 DMX address

What should be done ?

Before a device can execute DMX commands, a unique address should be given to the device. That address can vary from 1 to 512.

How to set a DMX address

1. Press **Enter** to start up the main menu.
 2. Turn the jog dial to select *Control* and press **Enter**.
 3. Turn the jog dial to select *DMX address* and press **Enter**.
- The selection jumps to the numeric value. which is the DMX address.
4. Turn the jog dial until the desired address is reached.
 5. Press **Enter** to record that address and to return to the menu selection.

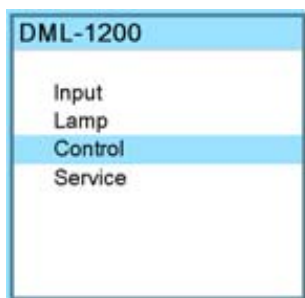


Image 8-14

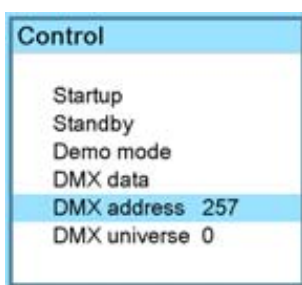


Image 8-15

8.7 DMX universe

What can be done ?

One DMX universe can contain up to 4 DML-1200 devices with a Media Player and up to 10 devices without Media Player. If you have more devices to control, group them in different DMX universes.

How to set a DMX universe

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial to select *DMX universe* and press **Enter**.
The selection jumps to the numeric value. which is the DMX universe.
4. Turn the jog dial until the desired universe is reached.
5. Press **Enter** to record that address and to return to the menu selection.

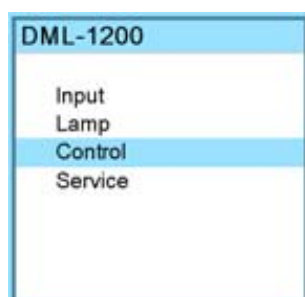


Image 8-16

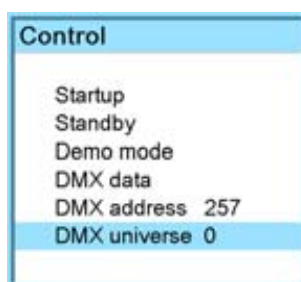


Image 8-17

8.8 Media player on - off

What is possible ?

If the DML is equipped with an embedded media player, this media player can be switched on or off (enabled or disabled).

How to switch the media player

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the second page of the control menu is displayed and turn further to select *Media player* and press **Enter**.
The selection jumps to on or off.
4. Press **Enter** to toggle the media player setting.
Note: *It can take a time before the media player responds as it has to start up or closing a windows session.*
The selection returns to the menu setting.

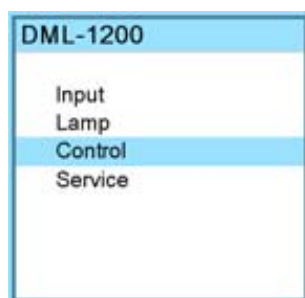


Image 8-18

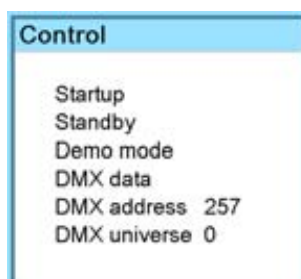


Image 8-19

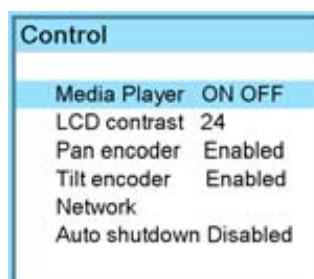


Image 8-20

8.9 LCD contrast

What is possible ?

The contrast of the local LCD can be adapted to the needs of the environment.

How to change

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the second page of the control menu is displayed and turn further to select *LCD contrast* and press **Enter**.
4. Turn the jog dial to adjust the local contrast and press **Enter**.

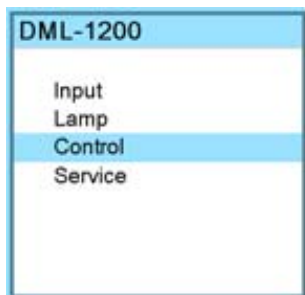


Image 8-21



Image 8-22

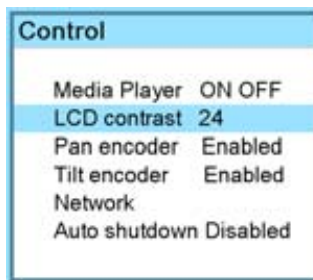


Image 8-23

8.10 Pan and Tilt encoder

What is possible ?

When the DML-1200 is panned or tilted due to an external intervention, e.g. a push, it can always return to its original position when pan and or tilt encoder is enabled.

Pan en tilt encoder can be separately enabled or disabled.

This function is handy when servicing the device. Disable pan and tilt encoder and you can turn the device manually in any desired direction.

Pan encoder

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the second page of the control menu is displayed and turn further to select *Pan encoder* and press **Enter**.
4. Turn the jog dial to select *Enabled* or *Disabled*.

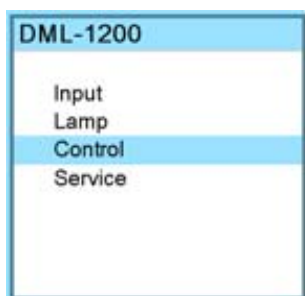


Image 8-24



Image 8-25

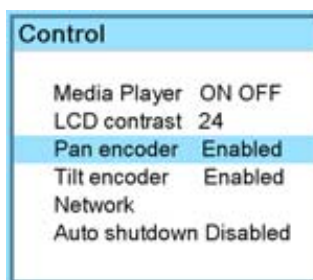


Image 8-26

Tilt encoder

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the second page of the control menu is displayed and turn further to select *Tilt encoder* and press **Enter**.
4. Turn the jog dial to select *Enabled* or *Disabled*.

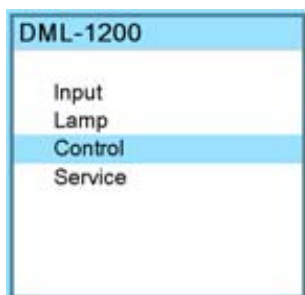


Image 8-27

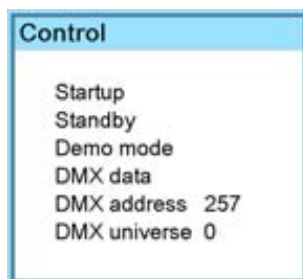


Image 8-28

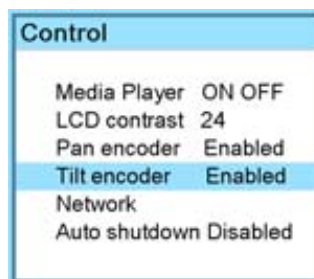


Image 8-29

8.11 Network

What is possible ?

A selection can be made how a network can be obtained, via DHCP, via Art-Net or a preset network. When a choice is made, the network settings are given in the 3 last lines.

How to make the selection

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the second page of the control menu is displayed and turn further to select *Network* and press **Enter**.
4. Turn the jog dial to select the desired network setting, DHCP, Art-Net or preset.

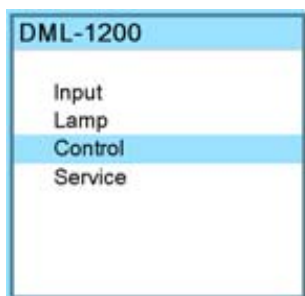


Image 8-30

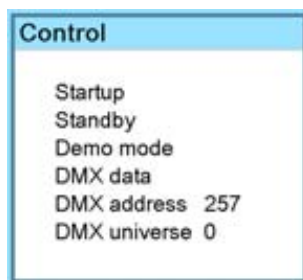


Image 8-31

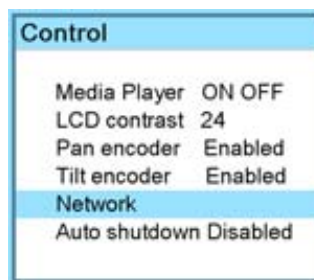


Image 8-32

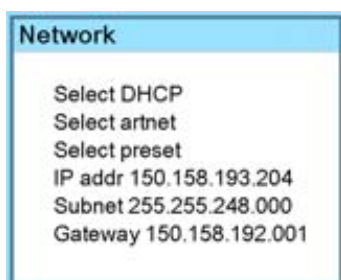


Image 8-33

About changing the IP address

When the network IP address needs to be changed to allow e.g. software upgrade, the power must be removed and reconnected again before Projector Toolset can reconnect to the device.

8.12 Auto shutdown

What can be done ?

The device can shutdown automatically after 5 minutes when no DMX is sent to its DMX input AND when it is not connected with a Projector Toolset or an Art-Net DMX device.

How to set up

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the second page of the control menu is displayed and turn further to select *Auto shutdown* and press **Enter**.
The selection jumps to disabled or enabled
4. Press **Enter** to toggle between Disabled or Enabled.

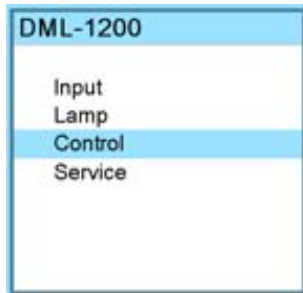


Image 8-34



Image 8-35

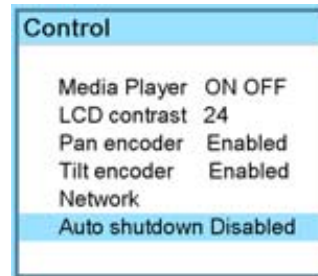


Image 8-36

- Enabled Auto shutdown will happen after 5 minutes when no DMX is sent to the input AND no connection is available with a Projector Toolset or an Art-Net DMX device.
- Disabled no auto shutdown possible.

About Auto shutdown and video

If the DML should not shutdown while video is connected, then the shutdown setting should be set to *Disabled*.

8.13 Status LEDs

What can be done ?

Status LEDs for Ethernet connection and inputs can be disabled, as well as the backlight of the LCD panel. When disabled, no indication is on the status LEDs and nothing is displayed on the LCD panel.

With the status LEDs setting *enabled*, the LCD panel lights up when pressing on **Enter**. When no more action is taken on the menus, the backlight goes out after a certain time. With **Exit**, it is possible to quit the menu immediately and at the same time the backlight goes out.

How to set up

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the third page of the control menu is displayed and turn further to select *Status LEDs* and press **Enter**.
The selection jumps to disabled or enabled
4. Press **Enter** to toggle between *Disabled* or *Enabled*.

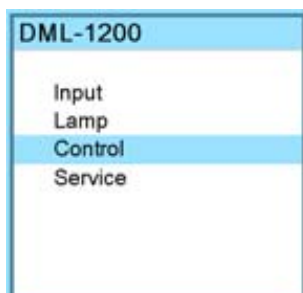


Image 8-37

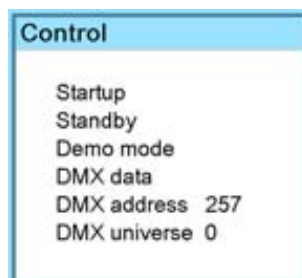


Image 8-38

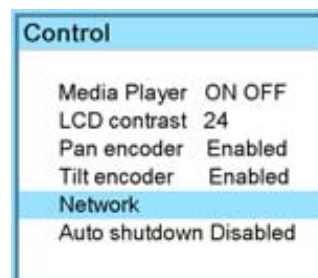


Image 8-39

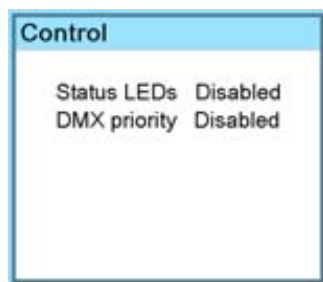


Image 8-40

Enabled Status LEDs are on and LCD panel backlight can light up.

Disabled Status LEDs are out and the LCD panel backlight is out..

8.14 DMX priority

What can be done ?

DMX control via the DMX input can be set as the priority control input. When DMX priority is enabled, any DMX command sent via Projector Toolset will be overwritten when at the same time a DMX command is sent to the DMX input.

How to set up

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Control* and press **Enter**.
3. Turn the jog dial until the third page of the control menu is displayed and turn further to select *DMX priority* and press **Enter**.
The selection jumps to disabled or enabled
4. Press **Enter** to toggle between *Disabled* or *Enabled*.

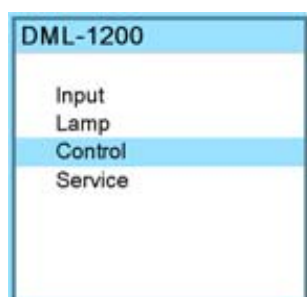


Image 8-41

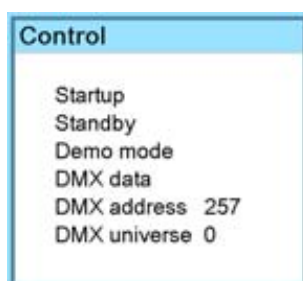


Image 8-42

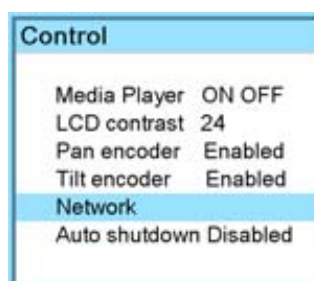


Image 8-43

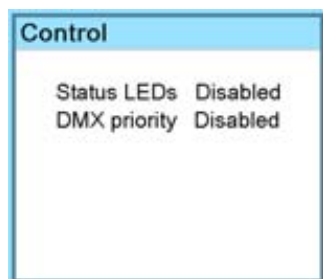


Image 8-44

Enabled DMX input has the priority

Disabled No priority for the DMX input

9. SERVICE MENU

Overview

- Overview flow
- Identification
- Diagnosis
- Service patterns
- Calibration

9.1 Overview flow

Overview

Level 1	Level 2	Level 3
Service		
	Identification	IP address
	Diagnosis	
		Version table
		Voltages
		Temperatures
		Fan speeds
		Device status
		Error logging
	Service patterns	
	Calibration	
		Index delay
		Pan calibration
		Tilt calibration
		Dimmer calibration
		Zoom calibration
		Focus calibration
		Cyan calibration
		Magenta calibration
		Yellow calibration
		CTO calibration
		Aperture calibration
		IRIS calibration

9.2 Identification

What is possible

Via the identification screen, the following items can be consulted:

- IP address of the device
- Serial number of the device
- Run time since first startup
- Installed software package

How to consult

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Identification* and press **Enter**

The device typical items are displayed.

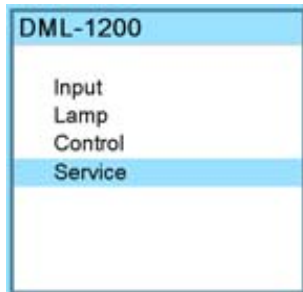


Image 9-1



Image 9-2

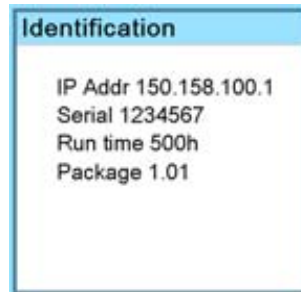


Image 9-3

9.3 Diagnosis

9.3.1 Version table

What can be displayed ?

The software version of the different components inside the device can be displayed. As the list is too long to be displayed on single LCD display, when reaching the last item in the first page turn the jog dial further in the same direction and the second page is automatically displayed on the LCD display.

The following items are given in the list:

- Main software
- Fan controller software
- Lamp info units
- FPGA
- CPLD
- Video FPGA
- Fiberlink TX and RX

How to display an overview

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Diagnosis* and press **Enter**.
4. Turn the jog dial to select *Version table* and press **Enter**.

The first page of the version table is displayed. As there are more items than space available on the LCD, when turning the jog dial further than the last item a new page will be displayed.

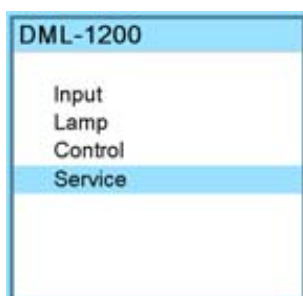


Image 9-4

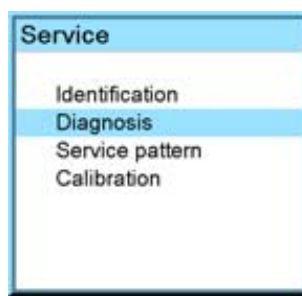


Image 9-5


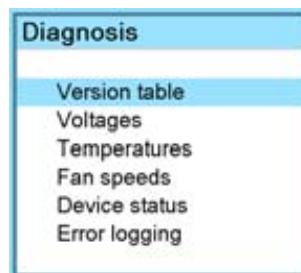


Image 9-6

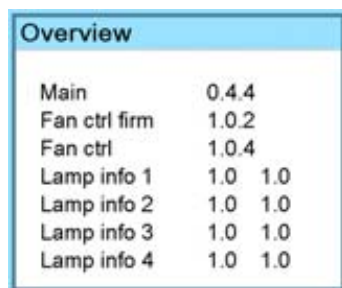

Overview		
Main	0.4.4	
Fan ctrl firm	1.0.2	
Fan ctrl	1.0.4	
Lamp info 1	1.0	1.0
Lamp info 2	1.0	1.0
Lamp info 3	1.0	1.0
Lamp info 4	1.0	1.0

Image 9-7

9.3.2 Voltages


What can be displayed ?

The current value of the different measurement points inside the device.

How to display


1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Diagnosis* and press **Enter**.
4. Turn the jog dial to select *Voltages* and press **Enter**.

The first page of the voltage table is displayed. As there are more items than space available on the LCD, when turning the jog dial further than the last item a new page will be displayed.

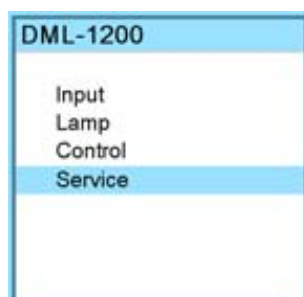


DML-1200
Input
Lamp
Control
Service

Image 9-8

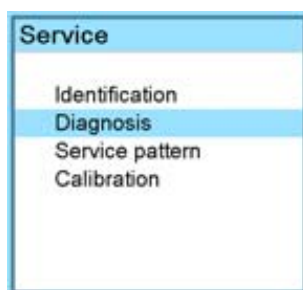


Service
Identification
Diagnosis
Service pattern
Calibration

Image 9-9

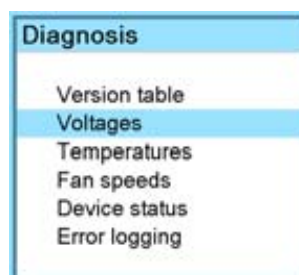

Diagnosis
Version table
Voltages
Temperatures
Fan speeds
Device status
Error logging

Image 9-10

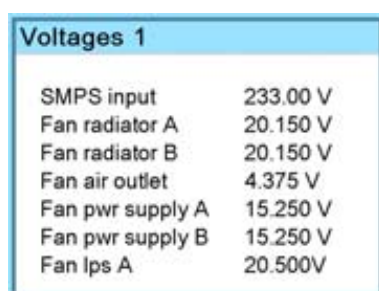

Voltages 1	
SMPS input	233.00 V
Fan radiator A	20.150 V
Fan radiator B	20.150 V
Fan air outlet	4.375 V
Fan pwr supply A	15.250 V
Fan pwr supply B	15.250 V
Fan lps A	20.500V

Image 9-11

9.3.3 Temperatures

What can be displayed ?

The current value of the different sensors inside the device.

How to display

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Diagnosis* and press **Enter**.
4. Turn the jog dial to select *Temperatures* and press **Enter**.

9. Service menu

The first page of the temperature table is displayed. As there are more items than space available on the LCD, when turning the jog dial further than the last item a new page will be displayed.



Image 9-12

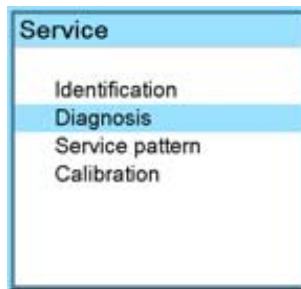


Image 9-13

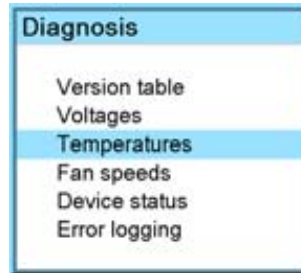


Image 9-14

Temperatures 1	
Dmd	35°C
Ambient	25°C
Tec	37°C
Lps 1	46°C
Lps 2	45°C
Lps 3	46°C
Lps 4	45°C

Image 9-15

9.3.4 Fan speeds

What can be displayed ?

The current speed of the different fans inside the device.

How to display

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Diagnosis* and press **Enter**.
4. Turn the jog dial to select *Fan speeds* and press **Enter**.

The first page of the fan speeds table is displayed. As there are more items than space available on the LCD, when turning the jog dial further than the last item a new page will be displayed.



Image 9-16

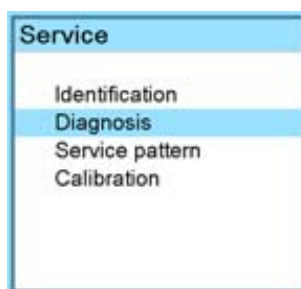


Image 9-17


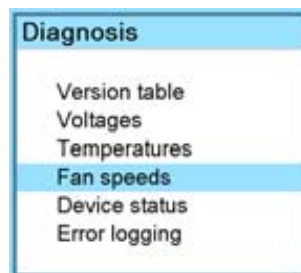


Image 9-18

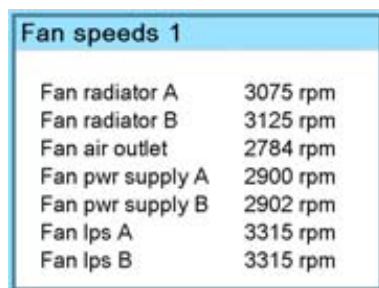

Fan speeds 1	
Fan radiator A	3075 rpm
Fan radiator B	3125 rpm
Fan air outlet	2784 rpm
Fan pwr supply A	2900 rpm
Fan pwr supply B	2902 rpm
Fan lps A	3315 rpm
Fan lps B	3315 rpm

Image 9-19

9.3.5 Device status


What can be displayed ?

The status of different parts inside the device is given in a table. As the list is too long to be displayed on single LCD display, when reaching the last item in the first page turn the jog dial further in the same direction and the second page is automatically displayed on the LCD display.

How to display


1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Diagnosis* and press **Enter**.
4. Turn the jog dial to select *Device status* and press **Enter**.

The first page of the device status table is displayed. As there are more items than space available on the LCD, when turning the jog dial further than the last item a new page will be displayed.

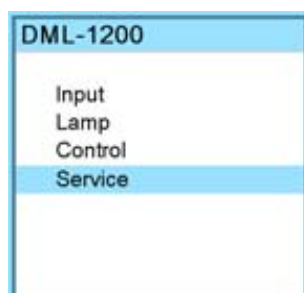


DML-1200	
Input	
Lamp	
Control	
Service	

Image 9-20

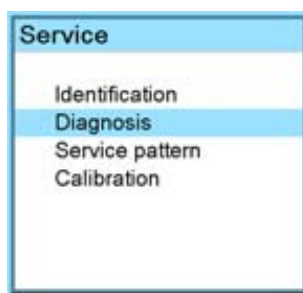


Service	
Identification	
Diagnosis	
Service pattern	
Calibration	

Image 9-21

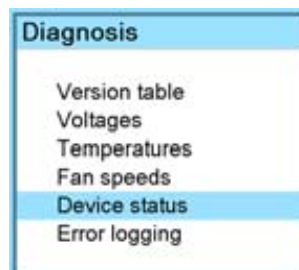

Diagnosis	
Version table	
Voltages	
Temperatures	
Fan speeds	
Device status	
Error logging	

Image 9-22

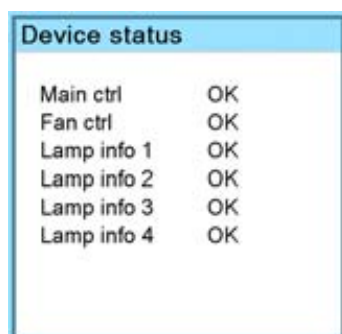

Device status	
Main ctrl	OK
Fan ctrl	OK
Lamp info 1	OK
Lamp info 2	OK
Lamp info 3	OK
Lamp info 4	OK

Image 9-23

9.3.6 Error logging

What can be displayed ?

A full logging can be requested since the device is electrically connected. This logging contains info lines, warnings and errors. An info, warning or error is always displayed in two lines.

The structure of the logging is as follow:

First line:

- a counter number : the number starts by 1 increments each time something is logged. The counter is reset when the device is powered off.
- Type of logging : info, warning, error. An error stops the device.
- Absolute time when the logging has taken place. Absolute time is the time since the electrical startup of the device.

Second line:

- Description line: explanation about the logging. Sometimes followed by a numeric value.

4 Warning 7h32

Fcb analog warning : 57

How to display

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Diagnosis* and press **Enter**.
4. Turn the jog dial to select *Error logging* and press **Enter**.

The first page of the error logging table is displayed. If there are more error than space available on the LCD, when turning the jog dial further than the last error a new page will be displayed.

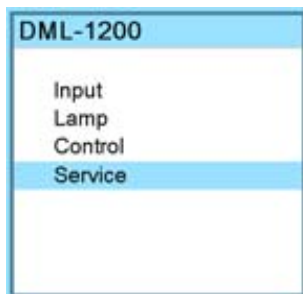


Image 9-24

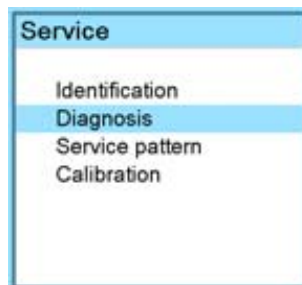


Image 9-25

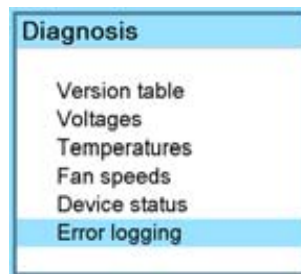


Image 9-26

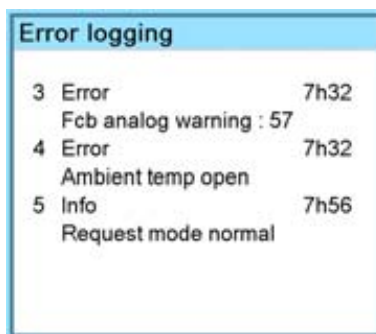


Image 9-27

9.4 Service patterns

What is possible ?

Different patterns are available for service purposes.

The service patterns:

- No pattern
- Circular on/off
- Full color
- Outline
- Horizontal sawtooth
- Vertical sawtooth
- Viewscape
- Crosshatch
- Horizontal multi burst
- Vertical multi burst
- Level 50%
- Calibration

Color patterns for the current selected service pattern

- White
- Red
- Green
- Blue
- Cyan
- Magenta
- Yellow
- Black

A color pattern can be added to each service pattern. Therefore, select first your service pattern and then your color pattern.

How to activate a pattern

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Service pattern* and press **Enter**.
4. Turn the jog dial to select a pattern and press **Enter**.

The selected pattern or pattern color is displayed.

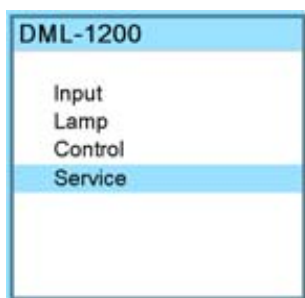


Image 9-28

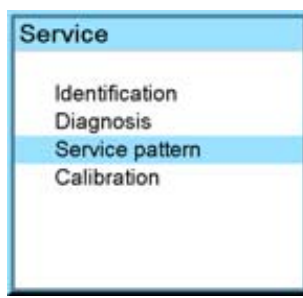


Image 9-29

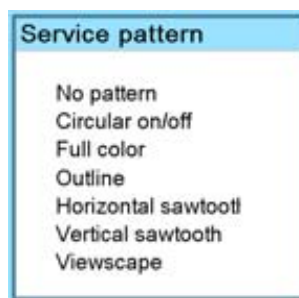


Image 9-30

9.5 Calibration

9.5.1 Index delay

Before starting

Set the DML in video mode by sending a value between 64 and 95 on DMX channel 13. See "DMX data", page 42 for more information on how to select a channel and set data

What should be done ?

The index delay value should be adjusted so that the phase of the color wheel is correctly aligned. When correctly align a monochrome red image e.g. will be correctly displayed. When there is a misalignment, this image will show color distortion (discoloration) at the top and the bottom of the image.

This setting is normally factory aligned.

Project e.g. a monochrome red image.

How to set

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Calibration* and press **Enter**.
4. Turn the jog dial to select *Index delay* and press **Enter**.
5. Turn the jog dial to change the current value and press **Enter**.

Turn the jog dial until a monochrome red image is displayed and no color distortion (discoloration) is visible at the top and the bottom of the image.

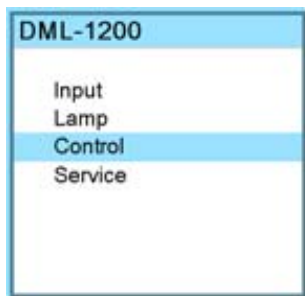


Image 9-31

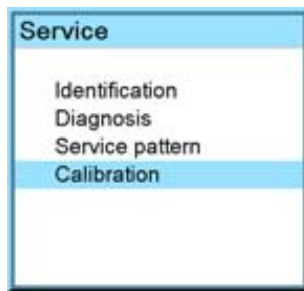


Image 9-32

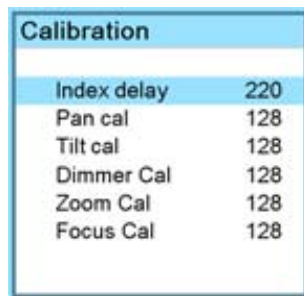


Image 9-33

9.5.2 Aperture calibration

Before starting

Set the DML in light mode by sending a value between 0 and 31 on DMX channel 13 to the device. See "DMX data", page 42 for more information on how to select a channel and set data.

What should be done ?

Adjust the aperture so that the center of the aperture is in the middle of light beam.

How to check ? Adjust until the width of the de-focused area is equal on the outline of the circular projected spot.

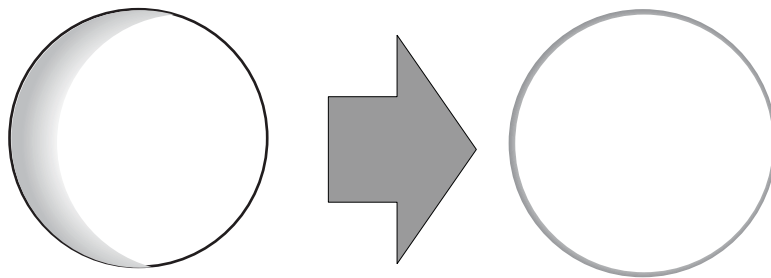


Image 9-34

How to adjust

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Calibration* and press **Enter**.
4. Turn the jog dial over the last item to open the second page.
5. Turn the jog dial to select *Aperture cal* and press **Enter**.
6. Turn the jog dial to change the current value and press **Enter**.

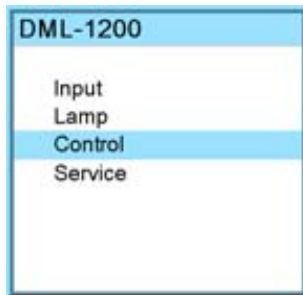


Image 9-35

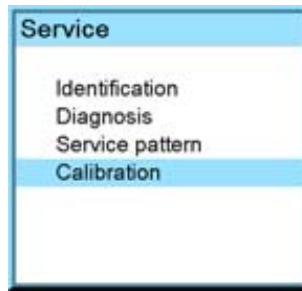


Image 9-36

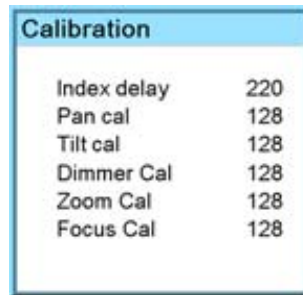


Image 9-37

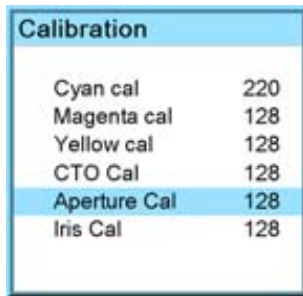


Image 9-38

9.5.3 Device calibration

What is possible ?

Via the calibration menu, it is possible to align the different items of one device with another device so that you are sure that their start position is equal.

How to calibrate an item

1. Press **Enter** to start up the main menu.
2. Turn the jog dial to select *Service* and press **Enter**.
3. Turn the jog dial to select *Calibration* and press **Enter**.
4. Turn the jog dial to select an item or turn the jog dial over the last item to open the second menu and select an item and press **Enter**.
5. Turn the jog dial to change the current value and press **Enter**.

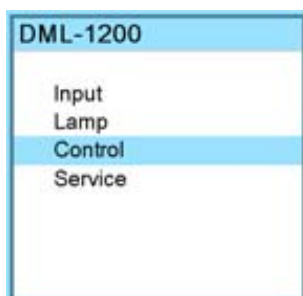


Image 9-39

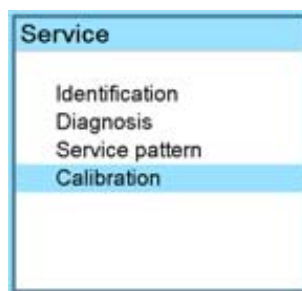


Image 9-40

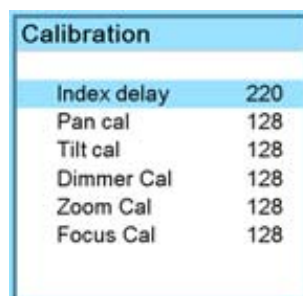


Image 9-41

10. MOVING LIGHT CONTROL VIA DMX

Overview

- Pan - Tilt
- Intensity
- Optical zoom - focus
- Shutter - Strobe
- Cyan - Magenta - Yellow
- CTO (Color temperature origin)
- Mode selection
- Iris
- Control channel

10.1 Pan - Tilt

Channels

Channel	Description	Value	Default	Action
1	Pan Coarse	0 - 255	128	Left - right movement
2	Pan Fine	0 - 255	0	
3	Tilt Coarse	0 - 255	128	Forward - backward movement
4	Tilt Fine	0 - 255	0	

10.2 Intensity

Channel 5

Adjusts the intensity between 0 and 100% when sending a value between 0 and 255.

10.3 Optical zoom - focus

Overview

Channel	Description	Value	Default	Action
6	Zoom	0 - 255	128	Changes from a wide to a narrow beam
7	Focus	0 - 255	128	Changes from close to distant focus

10.4 Shutter - Strobe

Channel 8

Value	Default	Action
0 - 31	0	Shutter open
32 - 47		Strobe from slow to fast
48 - 255		For future expansion

10.5 Cyan - Magenta - Yellow

Overview

Channel	Description	Value	Default	Action
9	Cyan	0 - 255	0	Open to full cyan
10	Magenta	0 - 255	0	Open to full magenta
11	Yellow	0 - 255	0	Open to full yellow

10.6 CTO (Color temperature origin)

Channel 12

Adjusts the color temperature origin of the projected beam so that native white light of the projection lamp can be changed to a more yellow white to imitate the light of a light bulb.

Adjustments are done between 3000°K (DMX value zero) and 6200°K (DMX value 255)..

10.7 Mode selection

About mode selection

The DML-1200 can be used in:

- Light mode : circular light beam that can change in color (monochrome video).
- Video mode circular : video image produced with a circular light beam. Content outside the circular area is cropped.
- Video mode : normal rectangular video image.

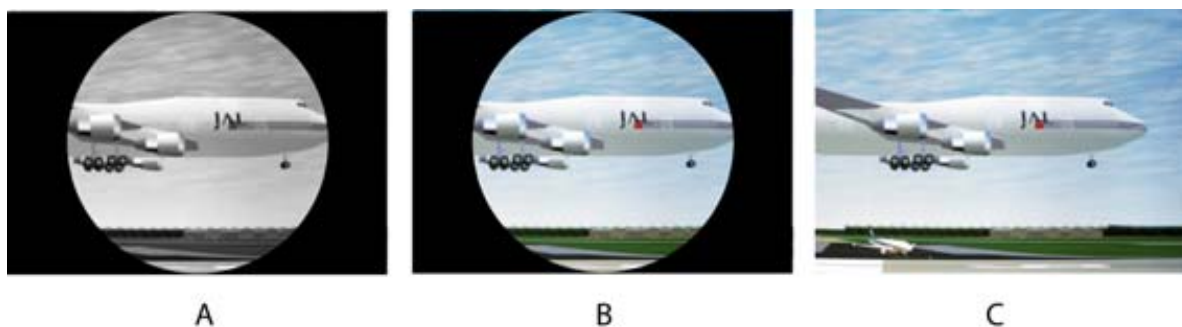


Image 10-1
Mode selection

- A Light mode¹
B Video mode circular¹
C Video mode

Channel 13

Value	Default	Action
0 - 31	0	Light mode
32 - 63		Video mode circular
64 - 95		Video mode
96 - 255		For future expansion

1. Black area represents the wall

10.8 Iris

About the Iris

When projecting images in light mode, a circular beam is used. As the device is equipped with a rectangular DMD, the corners do not produce light to create the circular beam but it was still possible that for certain contents (darker images) the corners are slightly visible and not really black. To avoid this and to create a really black area around the circular beam an iris is mounted in front of the lens.

This iris can be adjusted from fully open to almost closed (± 1 cm remains open). When the projector is on, the small opening should prevent overheating of the lens and the iris mechanism.

Channel 14

Adjusts the iris from open to almost closed.

Value	Default	Action
0 - 190	0	Adjusting the iris from open to almost closed
190 - 255		Not used

10.9 Control channel

Channel 15

Value	Default	Action
0 - 31	0	Disarmed
32 - 47		Reset (start homing sequence)
48 - 63		Homing without pan and tilt
64 - 79		Homing, pan and tilt only
80 - 95		Homing CMY only
96 - 127		Lamp on
128 - 159		Lamp off
160 - 191		For future expansion
192 - 223		EMP on/off
223 - 255		For future expansion

About EMP on/off

Before an EMP on/off command can be sent on channel 16, that channel 16 must be disarmed for at least 10 seconds.

So nothing will happen when sending e.g. combination *Lamp On* followed with *EMP on/off*. The status of the EMP will not change.

To change the status you should send the following combination : *Lamp On – Disarmed* for at least 10 seconds – *EMP on/off*.

11. IMAGE CONTROL VIA DMX

11.1 Introduction

Overview

The projected image can be controlled via DMX using channels 16 to 51.

The following functions are available

- Source selection
- Brightness
- Contrast
- Orientation
- Blanking
- Soft edge
- Warping

11.2 Source selection

Channel 16

Value	Default	Action
0 - 31	0	No source selected, default white image displayed
32 - 63		RGBHW selected
64 - 95		HD-SDI/SDI selected
96 - 127		DVI selected
128 - 159		Media player selected
160 - 191		No source selected / for future expansion
192 - 223		No source selected / for future expansion
224 - 255		No source selected / for future expansion

11.3 Brightness - Contrast - Saturation

Overview

Channel 17 adjusts the brightness between 0 and 100% when sending a value between 0 and 255.

Channel 18 adjusts the contrast between 0 and 100% when sending a value between 0 and 255.

Channel 19 adjusts the saturation between 0 and 100% when sending a value between 0 and 255.

11.4 Orientation

Channel 20

Value	Default	Action
0 - 31	0	Normal
32 - 63		Mirror
64 - 95		Flip
96 - 127		Flip + Mirror
128 - 255		For future expansion



Image 11-1
Orientation

- A Normal
- B Flip
- C Mirror
- D Flip + Mirror

11.5 Blanking

Overview

Blanking can be done on the left, right, top and bottom of the image and affect only the edges of the projected image.

Each blanking adjustment is done on two channels, one for a coarse adjustment and one for a fine adjustment.

Start with the coarse adjustment until the desired blanking is almost installed and continue with the fine adjustment to exactly adjust the blanking.

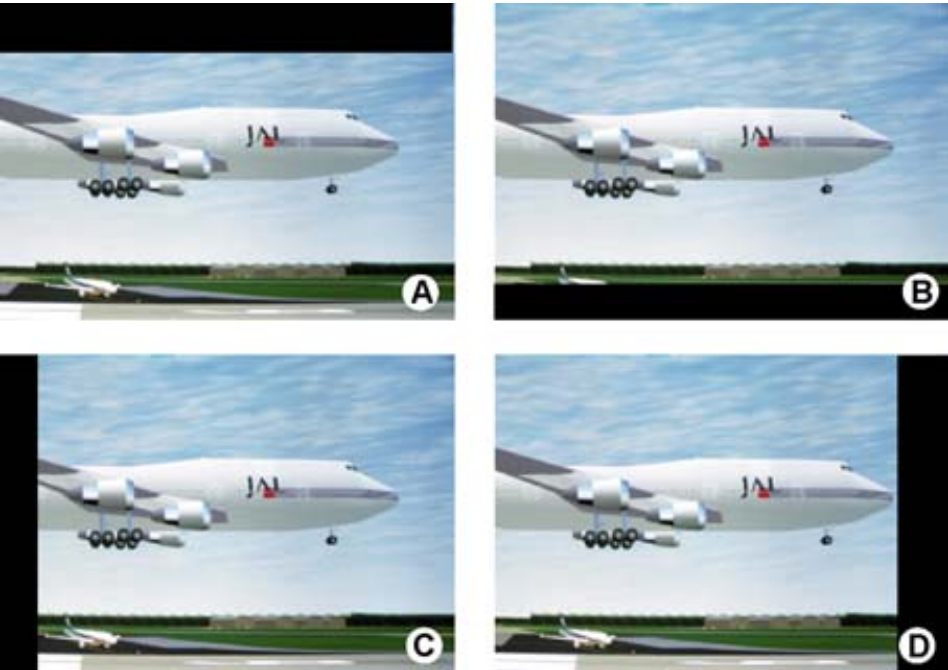


Image 11-2
Blanking adjustment

- A Top blanking
- B Bottom blanking
- C Left blanking
- D Right blanking

Channels

Channel	Description	Value	Default	Action
21	Blanking left Coarse	0 - 255	0	Adjust the left blanking
22	Blanking left Fine	0 - 255	0	

Channel	Description	Value	Default	Action
23	Blanking right Coarse	0 - 255	0	Adjust the right blanking
24	Blanking right Fine	0 - 255	0	
25	Blanking top Coarse	0 - 255	0	Adjust the top blanking
26	Blanking top Fine	0 - 255	0	
27	Blanking bottom Coarse	0 - 255	0	Adjust the bottom blanking
28	Blanking bottom Fine	0 - 255	0	

To adjust e.g. the top blanking, send first a value to channel 24 for a coarse adjustment and then send a value to channel 25 for a fine adjustment.

11.6 Soft edge

Overview

When working in a multichannel setup, soft edge possibilities enable an image blending that gives the appearance of a single image view. Without soft edge, the transition between two projected images will be visible. By adding a soft edge value, a smooth transition can be obtained.

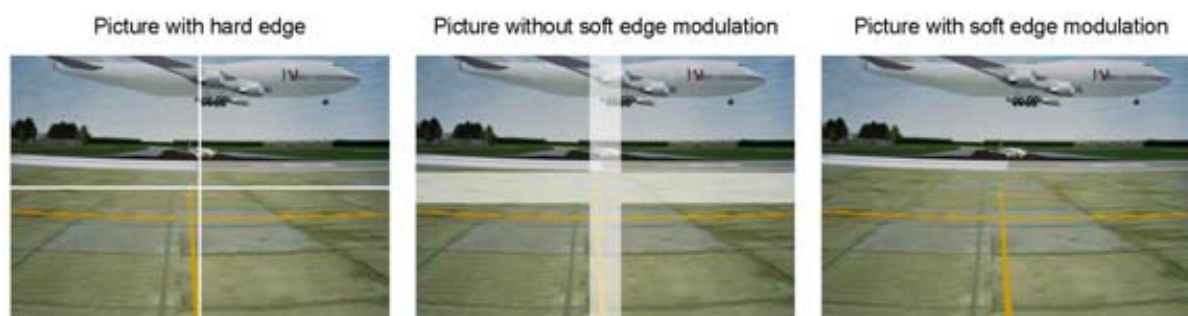


Image 11-3

Channels

Channel	Description	Value	Default	Action
29	Soft edge left	0 - 255	0	Adjust the soft edge left side
30	Soft edge right	0 - 255	0	Adjust the soft edge right side
31	Soft edge top	0 - 255	0	Adjust the soft edge top side
32	Soft edge bottom	0 - 255	0	Adjust the soft edge bottom side

11.7 Warping

Overview

Image warping is the process of digitally manipulating an image to compensate for the distortion of the screen. Consequently, it can also be used to generate an image with irregular shape.

While an image can be transformed in various ways, pure warping doesn't affect the colors.

Some examples of warped images, using the warp geometry settings:



Image 11-4
Example 1 : distorted image



Image 11-5
Example 2 : distorted image

Hardware Warp and Hardware KeyStone are available for low latency, pixel accurate warp and keystone on any of the live sources. 15 warp files created with Projector Toolset can be recalled.

Channel 36

Warp files created with Projector Toolset can be loaded in the DML and can be called for execution via a DMX value on channel 36. 15 different files can be stored on the DML.

Value	De-fault	Action
0 - 7	0	Warp disabled
8 - 15		Load warp file 1
16 - 23		Load warp file 2
24 - 31		Load warp file 3
32 - 39		Load warp file 4
40 - 47		Load warp file 5
48 - 55		Load warp file 6
56 - 63		Load warp file 7
64 - 71		Load warp file 8
72 - 79		Load warp file 9
80 - 87		Load warp file 10
88 - 95		Load warp file 11
96 - 103		Load warp file 12
104 - 111		Load warp file 13
112 - 119		Load warp file 14
120 - 127		Load warp file 15
128 - 135		Load warp parameters
136 - 247		For future expansion
248 - 255		Warp enabled

Channel 36 and 37

Warp parameters. Reserved for future expansion.

12. MAINTENANCE

About this chapter

This chapter contains detailed maintenance procedures like lens cleaning, etc. These procedures can easily be performed by the operator.

Overview

- Cleaning the lens
- Cleaning the exterior of the DML-1200
- Level check of cooling liquid
- Safety cable check

12.1 Cleaning the lens



To minimize the possibility of damage to optical coatings, or scratches to lens surfaces, we have developed recommendations for cleaning. **FIRST**, we recommend you try to remove any material from the lens by blowing it off with clean, dry deionized air. **DO NOT** use any liquid to clean the lenses.

Necessary tools

Toraysee™ cloth (delivered together with the lens kit). Order number : R379058.

How to clean the lens ?

1. Always wipe lenses with a CLEAN Toraysee™ cloth.
2. Wipe lenses in a one single direction.
Warning: Do not wipe back and forwards across the lens surface as this tends to grind dirt into the coating.
3. Do not leave the cleaning cloth in either an open room or lab coat pocket, as doing so can contaminate the cloth.
4. If smears occur when cleaning lenses, replace the cloth. Smears are the first indication of a dirty cloth.



CAUTION: Do not use fabric softener when washing the cleaning cloth or softener sheets when drying the cloth.

Do not use liquid cleaners on the cloth as doing so will contaminate the cloth.



Other lenses can also be cleaned safely with this Toraysee™ cloth.

12.2 Cleaning the exterior of the DML-1200

How to clean the exterior

1. Unplug the power cord.
2. Clean the housing with a damp cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution.

12.3 Level check of cooling liquid

What should be done ?

The projector is liquid cooled. When running with a low liquid cooling level then the cooling capacity is strongly reduced which results in higher temperatures inside the projector. These higher temperatures can cause an interruption of your show as the lamps can be switched off by the software as a preventive step.

To avoid this problem, we strongly advise to check at least every 3 months the cooling level in the cooling reservoir of the projector.



WARNING: Unplug the device from the power outlet before starting the check procedure !

How to check

1. Standing at the tilt lock side, turn the head horizontally until the lens is pointing to the left.

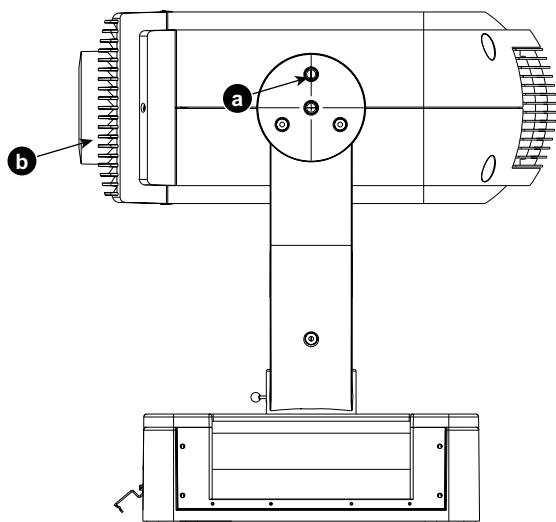


Image 12-1
Locking head

- a Locking button
- b Lens side

2. Loosen both captive screws.

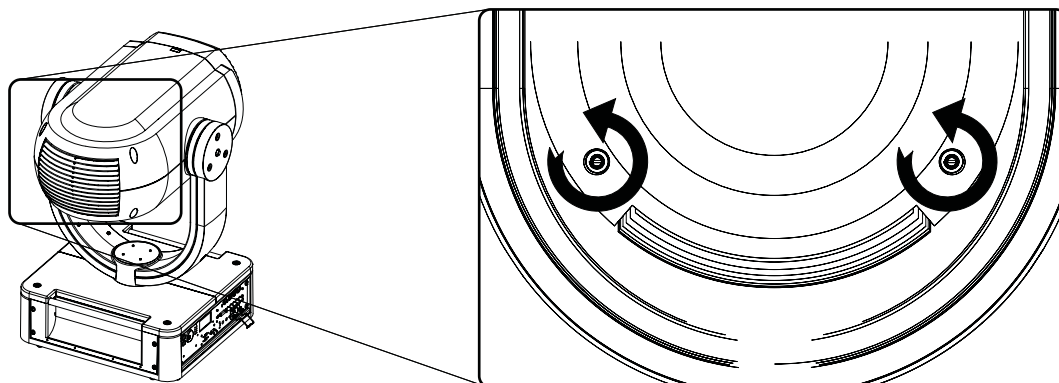


Image 12-2
Captive screws top cover

3. Gently lift up the top cover and press on the indicated part until the arm of the cover is fixed.


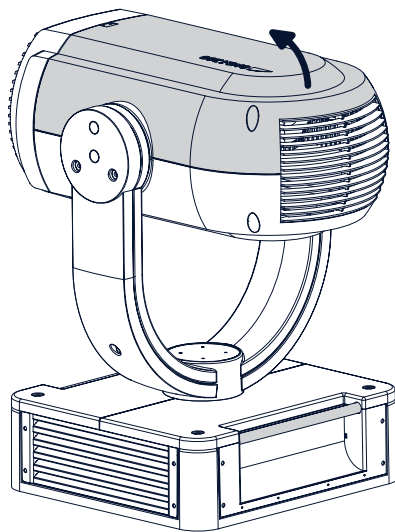


Image 12-3
Open cover

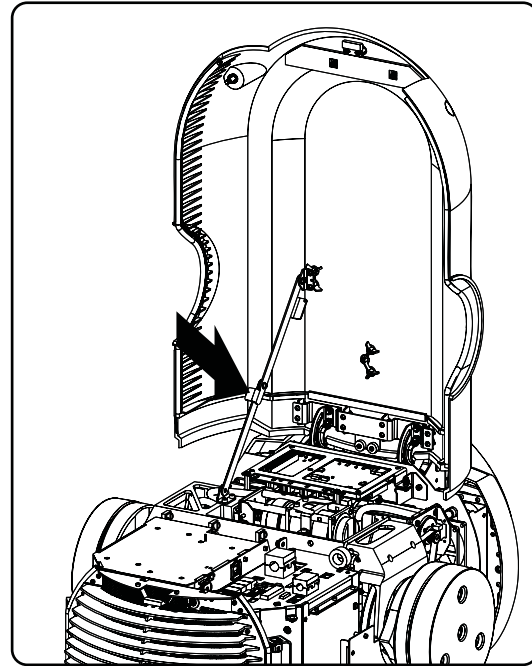

The software of the projector blocks any movement.

4. Check the cooling liquid level.

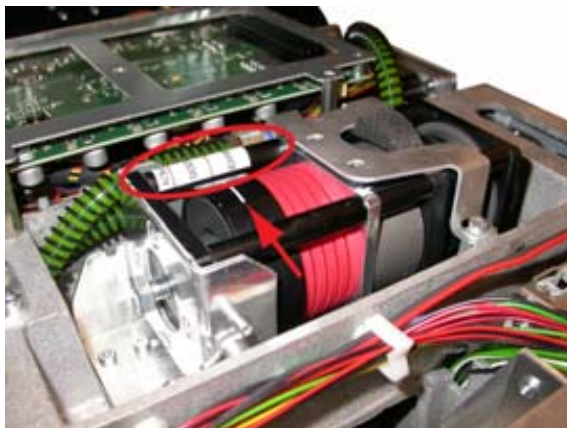


Image 12-4
Cooling liquid check

When the white indication line is in the *service* area, then the reservoir has to be topped-up again. To top-up the reservoir, see chapter "13. Servicing", "Top-up the reservoir with cooling liquid", page 86

When the white indication is in the *good* area, no corrective action should be taken. Close the top cover and fasten both captive screws.

12.4 Safety cable check

What should be done ?

2 internal safety cables are mounted inside the DML-1200 to protect the audience when some critical parts would break inside the device. To make sure that both cables are always in good condition, it is recommended to inspect these cable each time when checking the liquid cooling level (every 3 months) or at least once a year.

Check for :

- damage of the insulation around each cable.
- damage to the core of the cable. No metal fibres may be broken or visible outside the insulation.

When damage is found, contact a qualified service technician to replace the safety cable.



WARNING: Unplug the device from the power outlet before starting the check procedure !

How to check

1. Open the covers of the base unit, yoke and projector head (see chapter Service for more information on how to open the device)
2. Execute a visual inspection of the cable.
3. Use a cotton cloud to check if metal fibres are broken.
Cable 1 starts at point 1, goes through one side of the yoke to the projector head, through the bridge and back through the other side of the yoke to make a junction in point 4.
Cable 2 starts at point 2 and goes to the corner of the base unit (point 3).



Image 12-5
Internal safety cable, routing

- 1 Start safety cable 1
- 2 Start safety cable 2
- 3 End safety cable 2
- 4 Junction and end point of safety cable 1

13. SERVICING

About this chapter

This chapter contains general servicing procedures like lamp replacement, dust filter replacement etc. Note that some of these procedures may only be performed by qualified technical service personnel. These procedure are marked with a warning.


Extra service information

Extra service information for qualified service technicians can be found on Barco's Partnerzone (URL <https://my.barco.com>). Registration is necessary.

If you are not yet registered, click on Partnerzone registration and follow the instructions. With the created login and password, it is possible to enter the partnerzone where you can find extra service information about the projector.



CAUTION: When opening one of the shell covers (colored in next drawing) of the projection head of the DML while power is supplied, the movement (pan and tilt) of the head will be blocked by the software.

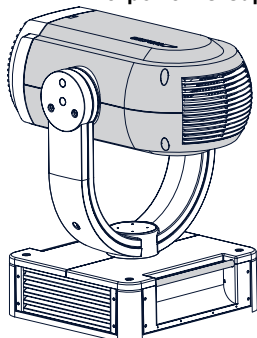

WARNING: Before starting any service actions, unplug the power cord from the wall outlet !



HEPA

High Efficiency Particulate Absorbing

Overview

- Removal of the front cover
- Opening the top cover on the lamp units side
- Opening the top cover on the LPS box side
- Remove the yoke covers and shields
- Remove top cover of base unit
- Replacement of the dust filters on the front side
- Replacement of the dust filter at the inside of the head
- Replacement of the dust filter in the base
- Removal of a lamp unit
- Mounting a new lamp unit
- Top-up the reservoir with cooling liquid



CAUTION: All HEPA filters of the DML-1200 must be replaced on a regular basis, depending on the environment conditions of the device.

13.1 Removal of the front cover

Necessary tools

Flat screwdriver

How to remove the front cover

1. Release both captive screws on each side of the cover.

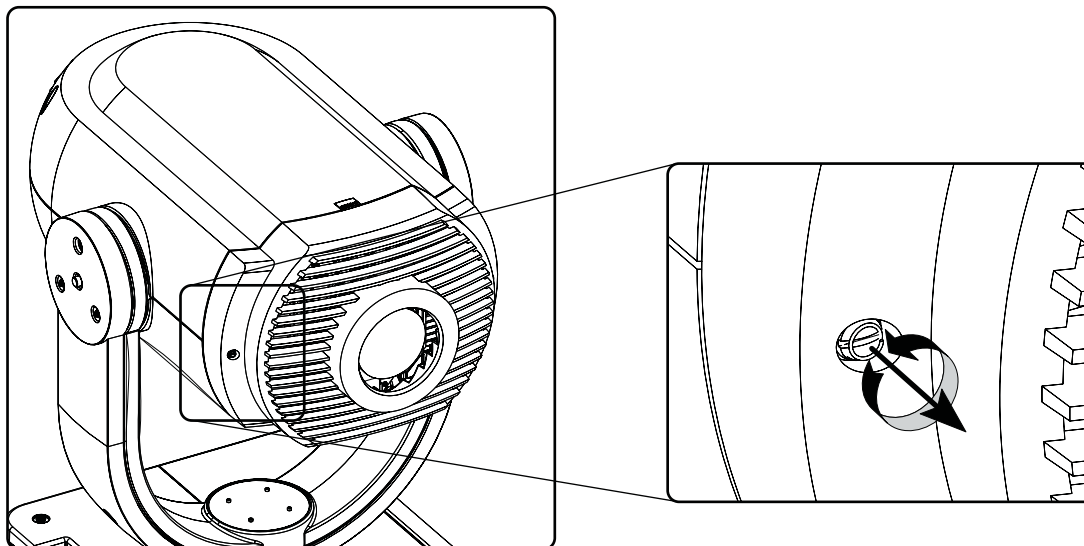


Image 13-1
Release front cover

2. Pull the front cover forward to remove from the projector.

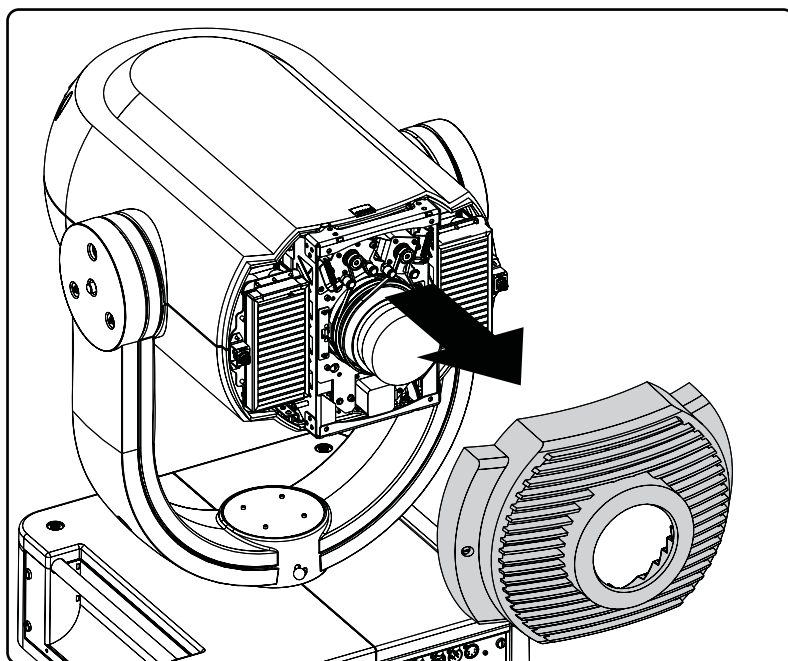


Image 13-2
Remove front cover

13.2 Opening the top cover on the lamp units side

Necessary tools

Flat screwdriver

How to open

1. Stand on the side of the locking buttons and turn the head so that the lens points to the right.

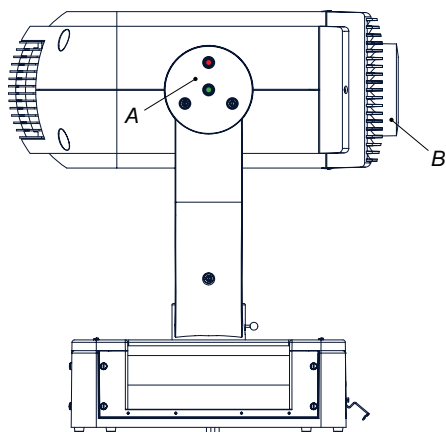


Image 13-3
Filter location

- A Locking of the head
- B Lens side

The upper cover can now be opened.

2. Lock the head.
3. Loosen both captive screws.

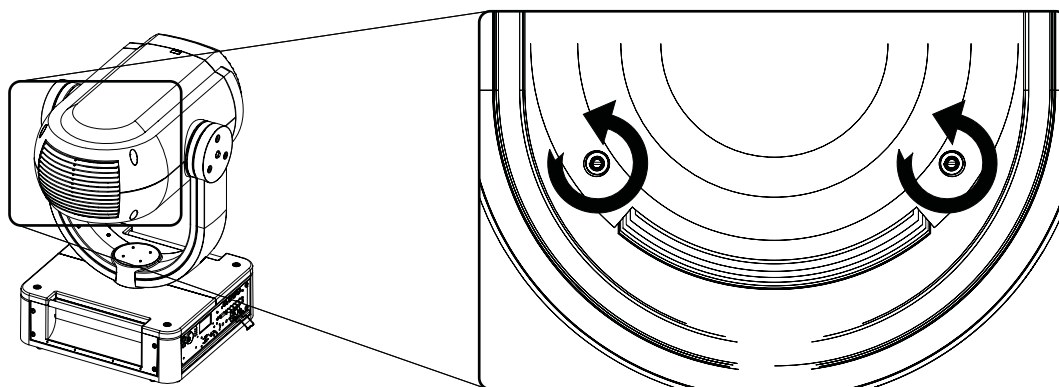


Image 13-4
Captive screws top cover

4. Lift up the top cover.

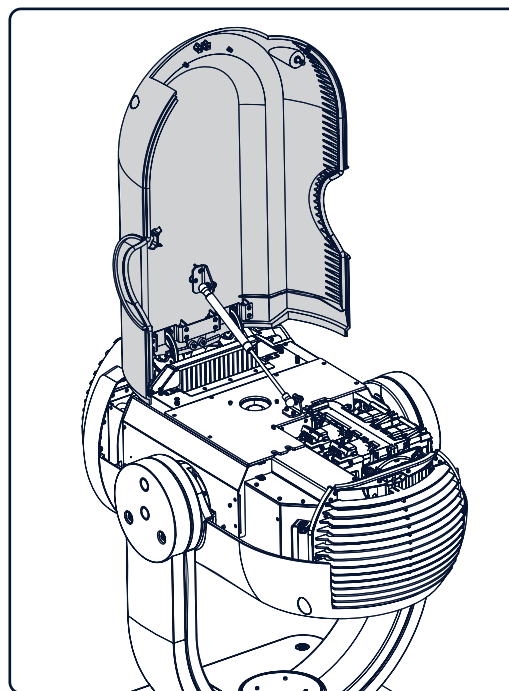
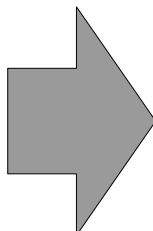
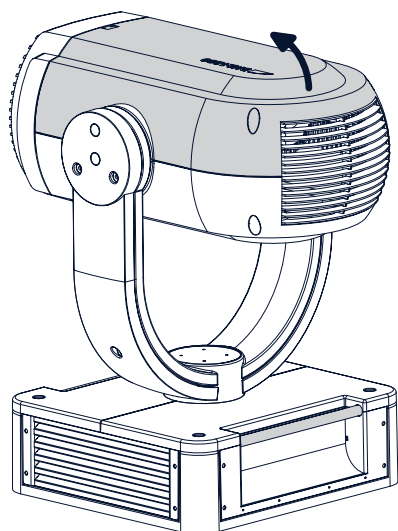


Image 13-5
Open top cover

A hydraulic arm supports the cover.

13.3 Opening the top cover on the LPS box side

Necessary tools

Flat screwdriver

How to open

1. Standing at the tilt lock side, turn the head horizontally until the lens is pointing to the left.

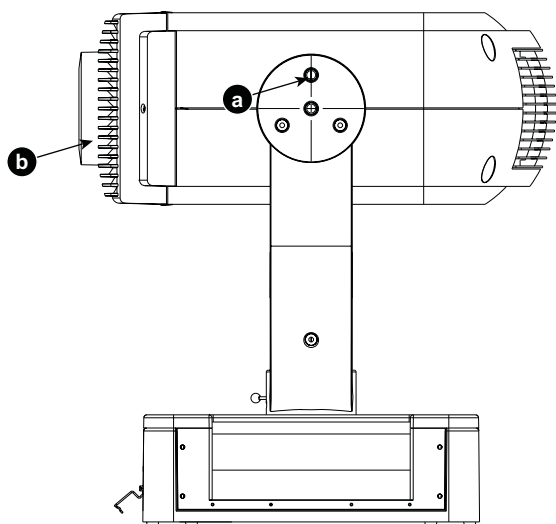


Image 13-6
Locking head

- a Locking button
- b Lens side

2. Loosen both captive screws.

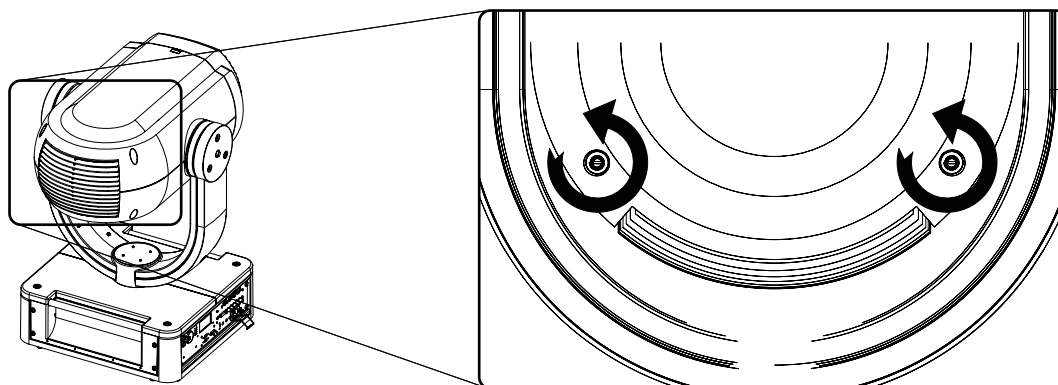


Image 13-7
Captive screws top cover

3. Gently lift up the top cover and press on the indicated part until the arm of the cover is fixed.

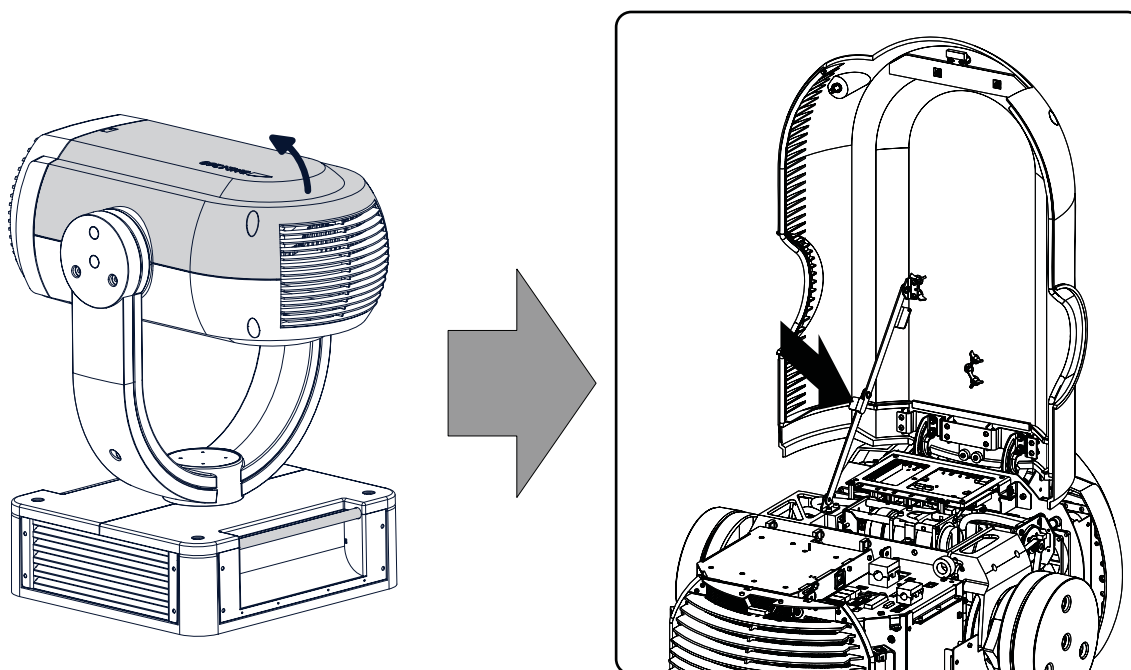


Image 13-8
Open cover

13.4 Remove the yoke covers and shields

Necessary tools

- Flat screwdriver 4 mm
- Allen key 2.5 mm

How to remove

1. Turn the 3 indicated captive screws a quarter turn counter clockwise to open the connection.

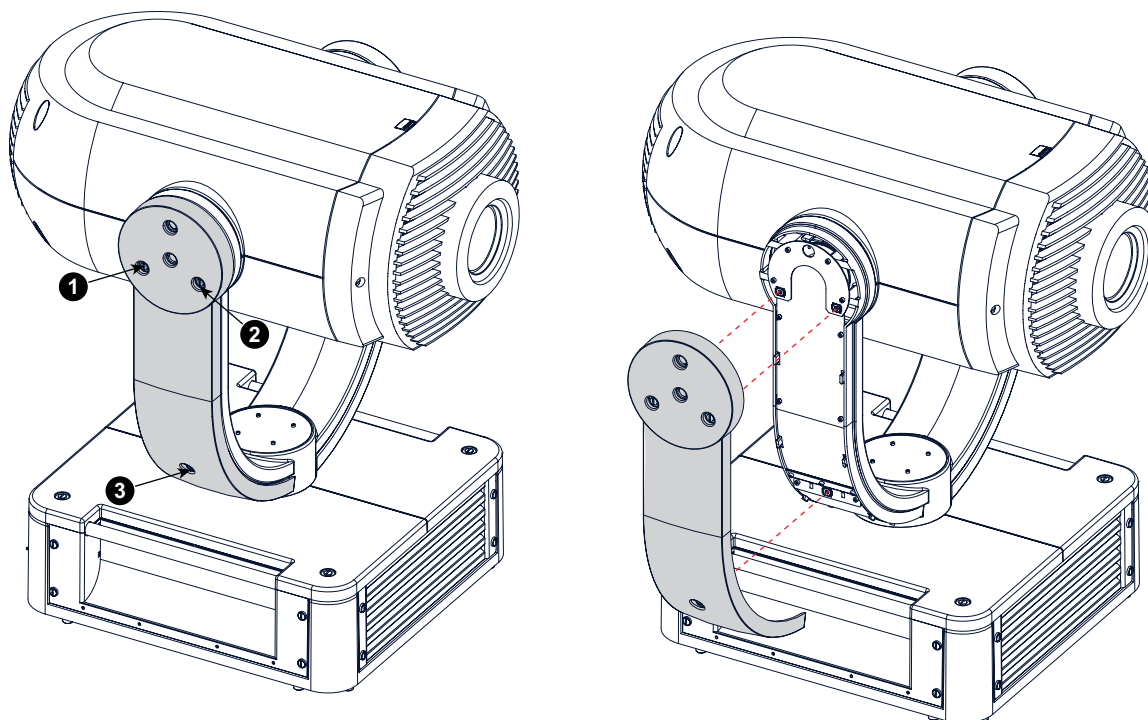


Image 13-9
Remove yoke cover

2. Pull off the yoke cover.
3. Remove the protection shields. Turn out the indicated screws.

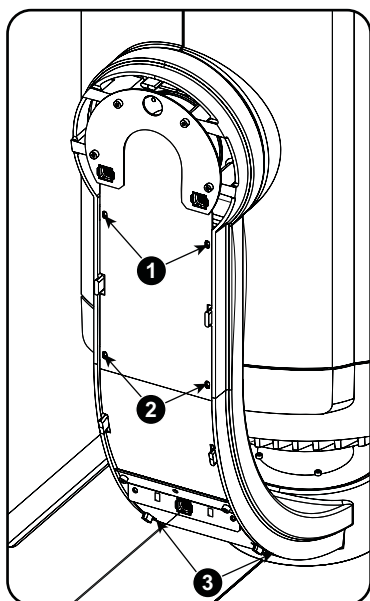


Image 13-10
Remove shielding

4. Loosen the 4 indicated screws of the yoke center.
Turn the plate a quarter turn and take it off.

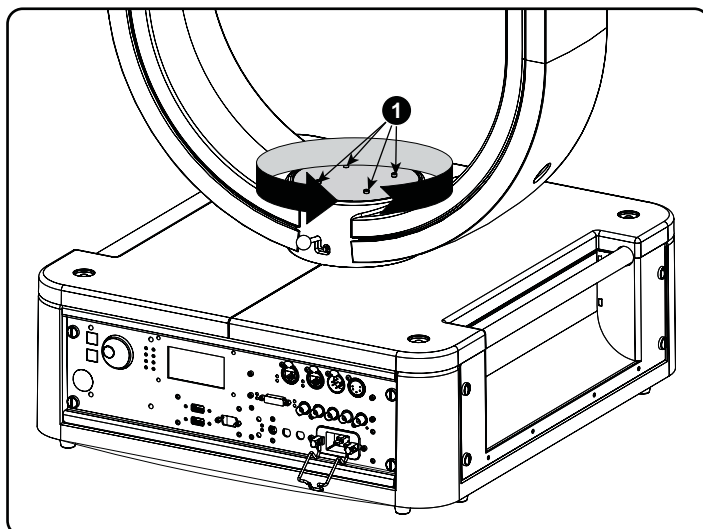


Image 13-11
Remove center cover

13.5 Remove top cover of base unit

How to remove

1. Turn the captive screws a quarter counter clockwise.

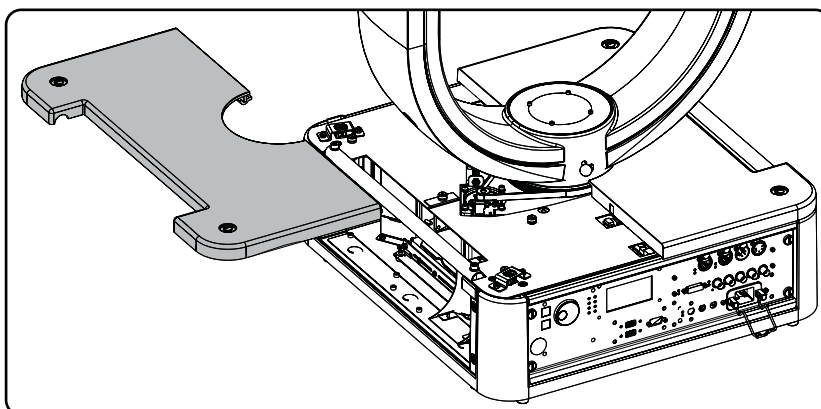
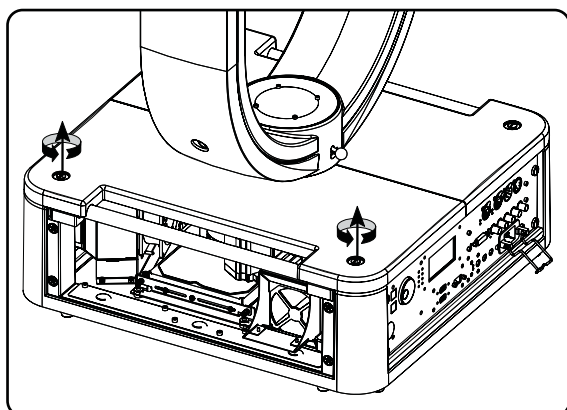


Image 13-12
Top cover, remove

2. Take off the cover.
3. Repeat both steps for the second half of the cover
4. To remove the protection cover, start with the cover near the input side and loosen the 7 captive screws (1 to 7).


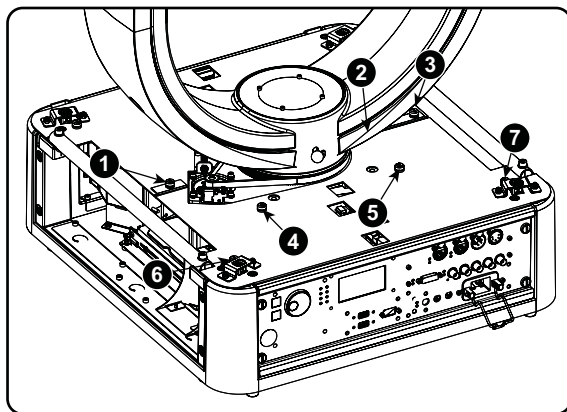


Image 13-13



5. Take off the plate.
6. Repeat for the other part of the protection cover. Loosen the 6 captive screws (8 to 13) and take off the cover.

13.6 Replacement of the dust filters on the front side

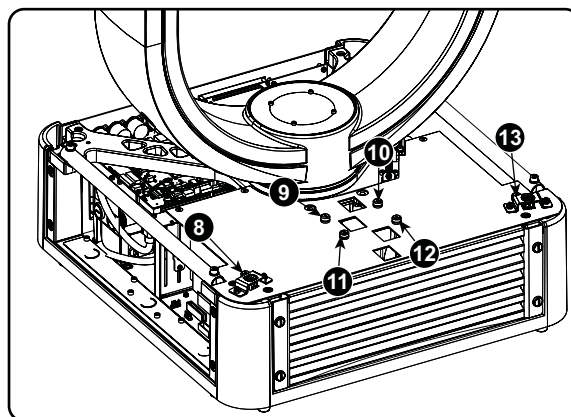

Once the front cover is removed, no tools are necessary to replace the dust filter.

Necessary parts

New HEPA dust filter

How to replace the dust filter

1. Unplug the power cord from the device.
2. Remove the front cover, see "Removal of the front cover", page 73.
3. Remove the HEPA filter on the front side by pulling the spring clamp (A) on the upper side away from the filter and then pivot the filter a little (B) and take it out (C).

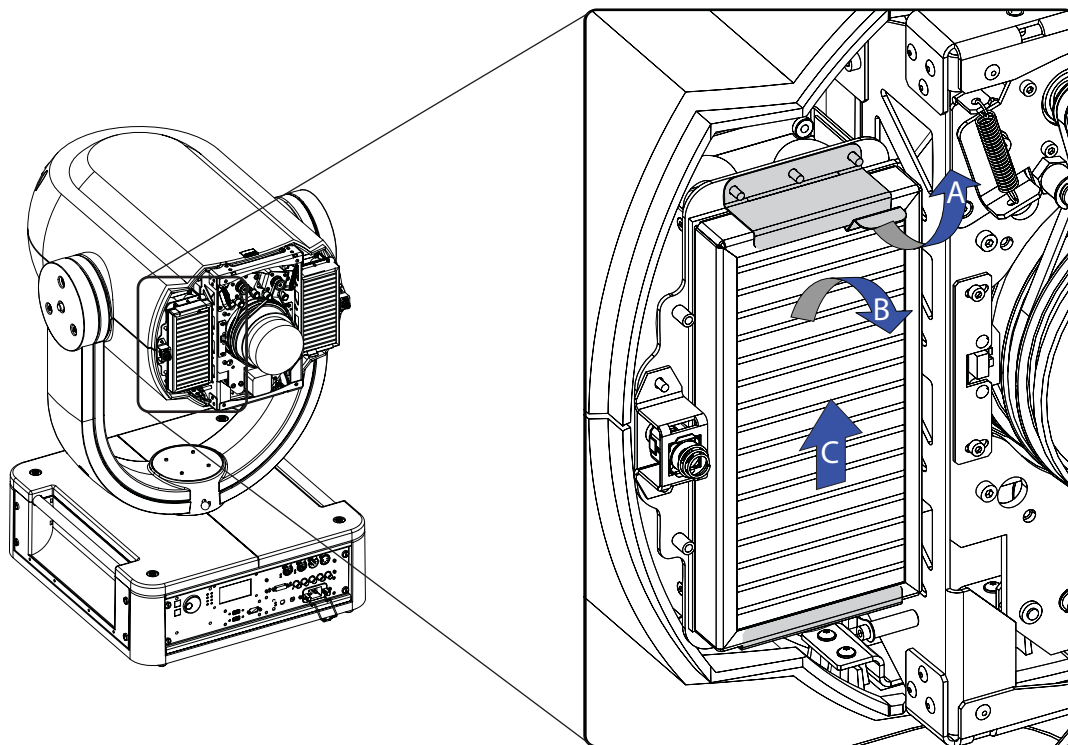


Image 13-14
Front filter replacement

4. Insert a new HEPA filter by pulling the spring clamp away and insert the filter into its position. Point the arrow on the side of the filter to inside of the head. Release the spring clamp.
5. Reinstall the front cover.

13.7 Replacement of the dust filter at the inside of the head

Necessary parts

HEPA filter

How to replace

1. Unplug the power cord from the wall outlet.
2. Open the top cover on the lamp units side, see "Opening the top cover on the lamp units side", page 74.
3. Pull out the HEPA filter.

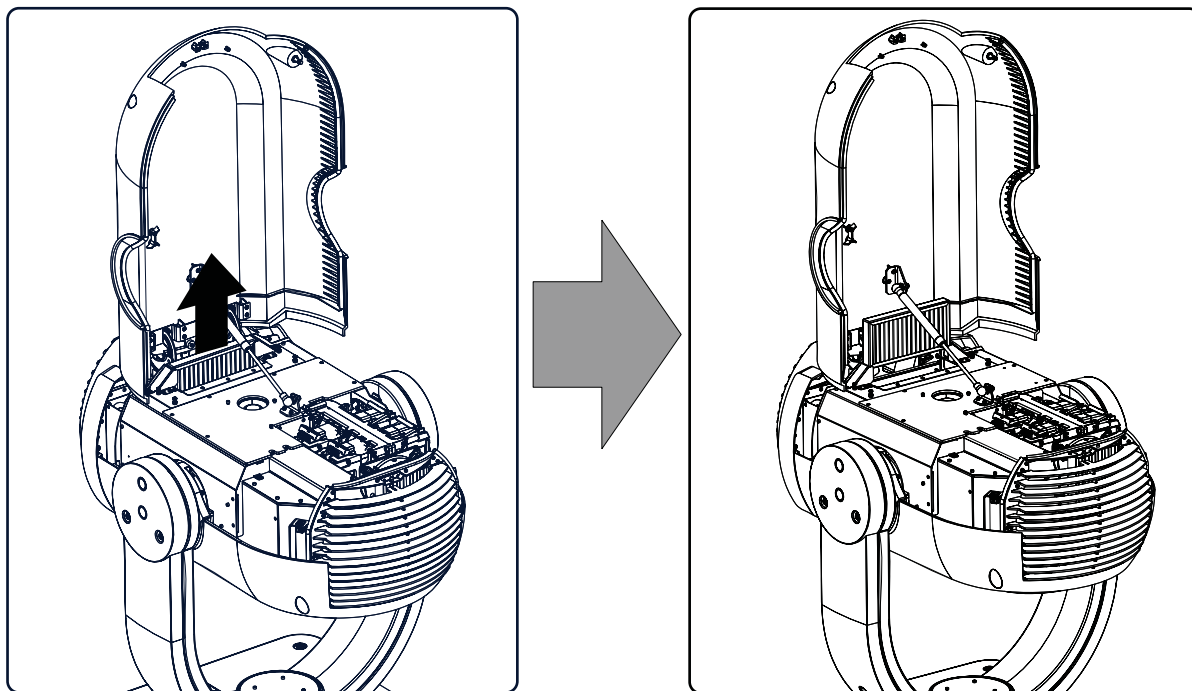


Image 13-15

4. Insert a new filter. Point the arrow on the side of the filter to inside of the head.

13.8 Replacement of the dust filter in the base

Necessary tools

Flat screwdriver

Necessary parts

New HEPA filter

How to replace

1. Loosen the 4 captive screws.

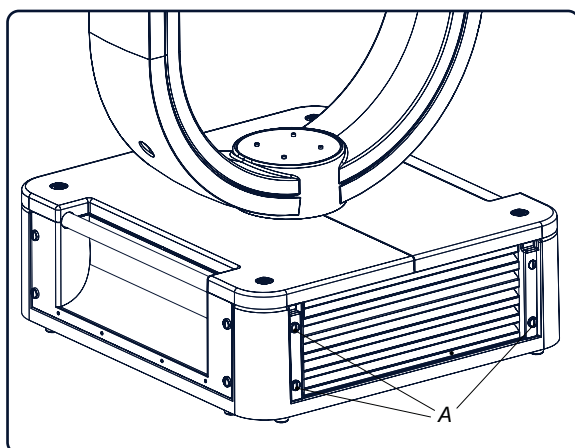


Image 13-16
Captive screws

2. Take off the side panel.

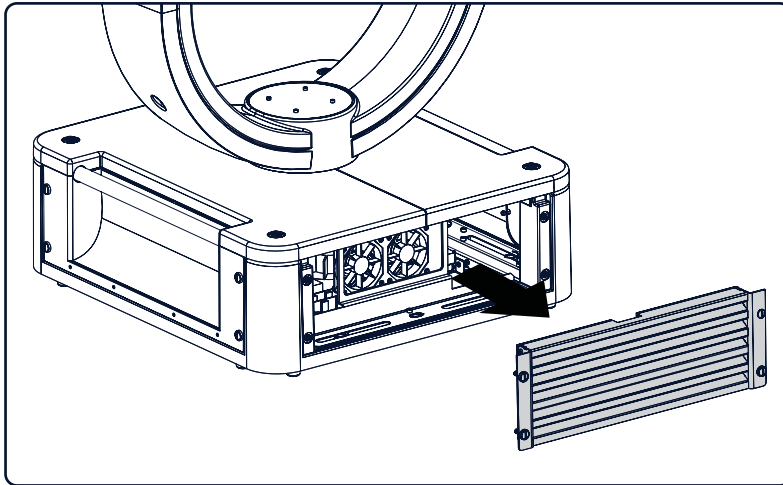


Image 13-17

The filter is mounted at the back side of this side panel.

3. Remove the HEPA filter on the side panel by pulling the spring clamp (A) away from the filter and then pivot the filter a little (B) and take it out (C).

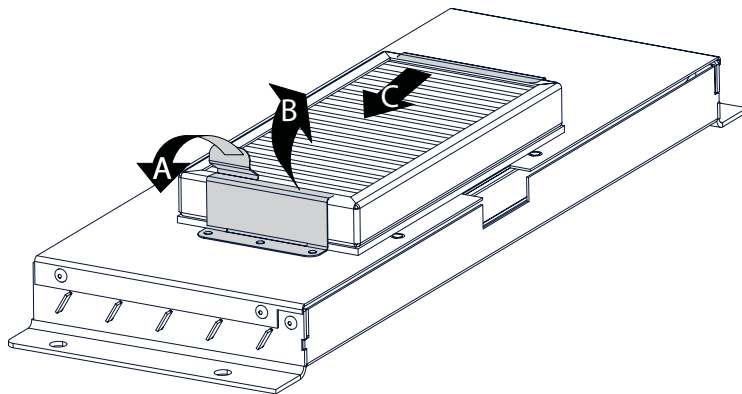


Image 13-18

4. Insert a new HEPA filter by pulling the spring clamp away and insert the filter into its position. Point the arrow on the side of the filter to outside of the plate. Release the spring clamp.
5. Reinstall the side panel of the base.

13.9 Removal of a lamp unit



WARNING: This procedure may only be performed by qualified technical service personnel.



CAUTION: Never attempt to disassemble the lamp from its housing or to dispose of it. Due to its high internal pressure, the lamp may explode in either hot or cold states if improperly handled. For recycling guidelines, see "Recycling guidelines", page 6.

About the lamps

The device head contains 4 lamps, each of them in a separate lamp house. Each lamp can be individually replaced by a spare lamp. Each lamp position has a number. That number is also used in the software to identify the parameters of the corresponding lamp.

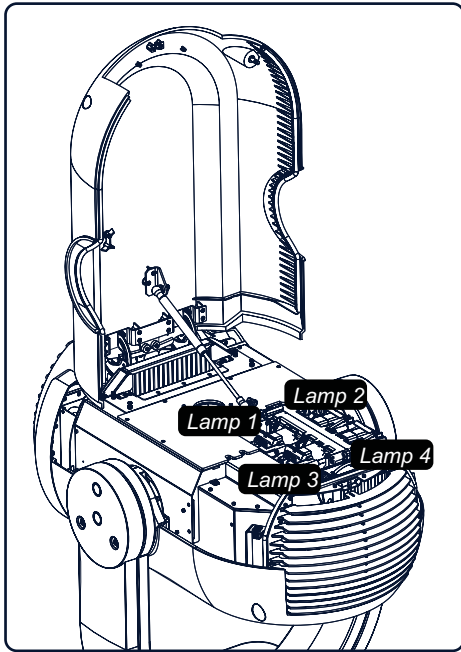


Image 13-19
Lamp position

When servicing a device with exploded lamp

Keep the following warning in mind when servicing a device with exploded lamp.

Mercury Vapor Warnings: The lamp used in the device contains mercury. In case of a lamp rupture, explosion there will be a mercury vapor emission. In order to minimize the potential risk of inhaling mercury vapors:

- Ensure the projector is installed only in ventilated rooms.
- Replace the lamp module before the end of its operational life.
- Promptly ventilate the room after a lamp rupture, explosion has occurred, evacuate the room (particularly in case of a pregnant woman).
- Seek medical attention if unusual health conditions occur after a lamp rupture, explosion, such as headache, fatigue, shortness of breath, chest-tightening coughing or nausea.

Necessary tools

No tools.

How to remove a lamp

1. Unplug the power cord from the wall outlet.
2. Open the top cover on the lamp units side, see "Opening the top cover on the lamp units side", page 74.
3. Unplug the cable of the lamp which must be removed.

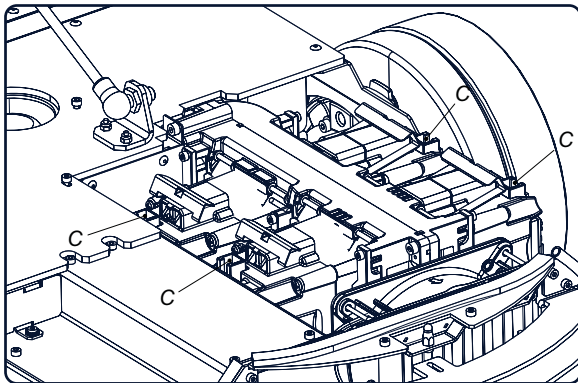


Image 13-20
Lamp cables, connection

4. Pull up the fixation handle and rotate it fully upwards.

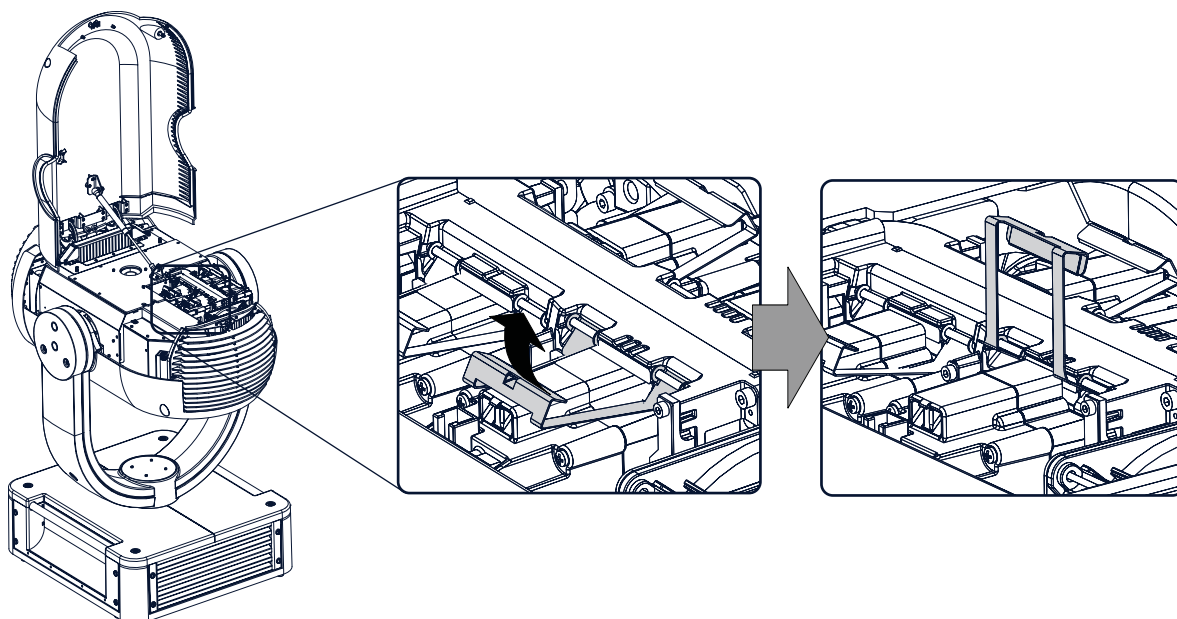


Image 13-21

5. Clasp the lamp and pull upwards.

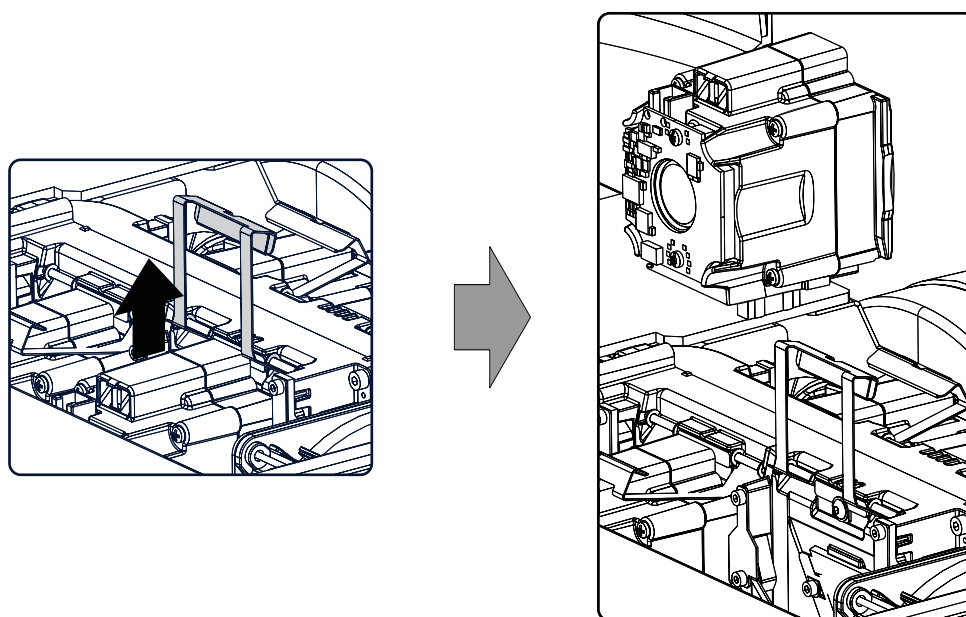


Image 13-22



For recycling guidelines of the lamp, see "Recycling guidelines", page 6.

13.10 Mounting a new lamp unit

About the lamp unit

All four lamp units are equal. A spare lamp can be inserted in any position without problems.



WARNING: This procedure may only be performed by qualified technical service personnel.



CAUTION: Never attempt to disassemble the lamp from its housing or to dispose of it. Due to its high internal pressure, the lamp may explode in either hot or cold states if improperly handled. For recycling guidelines, see "Recycling guidelines", page 6.



CAUTION: Never touch the reflector or the lamp bulb with your fingers. That will reduce the lifetime of the lamp.

Never touch the UV filter when a lamp is removed.

Necessary tools

No tools.

How to insert a lamp unit

1. Insert the lamp vertically into the housing, with the front of the lamp facing the middle of the head. Insert the lamp completely.

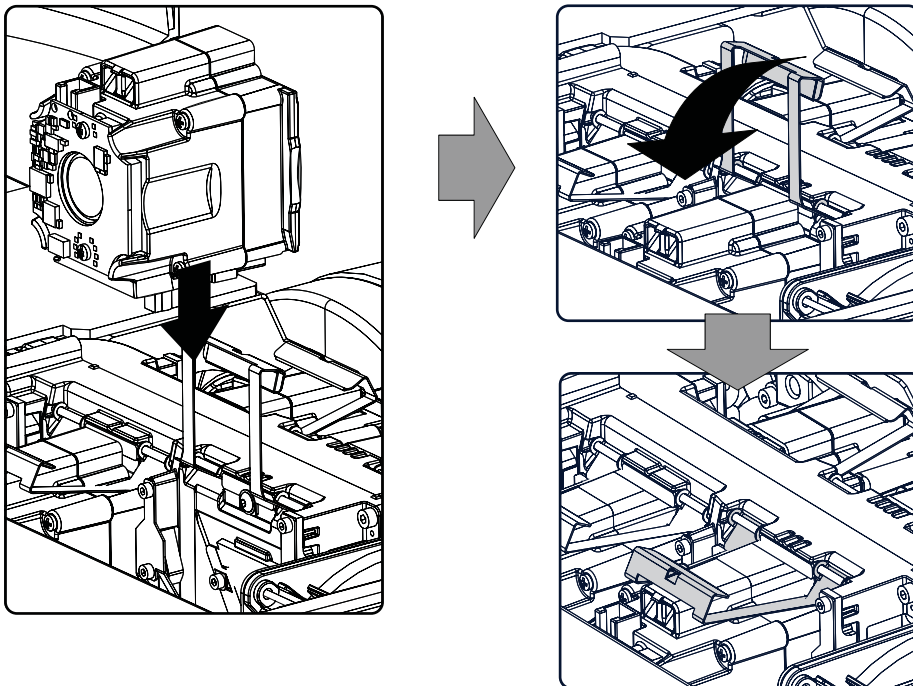


Image 13-23
Mounting a lamp

2. Rotate the fixation handle and close it. Push until it clicks.
3. Insert the cable connector into the lamp unit socket.



Starting up the lamps is only possible if all lamps are correctly mounted in the projector head.

13.11 Top-up the reservoir with cooling liquid

Access to the reservoir

1. Unplug the device from the power outlet.
2. Standing at the tilt lock side, turn the head horizontally until the lens is pointing to the left.

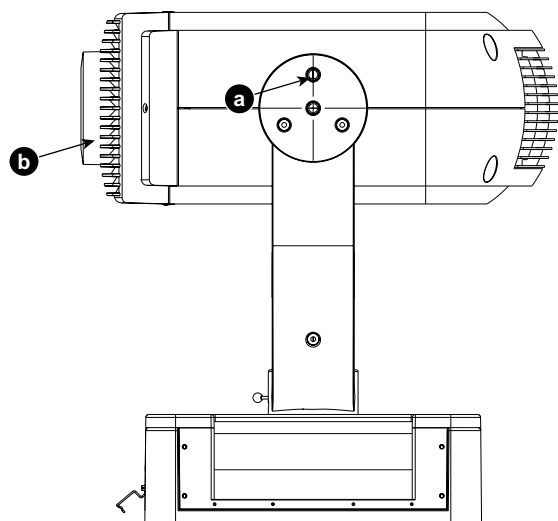


Image 13-24
Locking head

- a Locking button
- b Lens side

3. Loosen both captive screws.

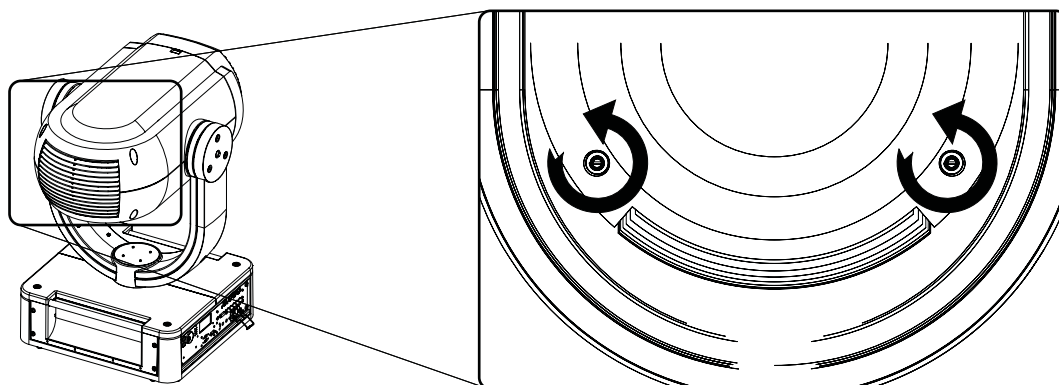


Image 13-25
Captive screws top cover

4. Gently lift up the top cover and press on the indicated part until the arm of the cover is fixed.

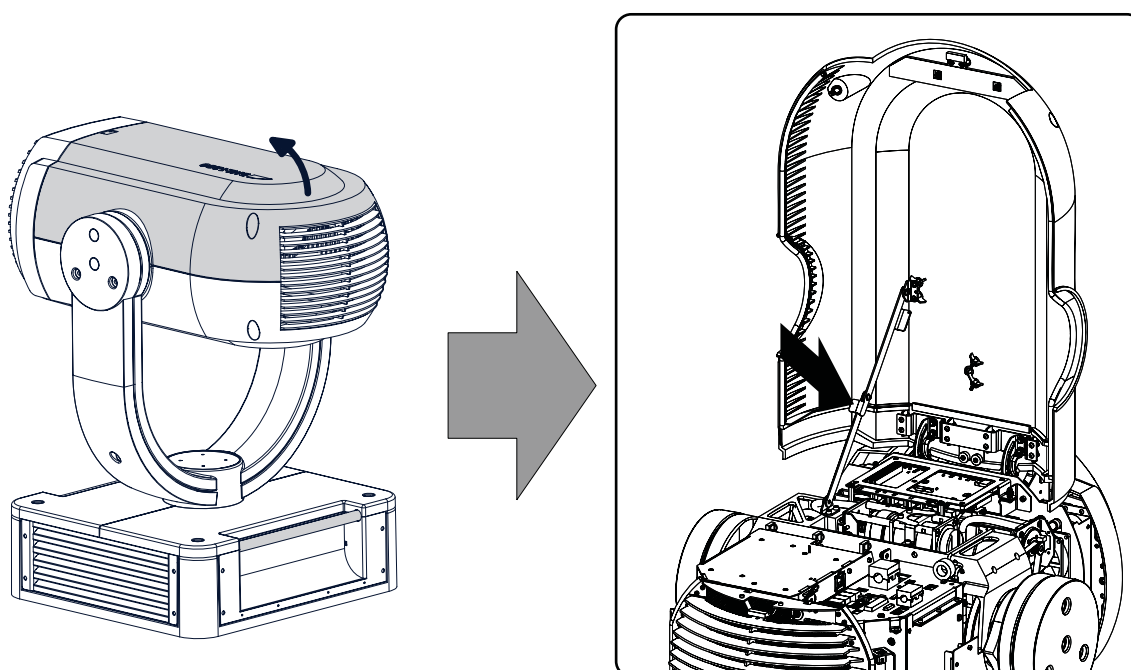


Image 13-26

The software of the projector blocks any movement.

Top-up procedure

1. Remove both reservoir holder screws and take off the reservoir holder.



Image 13-27
Reservoir holder

2. Turn the bolt to release the pressure (1). Turn until the white indication line is in the *Open* area (membrane is at the bottom of the reservoir) or until you feel too much resistance.



Image 13-28
Release pressure

3. If you feel too much resistance, rotate the reservoir until it is in a vertical position.



Image 13-29
Reservoir up

Note: Be careful not to kink the tubing. If necessary, remove the cable tie around the tubing and pull on the tubes while rotating the reservoir (2 on image 13-28).

4. Turn off the main lid on top of the reservoir (A).


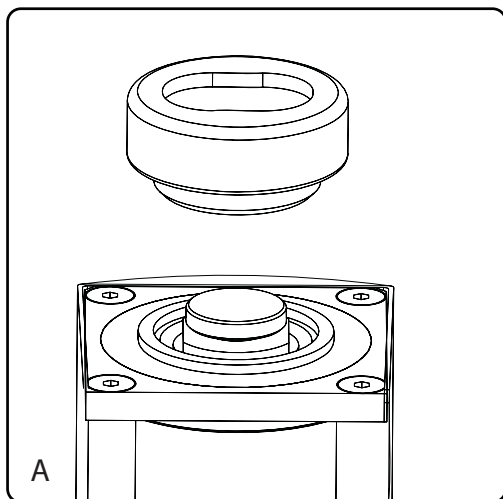


Image 13-30
Open reservoir

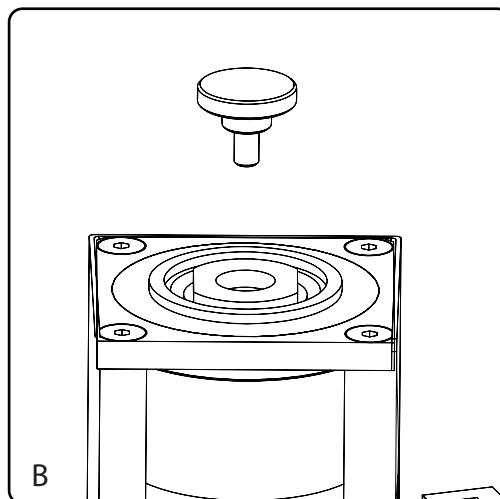

5. Loosen the bleed lid a little so that air can enter and close the bleed lid again. Turn the reservoir again in its horizontal position.
6. Turn on the bolt so that the white indication line is in the *Open* area (membrane is at the bottom of the reservoir).
7. Rotate the reservoir until it is in a vertical position.
Note: *Be careful not to kink the tubing. If necessary, remove the cable tie around the tubing and pull on the tubes while rotating the reservoir.*
8. Turn the bleed lid a little and take it out (B)
9. Turn out the third lid using the back of the main lid.


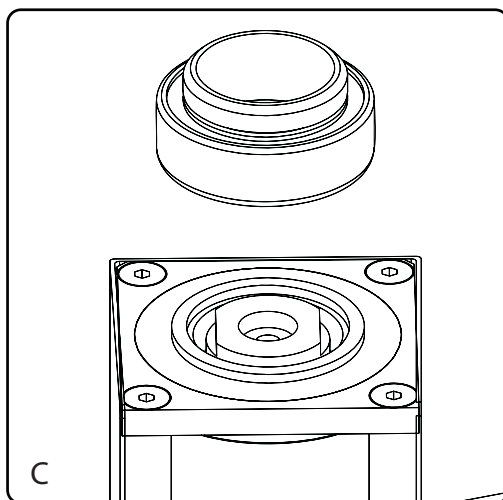


Image 13-31
Remove third lid

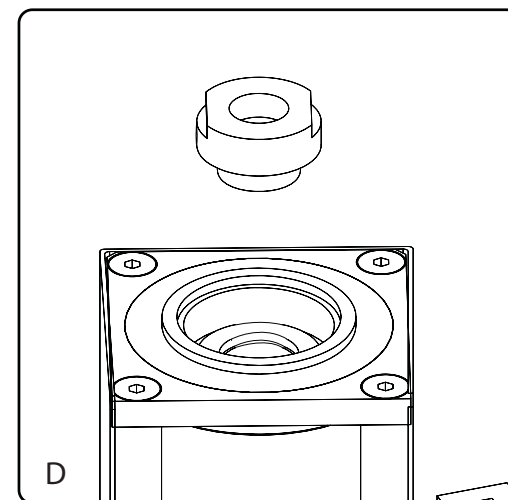

10. Top-up the reservoir with cooling liquid until the level is somewhat higher than the hole in the reservoir.

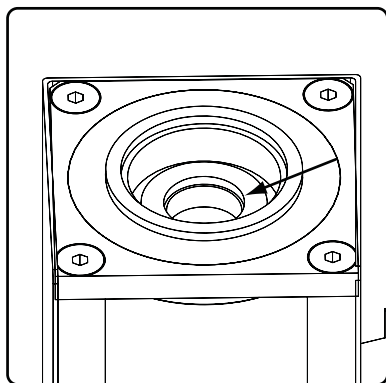


Image 13-32
Top-up reservoir

13. Servicing

11. Close the third lid again using the back of the main lid. Use a cloth to dab the residue of cooling liquid.

Note: *Make sure that no cooling liquid is spilled in the projector.*

12. Turn in the bleed lid.

13. Close the main lid.

14. Rotate the reservoir back on its horizontal position.

15. Pressurize the circuit by turning the bolt to the left until there is 2 cm free thread between the bolt and the bottom of the reservoir (the white indication line should be in the good area).

16. Mount the reservoir holder and turn in both screws.

17. Close the projector cover.

A. DMX CHART

A.1 DMX chart, Digital moving luminiere

Overview

Channel	Function	Type	Value	Default	Action
1	Pan coarse	x	0 - 255	128	Left → right movement (rotation of yoke)
2	Pan fine	x	0 - 255	0	
3	Tilt coarse	x	0 - 255	128	Forward movement (rotation of head)
4	Tilt fine	x	0 - 255	0	
5	Intensity	x	0 - 255	0	Adjust the light output between 0 and 100%
6	Optical zoom	x	0 - 255	128	From wide to narrow beam
7	Optical focus	x	0 - 255	128	Adjust focus from near to far
8	Shutter / strobe		0 - 15		Closed
			16 - 31	16	Open
			32 - 47		Strobe, from slow to fast
			48 - 239		For future expansions
			240 - 255		Open
9	Cyan	x	0 - 255	0	Open → full cyan
10	Magenta	x	0 - 255	0	Open → full magenta
11	Yellow	x	0 - 255	0	Open → full yellow
12	CTO	x	0 - 255	0	Open → full CTO
13	Mode select		0 - 31	0	Light mode
			32 - 63		Video mode circular
			64 - 95		Video mode
			96 - 255		For future expansion
14	Iris		0 - 200		Open → close (1 cm remains open)
			201 - 255		Not used
15	Control channel		0 - 31	0	Disarmed
			32 - 47		Reset (start homing sequence)
			48 - 63		Homing without pan and tilt
			64 - 79		Homing, pan and tilt only
			80 - 95		Homing CMY only
			96 - 127		Lamp on
			128 - 159		Lamp off
			160 - 191		For future expansion
			192 - 223		EMP on/off
			224 - 255		For future expansion

A.2 DMX chart, Image

Overview

Channel	Function	Type	Value	Default	Action
16	Source select		0 - 31	0	No source selected
			32 - 63		RGBHV selected
			64 - 95		HD-SDI/SDI selected
			96 - 127		DVI selected
			128 - 159		Media player selected
			160 - 191		No source selected / for future expansion
			192 - 223		No source selected / for future expansion
			224 - 255		No source selected / for future expansion
17	Brightness		0 - 255	128	Adjust the brightness between 0 and 100 %
18	Contrast		0 - 255	128	Adjust the contrast between 0 and 100 %
19	Saturation		0 - 255	128	Adjust the saturation between 0 and 100 %
20	Orientation		0 - 31	0	Normal
			32 - 63		Mirror
			64 - 95		Flip
			96 - 127		Flip + Mirror
			128 - 255		For future expansion
21	Blanking left Coarse	x	0 - 255	0	Adjust the left blanking
22	Blanking left Fine	x	0 - 255	0	
23	Blanking right Coarse	x	0 - 255	0	Adjust the right blanking
24	Blanking right Fine	x	0 - 255	0	
25	Blanking top Coarse	x	0 - 255	0	Adjust the top blanking
26	Blanking top Fine	x	0 - 255	0	
27	Blanking bottom Coarse	x	0 - 255	0	Adjust the bottom blanking
28	Blanking bottom Fine	x	0 - 255	0	
29	Soft edge left	x	0 - 255	0	Adjust the soft edge left side
30	Soft edge right	x	0 - 255	0	Adjust the soft edge right side
31	Soft edge top	x	0 - 255	0	Adjust the soft edge top side
32	Soft edge bottom	x	0 - 255	0	Adjust the soft edge bottom side
33	Video function select		0 - 7	0	Disabled
			8 - 255		For future expansion
34	Video parameter Coarse		0 - 255	128	For future expansion
35	Video parameter Fine		0 - 255	128	

Channel	Function	Type	Value	Default	Action
36	Warping function select		0 - 7	0	Warp disabled
			8 - 15		Load warp file 1
			16 - 23		Load warp file 2
			24 - 31		Load warp file 3
			32 - 39		Load warp file 4
			40 - 47		Load warp file 5
			48 - 55		Load warp file 6
			56 - 63		Load warp file 7
			64 - 71		Load warp file 8
			72 - 79		Load warp file 9
			80 - 87		Load warp file 10
			88 - 95		Load warp file 11
			96 - 103		Load warp file 12
			104 - 111		Load warp file 13
			112 - 119		Load warp file 14
			120 - 127		Load warp file 15
			128 - 135		Load warp parameters
			136 - 247		For future expansion
			248 - 255		Warp enabled
37	Warping parameter Coarse		0 - 255	128	For future expansion
38	Warping parameter Fine		0 - 255	128	
39	For future expansion				
40	For future expansion				
41	For future expansion				
42	For future expansion				
43	For future expansion				
44	For future expansion				
45	For future expansion				
46	For future expansion				
47	For future expansion				
48	For future expansion				
49	For future expansion				
50	For future expansion				
51	For future expansion				

B. DIMENSIONS

Overview

- Dimensions of the DML-1200
- Dimensions flight case

B.1 Dimensions of the DML-1200

Dimensions

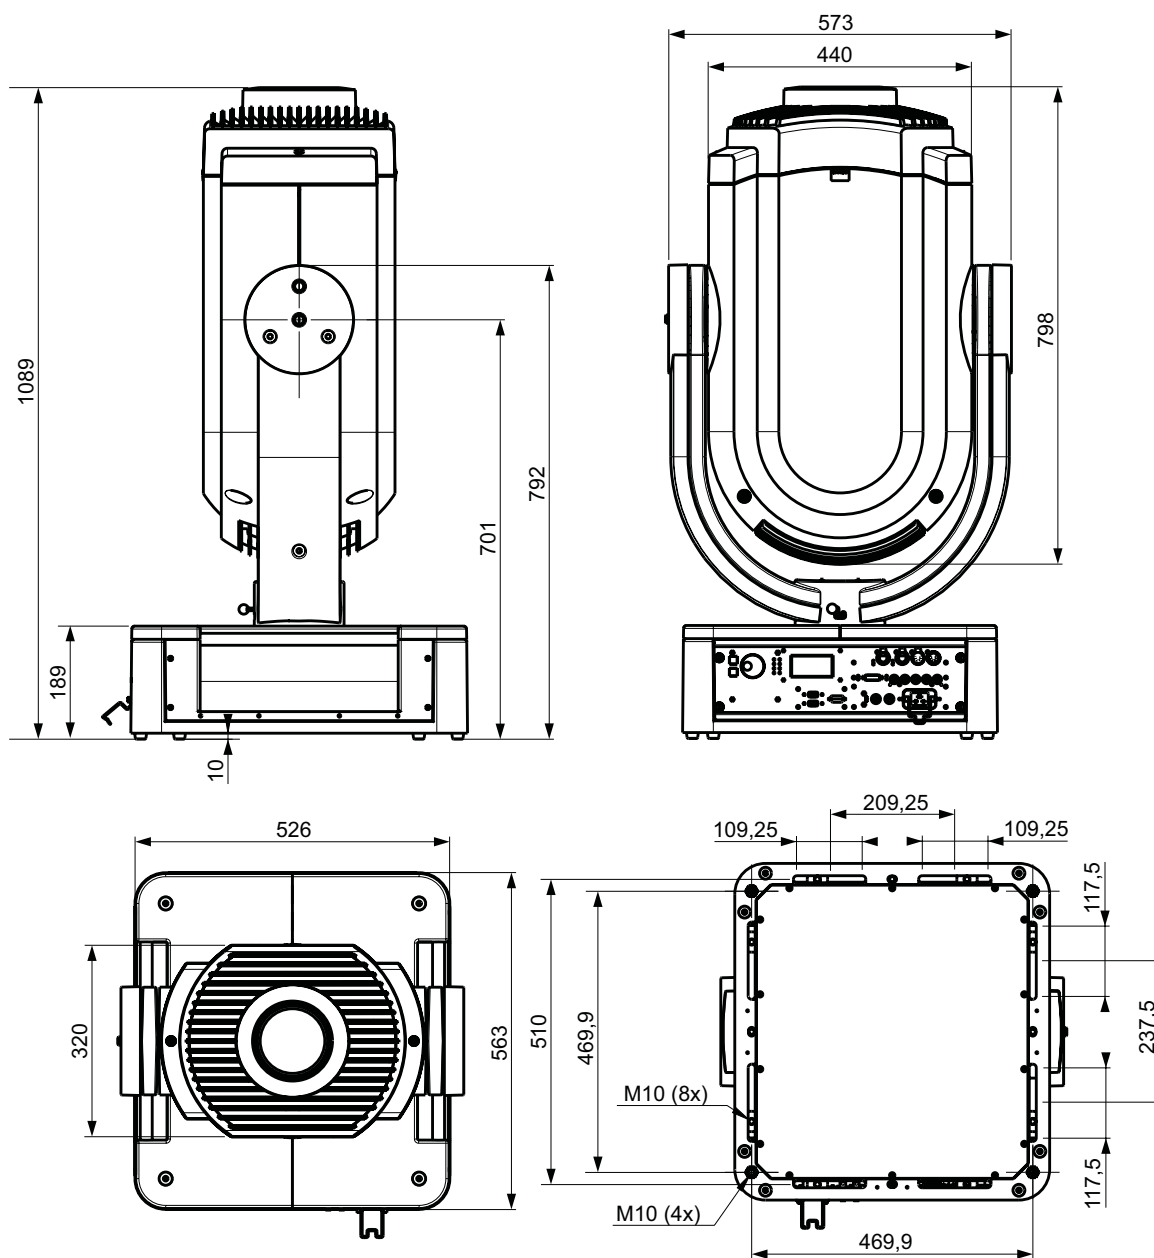


Image B-1
Dimensions given in millimeters

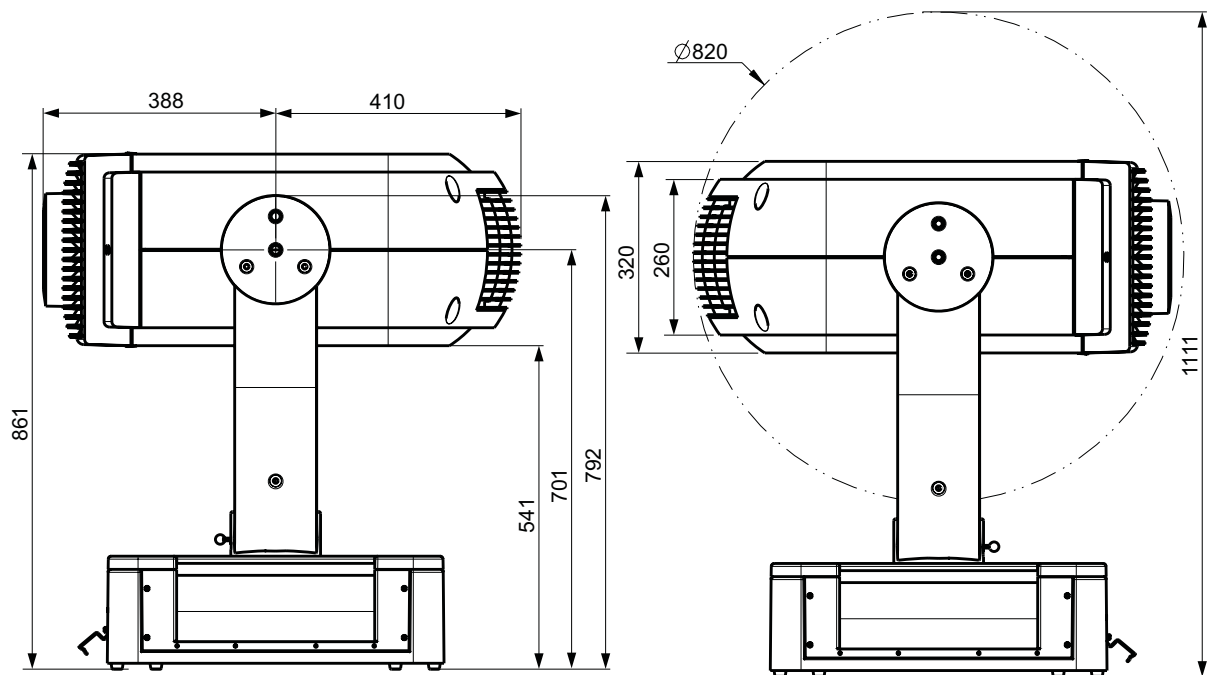


Image B-2
Dimensions, rotation

B.2 Dimensions flight case

Dimensions

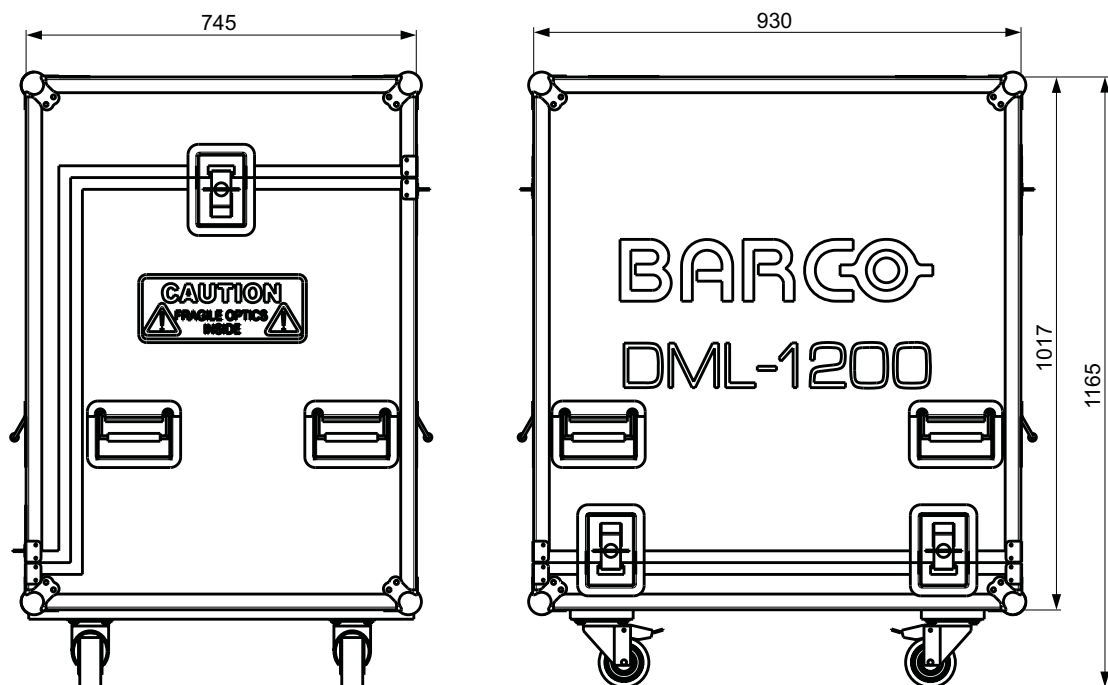


Image B-3
Dimensions in millimeters

C. TROUBLESHOOTING

C.1 Error list

Overview

Description	Type	Action
Fpga status not ok	Warning	Call qualified service technician
Fpga version not ok	Warning	Call qualified service technician
Warp status not ok	Warning	Call qualified service technician
Video fpga status not ok	Warning	Call qualified service technician
Video fpga version not ok	Warning	Call qualified service technician
Init ready	Info	No action
Lamp info status error	Warning	Call qualified service technician
Lamp x run time 2000 h	Error	Replace lamp with new one
Lamp x run time 1500 h	Warning	Indicated lamp reaches 1500 h or more, think about replacing the lamp before the projector cannot start up anymore.
Image load mode locked	Info	No action
Image load mode auto	Info	No action
Auto shutdown enabled	Info	No action
DMX media player on/off	Info	No action
Smps status error	Warning	Call qualified service technician
Fcb sets mode aftercool	Info	No action
Video fpga program OK	Info	No action
Video fpga program failed	Warning	Call qualified service technician
Ctrl fpga program OK	Info	No action
Ctrl fpga program failed	Warning	Call qualified service technician
Request mode normal	Info	No action
Request mode aftercool	Info	No action
Request mode standby	Info	No action
Fcb rs sets mode aftercool	Info	No action
Fcb rs disables formatter	Info	No action
Fcb undefined analog error	Warning	Call qualified service technician
Fcb undef. analog warning	Warning	Call qualified service technician
Fcb undef. digital error	Warning	Call qualified service technician
Fcb undef. digital warning	Warning	Call qualified service technician
Fcb undef. fan speed error	Warning	Call qualified service technician
Fcb undef. fan speed warning	Warning	Call qualified service technician
Frmt start failed	Warning	Call qualified service technician
Frmt start init failed	Warning	Software init error. Remove and apply power, retry to start. If problem persists, call a qualified service technician
Frmt power good failed	Warning	Remove and apply power, retry to start. If problem persists, call a qualified service technician
Frmt read data failed	Warning	No communication to the formatter. Call qualified service technician
Frmt color wheel failed	Warning	Color wheel does not spin or color wheel not phase locked. Retry to start. If problem persists, call a qualified service technician

Description	Type	Action
Frmt index delay failed	Warning	Retry to start If problem persists, call a qualified service technician
Frmt sequence failed	Warning	Retry to start If problem persists, call a qualified service technician
Frmt orientation failed	Warning	Retry to start If problem persists, call a qualified service technician
Frmt white peaking failed	Warning	Retry to start If problem persists, call a qualified service technician
DMD temp low (<10°C)	Warning	Turning on the lamp(s) will heat up the DMD
DMD temp low (≤10°C)	Error	Take measurements to increase the ambient temperature
DMD temp high	Warning/Error	Check if air slots are free Clean air filters Retry to start
Ambient temp high	Warning/Error	Take measurements to decrease the temperature
Cooling liquid temp high	Warning/Error	If problem persists, call a qualified service technician
Fan radiator A low	Warning/Error	If problem persists, call a qualified service technician
Fan radiator A high	Warning/Error	If problem persists, call a qualified service technician
Fan radiator B low	Warning/Error	If problem persists, call a qualified service technician
Fan radiator B high	Warning/Error	If problem persists, call a qualified service technician
Fan outlet A low	Warning/Error	If problem persists, call a qualified service technician
Fan outlet A high	Warning/Error	If problem persists, call a qualified service technician
Fan outlet B low	Warning/Error	If problem persists, call a qualified service technician
Fan outlet B high	Warning/Error	If problem persists, call a qualified service technician
Fan power supp A low	Warning/Error	If problem persists, call a qualified service technician
Fan power supp A high	Warning/Error	If problem persists, call a qualified service technician
Fan power supp B low	Warning/Error	If problem persists, call a qualified service technician
Fan power supp B high	Warning/Error	If problem persists, call a qualified service technician
Fan lps A low	Warning/Error	If problem persists, call a qualified service technician
Fan lps A high	Warning/Error	If problem persists, call a qualified service technician
Fan lps B low	Warning/Error	If problem persists, call a qualified service technician
Fan lps B high	Warning/Error	If problem persists, call a qualified service technician
Fan inlet A low	Warning/Error	If problem persists, call a qualified service technician
Fan inlet A high	Warning/Error	If problem persists, call a qualified service technician
Fan inlet B low	Warning/Error	If problem persists, call a qualified service technician
Fan inlet B high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp1 back low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp1 back high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp2 back low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp2 back high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp3 back low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp3 back high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp4 back low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp4 back high	Warning/Error	If problem persists, call a qualified service technician
Fan base speed low	Warning/Error	If problem persists, call a qualified service technician
Fan prism low	Warning/Error	If problem persists, call a qualified service technician
Fan prism high	Warning/Error	If problem persists, call a qualified service technician
Fan optics low	Warning/Error	If problem persists, call a qualified service technician

Description	Type	Action
Fan optics high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp1 front low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp1 front high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp2 front low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp2 front high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp3 front low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp3 front high	Warning/Error	If problem persists, call a qualified service technician
Fan lamp4 front low	Warning/Error	If problem persists, call a qualified service technician
Fan lamp4 front high	Warning/Error	If problem persists, call a qualified service technician
Pump speed low	Warning/Error	If problem persists, call a qualified service technician
Pump speed high	Warning/Error	If problem persists, call a qualified service technician
Smpls input range	Warning/Error	Check if the mains input voltage is within the specified range.
DMD temp open	Error	Call a qualified service technician
DMD temp short	Error	Call a qualified service technician
Ambient temp open	Error	Call a qualified service technician
Ambient temp short	Error	Call a qualified service technician
Tec temp open	Error	Call a qualified service technician
Tec temp short	Error	Call a qualified service technician
FCB I2C	Warning	If problem persists, call a qualified service technician
FCB parameters	Warning	If problem persists, call a qualified service technician
FCB monitoring	Warning	If problem persists, call a qualified service technician
Housing switch open	Warning/Error	Close housing completely. If problem persists, call a qualified service technician
Undefined	Warning/Error	If problem persists, call a qualified service technician
Restore factory defaults	Info	No action
Restart artnet failed	Error	Disconnect power and reconnect power again. Restart. If problem persists, call a qualified service technician

D. SPECIFICATIONS

D.1 Specifications of the DML-1200

Overview

AC power	200 - 240 V, 10 A, 50-60 Hz, input via 2m cable without connector
Blanking	horizontal & vertical, controlled over DMX
Color change time	0.3 second, or as timed by control console
Color Reproduction System	subtractive color mix (cyan, magenta, yellow) with dichroic filters
Color Temperature	native 6200°K - 3000°K with dichroic filters
Connections	5-pin XLR (in, through), 2x RJ-45 (1GB in, through), 2x USB and VGA out for media player control
Contrast ratio	min. 1,200:1 - average 1,400:1
Image generation	Single-chip DLP with 3x speed RGBW color wheel
Inputs	RGBHV - Component - HDSDI/SDI - DVI
Intensity control	Visually linear and full field operation (0-100%) combined digital mechanical
Lamp	4 x 300 W (High Pressure Mercury Lamps)
Lamp lifetime (typical)	1,500 hours
Lamp replacement	Click-in, no alignment needed
Lamp warranty	750 actual running hours (proportional refund)
Light Output	Video mode: 10,000 ANSI lumens Light mode: 12,000 field lumens
Media type	Any media type that is supported by the Hippotizer (media is converted to MPEG-2, I-frame only)
Motion range	Pan: 540° - Tilt: 270°
Motion speed	68° per second
Native image resolution	SXGA+ (1,400 x 1,050 pixels)
Noise Level	49 dB(A) (at +25°)
Number of image layers	Matte layer, layer1, layer2 (both A+B mixing), mask layer, master layer
Operating temperature	max. 40°
Operation mode selection	Video mode: Native (rectangular) or circular Light mode: Circular
Optical effects	Effects per media layer, effects on the master layer
Output image manipulation	H & V keystone, rotation (+15%), pincushion/barrel distortion, extensive freeform warping (max. 825 points)
Playback Device	Based on Hippotizer V3 technology - Developed by Green Hippo Ltd.
Position accuracy and repeatability	0.375° on encoders (error correction); <0.1° in normal movement
Power consumption	max. 1832 W
Protocol	DMX512 / Artnet
Scenergics	horizontal & vertical edge blending, controlled over DMX
Video input synchronisation	genlock through additional BNC connector
Weight	75 kg (fixture only)
Zoom range	defocused: 11°-40° - focused: 12°-38°

E. ORDER INFO

E.1 Spare part order info

Order info

This list contains only customer serviceable spare parts.

Order info	Description
R98610206	Dust filter kit, 6 pack
R986102012	Dust filter kit, 12 pack
R9861030	Lamp kit, single lamp
R9861040	Lamp kit, two lamps
R9861050	Lamp kit, four lamps

GLOSSARY

DMX

DMX-512 Lighting protocol over RS-485 interface. Carries information of 512 channels from a lighting controller to lighting devices. Standardized by USITT.

HEPA

High Efficiency Particulate Absorbing

INDEX

A

- Adjustment mode 27
 - Navigation 27
 - Start up 27
- Air inlet 12
- Air outlet 12

B

- Base unit 79
 - Remove 79
 - Top cover 79
- Top cover 79
 - Remove 79

C

- cleaning 67
 - lens 67
- Cleaning 67
 - Exterior 67
- Communication 22–23
 - Ethernet 22
 - USB port 23
- Connections 19–21, 24
 - Communication 21
 - Inputs 20
 - Linking 24
 - Power 19
- Control 39–47
 - Auto shutdown 45
 - Demo mode 41
 - DMX address 42
 - DMX data 42
 - DMX priority 47
 - DMX universe 43
 - LCD contrast 44
 - Media player 43
 - Network 45
 - Overview flow 39
 - Pan encoder 44
 - Standby 40
 - Startup 40
 - Status LEDs 46
 - Tilt encoder 44
- Cooling liquid 67, 86
 - Level check 67
 - Top-up reservoir 86
- Cooling liquid circuit warning 4

D

- Dimensions 95–96
 - DML-1200 95
 - Flight case 96
- DMX chart 91–92
 - Digital moving luminaire 91
 - Image 92
- Dust filter 80–82
 - Base 82
 - Replacement 82
 - Front side 80
 - Replacement 80
 - Inside side 81
 - Replacement 81

E

- Error list 97
- Ethernet 22

F

- Front cover 73
 - Removal 73

G

- General 9
- Guidelines 6
 - Recycling 6
 - Lamp 6

H

- High altitude mode 36
- Housing shell 74, 76
 - LPS box side 76
 - Opening 76
- Opening 74

I

- Image control via DMX 63–65
 - Blanking 64
 - Brightness 63
 - Contrast 63
 - Introduction 63
 - Orientation 63
 - Saturation 63
 - Soft edge 65
 - Source selection 63
 - Warping 65
- Input 29–32
 - Aspect ratio 31
 - Auto image alignment 29
 - Image load mode 30
 - No input signal 32
 - No source selected 32
 - Reset to factory presets 30
 - Selection 29
- Installation 9, 13, 15
 - Mounting upright 15
 - Pan locking 13
 - Requirements 9
 - Tilt locking 13
 - Truss mounting 15
- Installation requirements 9
 - Ambient temperature 9
 - Clean air 9
 - Humidity 9
 - Projector weight 9

L

- Lamp 35–38
 - High altitude mode 36
 - Identification 35
 - Lamp mode 37
 - Lamp power 38
 - Overview 35
 - Overview run time 36
- Lamp mode 37
- Lamp power 38
- Lamp unit 83, 85
 - Mount 85
 - Removal 83
- Laser Beams 5
- lens 67
 - cleaning 67

M

Maintenance 67
Mercury vapor warnings 4
Mount 85
 Lamp 85
Moving light control via DMX 59–61
 Color temperature origin 60
 Control channel 61
 CTO 60
 Cyan - Magenta - Yellow 60
 Intensity 59
 Iris 61
 Mode selection 60
 Optical focus 59
 Optical zoom 59
 Pan 59
 Shutter - Strobe 59
 Tilt 59

O

Order info 103
 Spare parts 103

P

Prevent 3–5
 Battery explosion 5
 Device damage 5
 Electrical shock 3
 Fire hazard 5
 Personal injury 4

R

Recycling 6
Remove 83
 Lamp 83
Replacement 80–82
 Dust filter 80–82
 Base 82
 Front side 80
 Inside side 81
Restricted access location 4

S

Safety 3–6
 Cooling liquid circuit 4
 Device damage 5
 Electrical shock 3
 Fire hazard 5
 Flight cases 6
 General 3
 Important instructions 3
 Mercury vapor warnings 4
 Personal injury 4
 Replacement parts 6
 Restricted access location 4

 Servicing 6
Safety cable 69
 Check 69
Service 49–57
 Calibration 55–57
 Aperture calibration 56
 Device calibration 57
 Index delay 55
 Diagnosis 50
 Version table 50
 Diagnostics 51–53
 Device status 53
 Error logging 53
 Fan speeds 52
 Temperatures 51
 Voltages 51
 Identification 49
 IP address 49
 Package 49
 Run time 49
 Serial number 49
 IP address 49
 Overview flow 49
 Package 49
 Run time 49
 Serial number 49
 Service patterns 54
Servicing 73
Specifications 101
 DML-1200 101

T

Top cover 74, 76
 LPS box side 76
 Opening 76
 Opening 74
Troubleshooting 97
 Error list 97

U

Unpacking 9
 Base stand operation 9
USB port 23

W

Warning 4
 Restricted access location 4
Warnings 4
 Cooling liquid circuit 4
 Mercury vapor warnings 4

Y

Yoke cover 77
 Remove 77

Revision Sheet

To:

► **Barco nv Media & Entertainment Division/Documentation**
Noordlaan 5, B-8520 Kuurne
Phone: +32 56.36.89.70, Fax: +32 56.36.88.24
E-mail: service.mne@barco.com, Web: www.barcocom

From: _____

Date: _____

Please correct the following points in this documentation (**R59770208/04**):

page	wrong	correct